


LANDSCAPE MATERIALS

- Garden Bed Preparation
- rip subgrade to 300mm and mix into existing topsoil the following soil additives: 2 to 1 existing soil to Garden Bed Mix
 - add soil moisture retention water crystals to mixed soilmix
 - add slow release fertiliser to mixed soilmix
 - install 75mm depth recycled woodchip mulch
- Planting
- plant into individual holes and backfill ensuring that trunk base is not covered by mulch
 - plant during normal seasonal conditions
 - do not plant during strong winds
 - immediately following planting water-in all plants
- Watering
- hand water all planting works at regular intervals during maintenance
- Maintenance
- 12 months following practical completion


PLANT SCHEDULE

Qty	Pot Size	Botanical Name
shrubs		
70	200mm	Leptospermum polygalium 'pacific beauty'
groundcovers		
725	140mm	Dianella 'Little Jess'
1870	140mm	Lomandra 'Tanika'


SITE WORKS

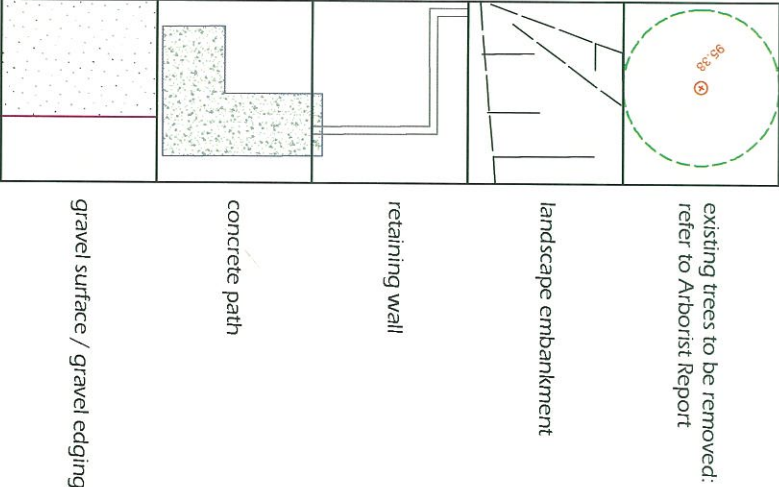


PLANTING SCHEME

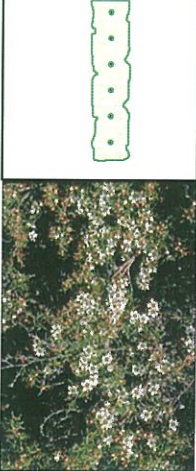


low indigenous shrub to 1m x 1m
(Dwarf Tea Tree) 70 x Leptospermum polygalium 'pacific beauty'

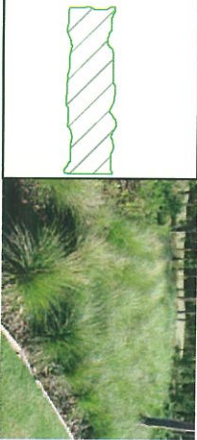

low indigenous tall grass to 0.4 x spreading
(Dwarf Lomandra) 1870 x Lomandra 'Tanika' (3 per m2)

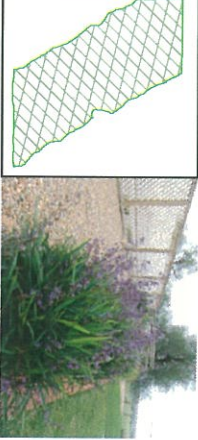

low indigenous tall grass to 0.6 x spreading
(Dwarf Dianella) 725 x Dianella 'Little Jess' (3 per m2)

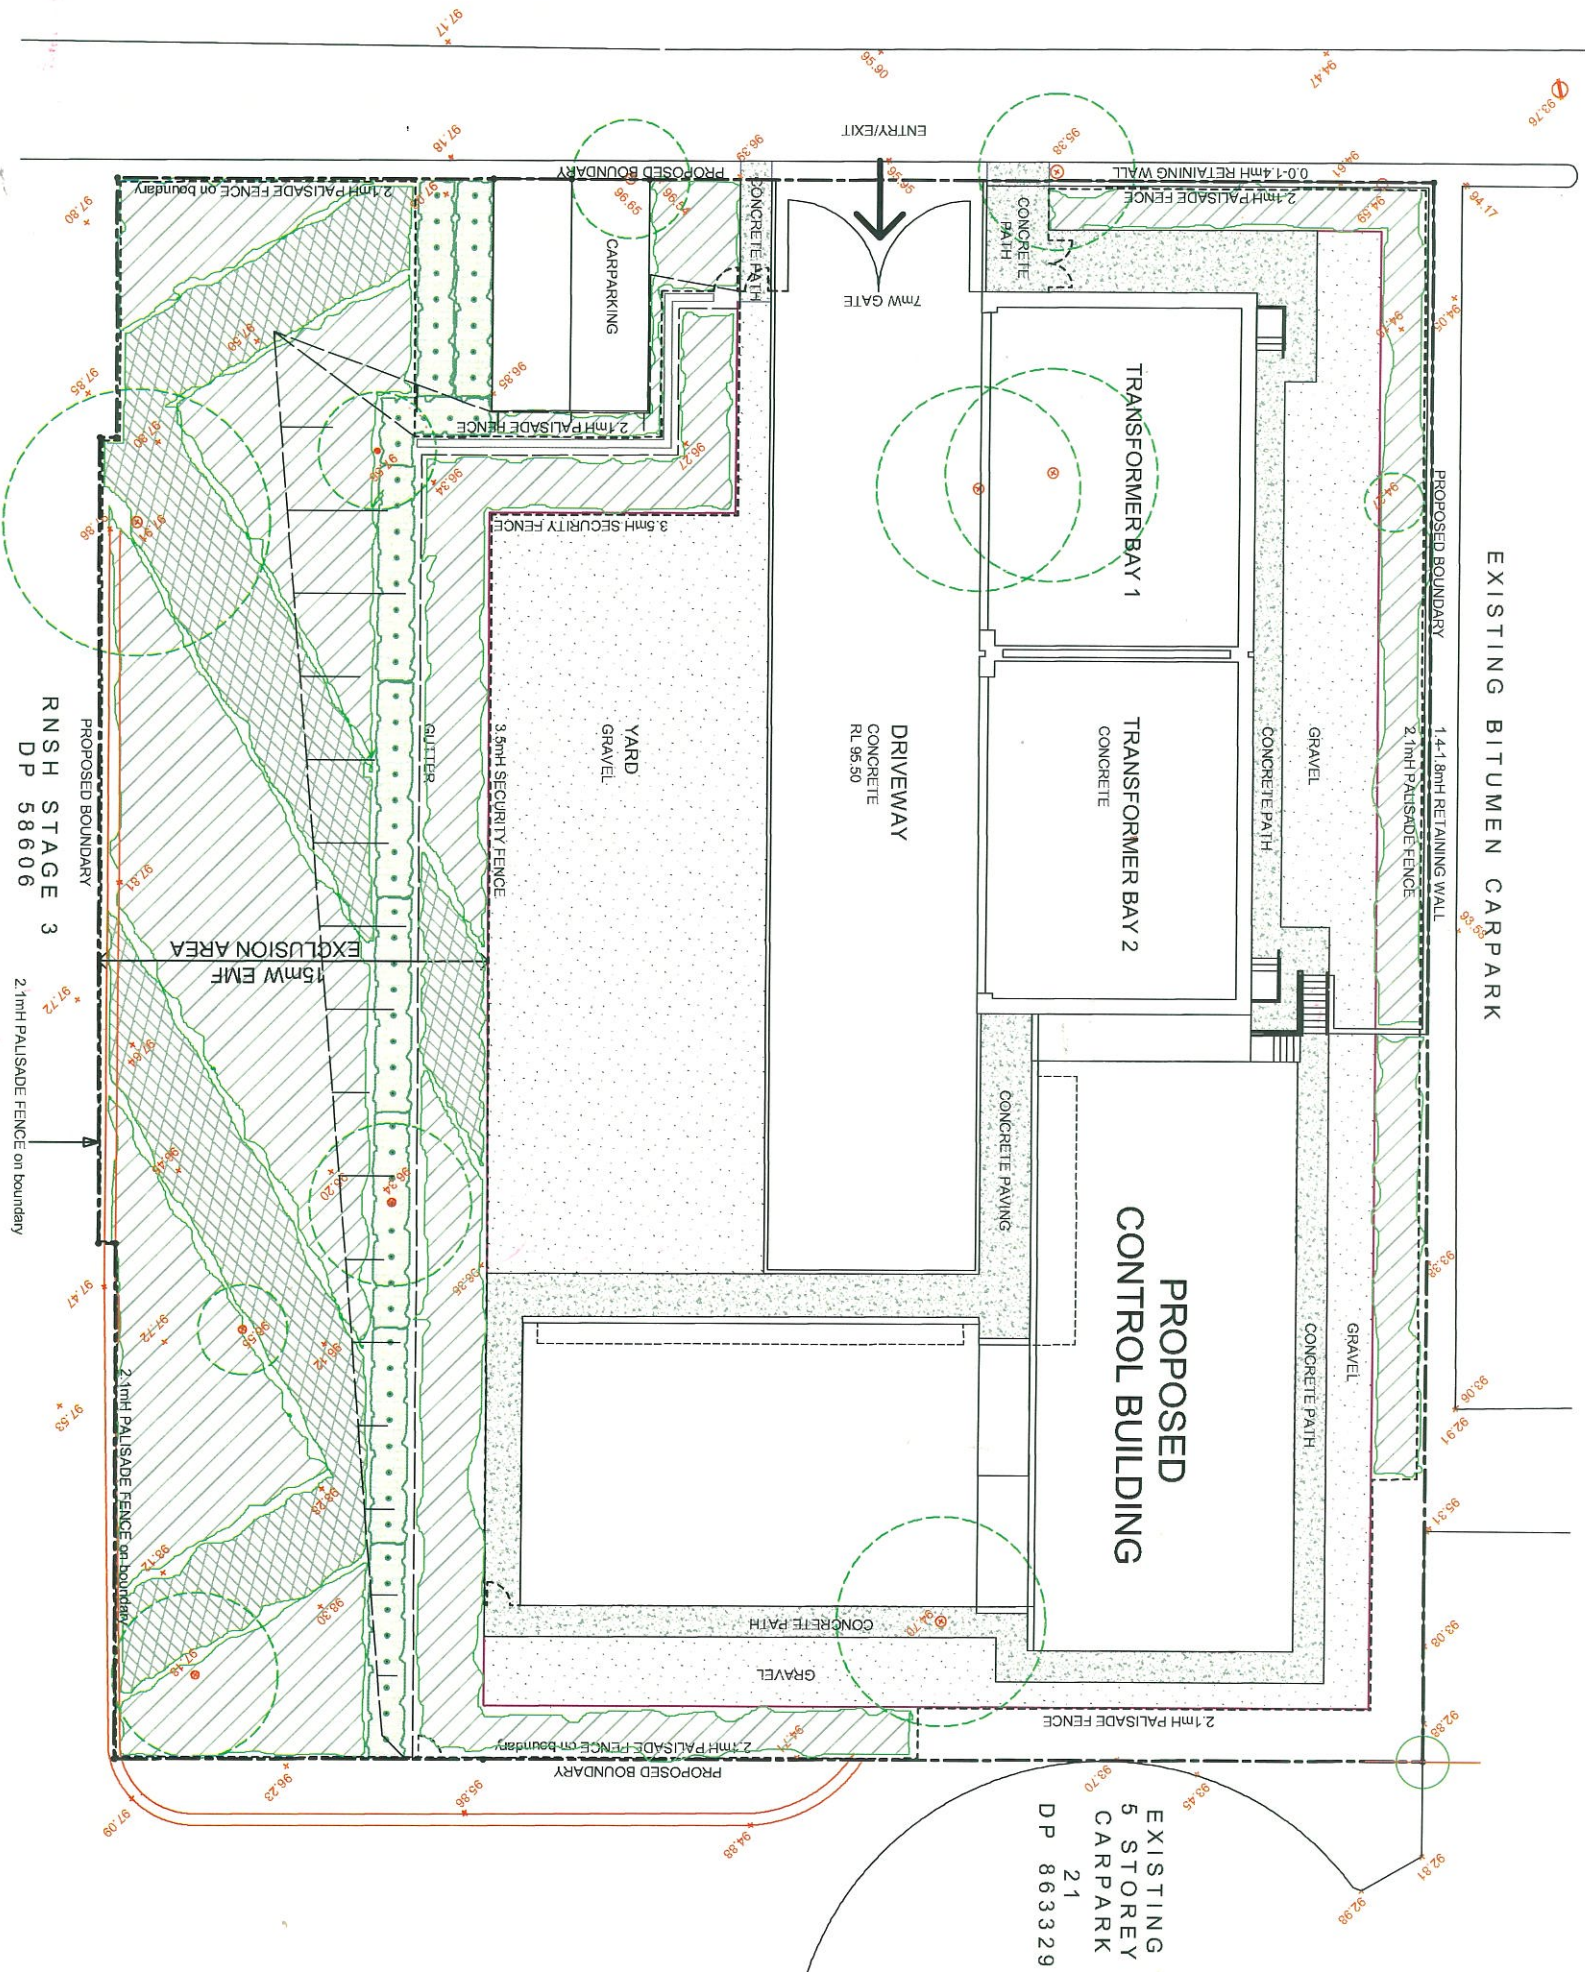

LANDSCAPE PLAN

for development application

Royal North Shore Hospital
132/11KV ZONE SUBSTATION
Westbourne Street, Gore Hill NSW

tramonte jensen

Office: Level 1, 722 Pittwater Road
Brookvale NSW Australia 2100
Postal: PO Box 296 Brookvale 2100
Telephone: (02) 9938 6100
Facsimile: (02) 9938 1711
Web: www.tramontejensen.com.au
registered landscape architects

Drawing Number
Scale
1:100 @ A1 page size

551.L01

Date
Checked
Issue
27.05.2008
Joseph Tramonte
BLANK AULA RLA
B