




## TIPPING PROCEDURE STORMWATER / GROUNDWATER

Classification report required prior to tipping.

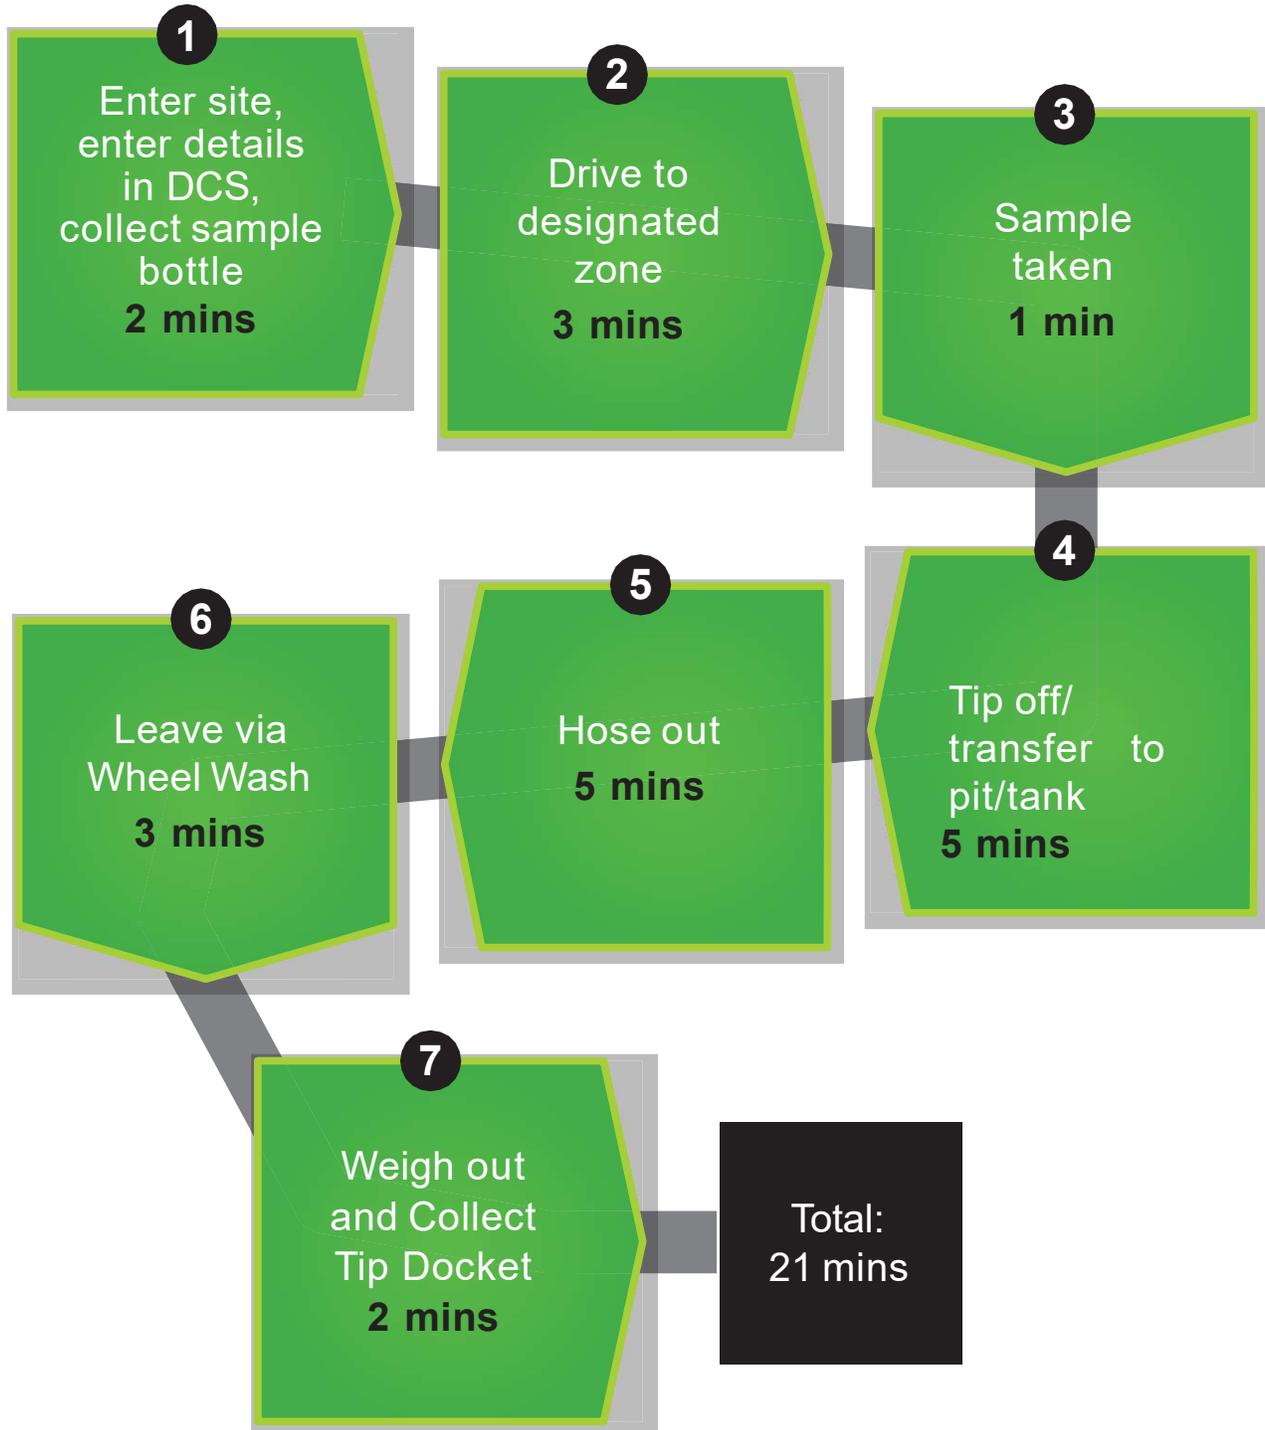


This is based on 10 tonne Vac Truck loads for Liquids.  
20 Tonne Tankers will take approximately 26-27 minutes.



# TIPPING PROCEDURE

## DRILL MUD / NDD / CEMENT SLURRY


Classification report required prior to tipping.

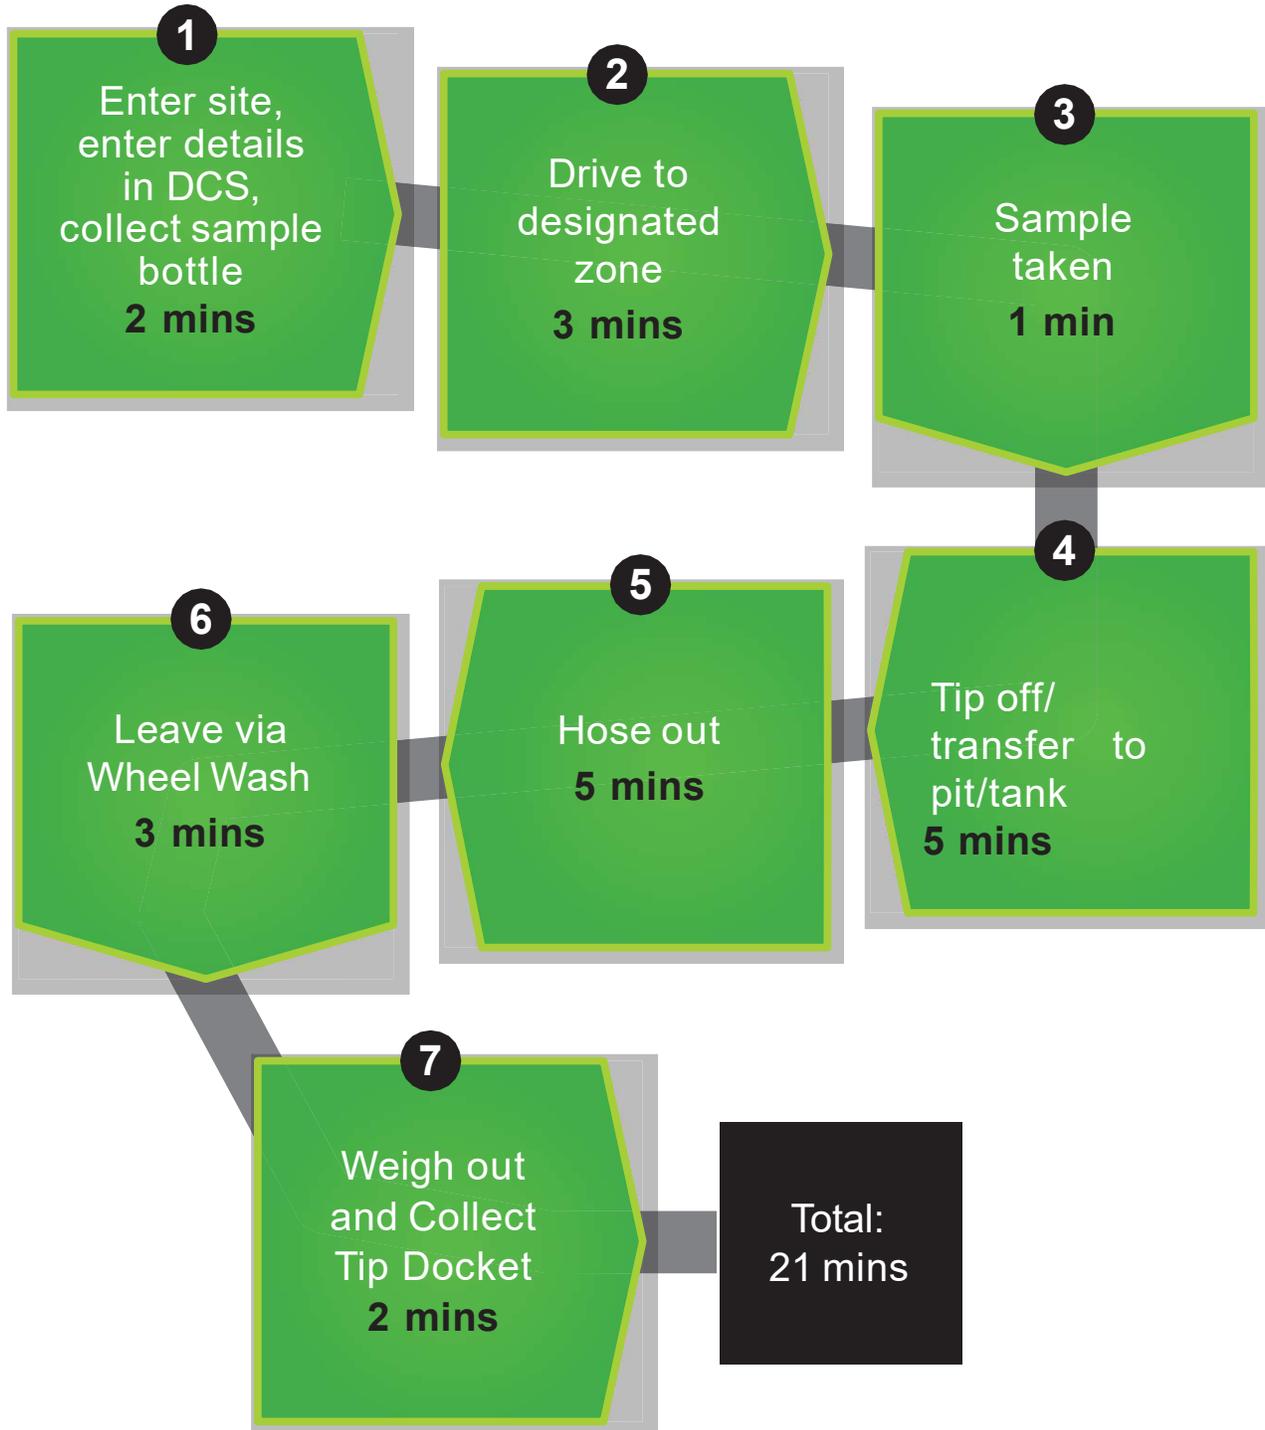

This is based on 10 tonne Vac Truck loads for Liquids.  
20 Tonne Tankers will take approximately 26-27 minutes.



## TIPPING PROCEDURE CEMENT AGITATOR TRUCKS

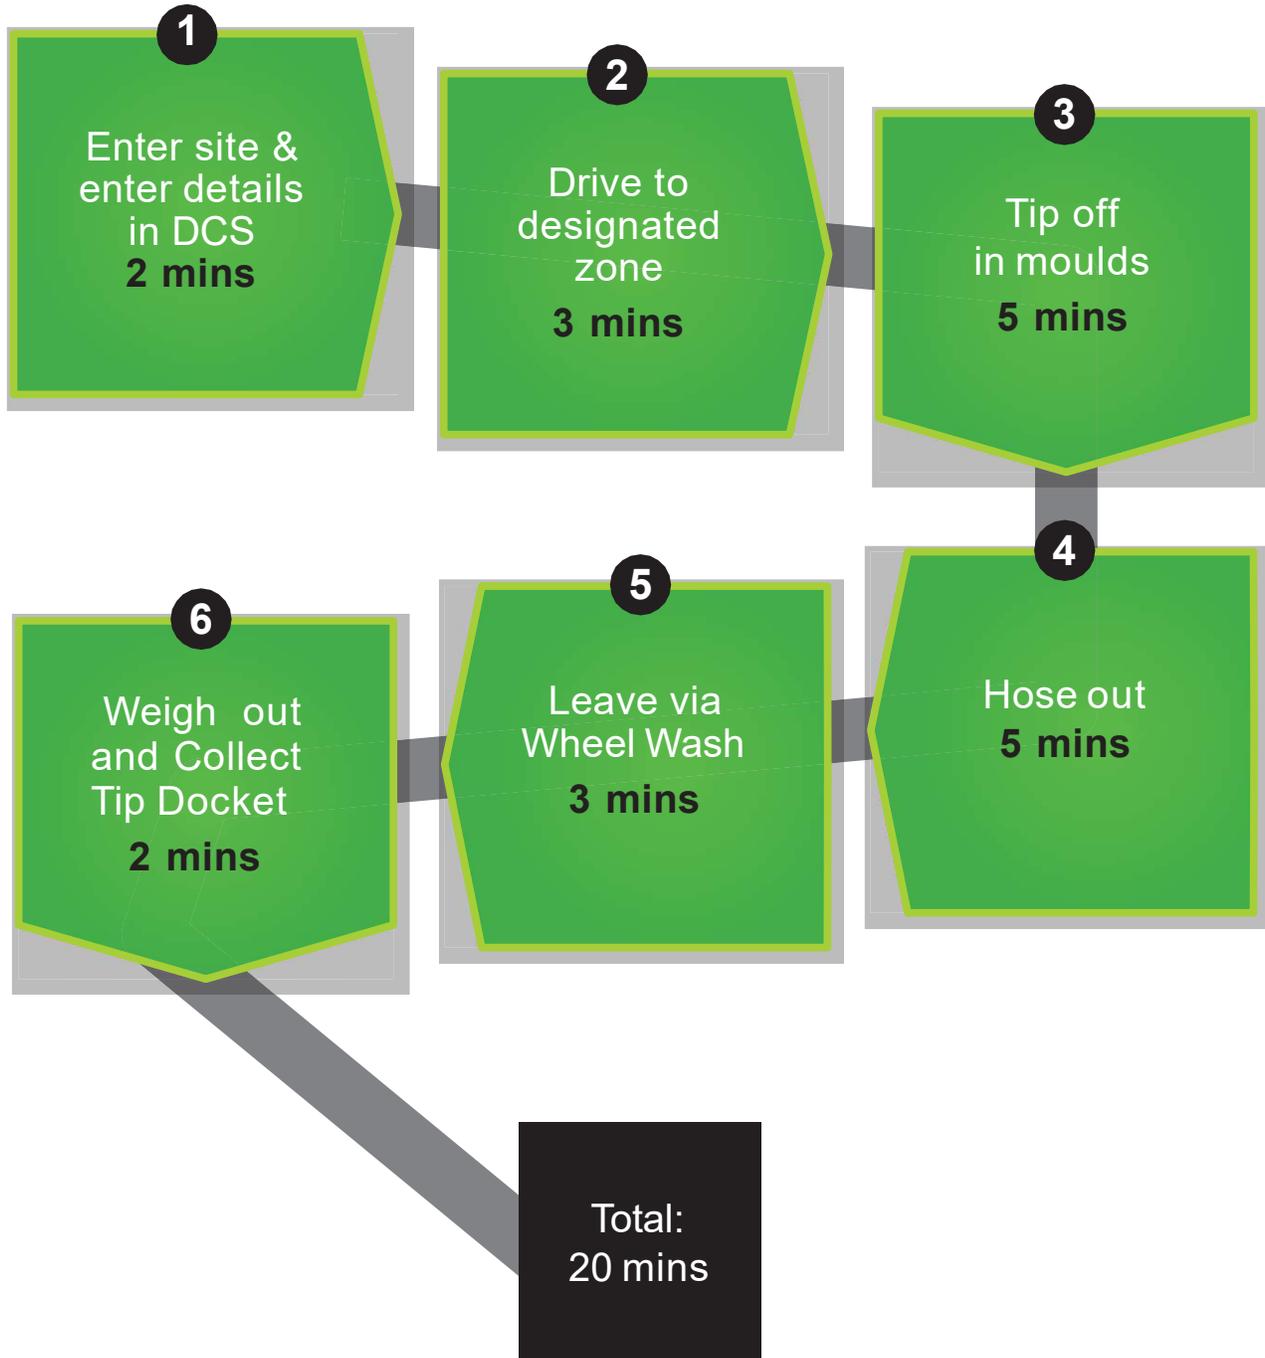




# TIPPING PROCEDURE

## J120 / FIREWATER

Classification report required prior to tipping.

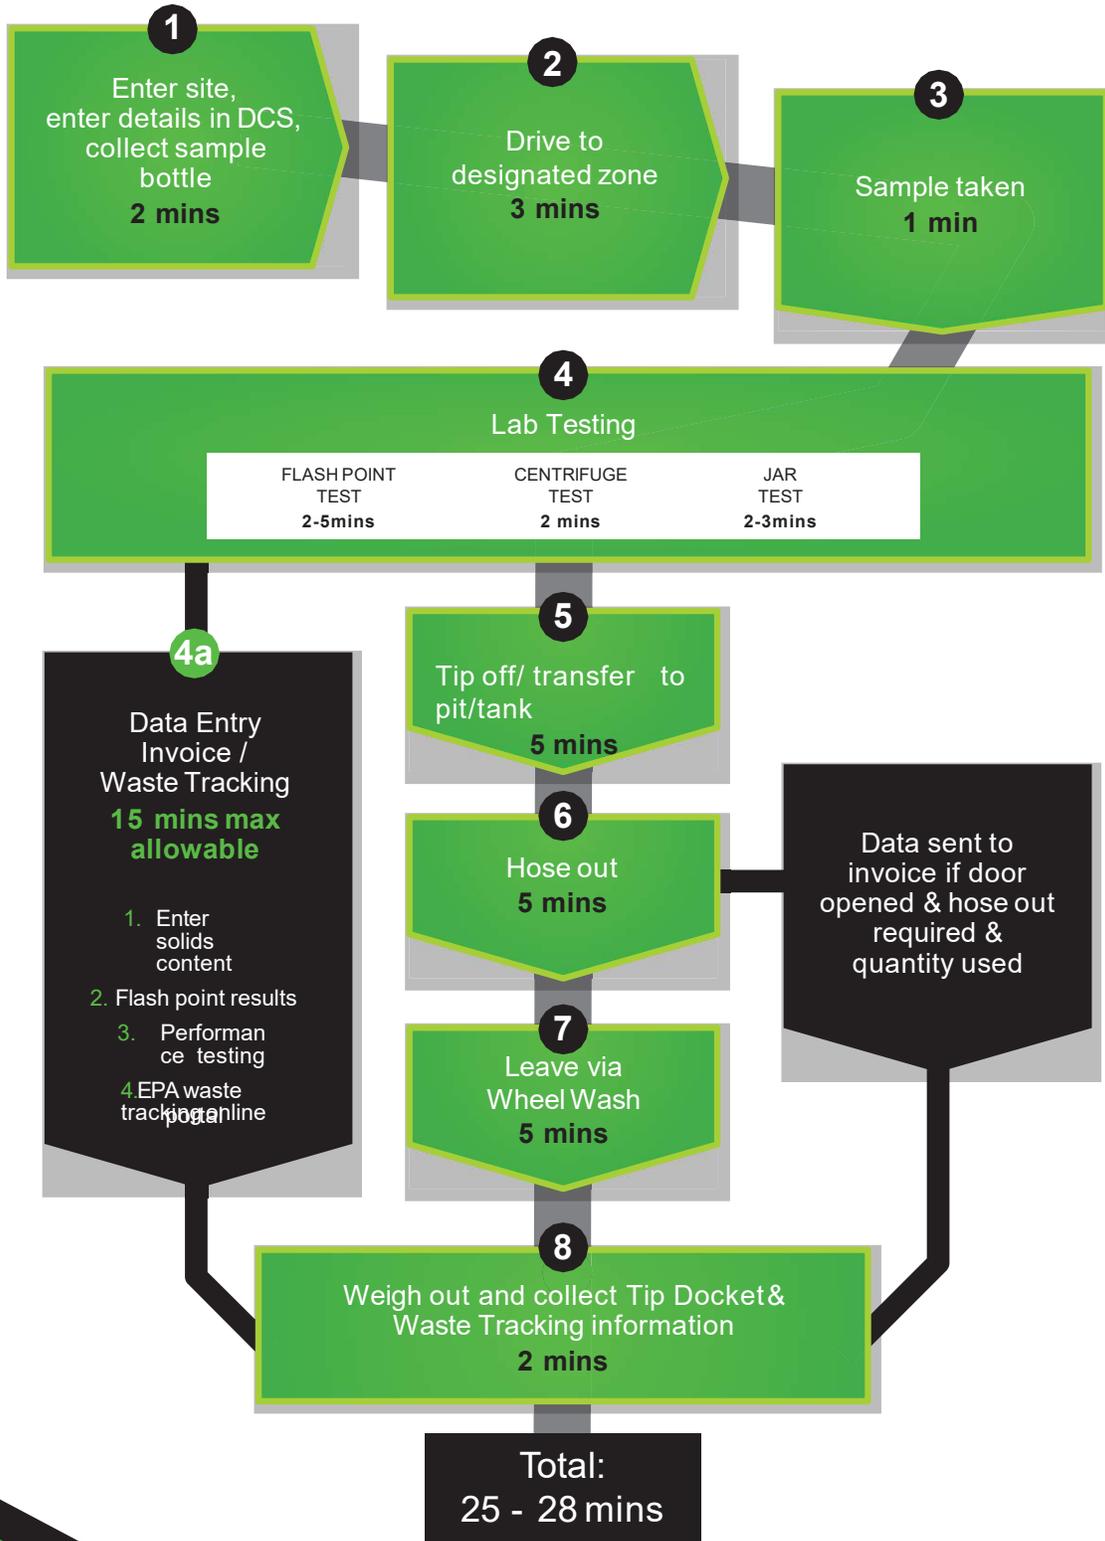




# TIPPING PROCEDURE


**A100 / B100 / C100 / N140 / Z180 / M250**

Classification report required prior to tipping.

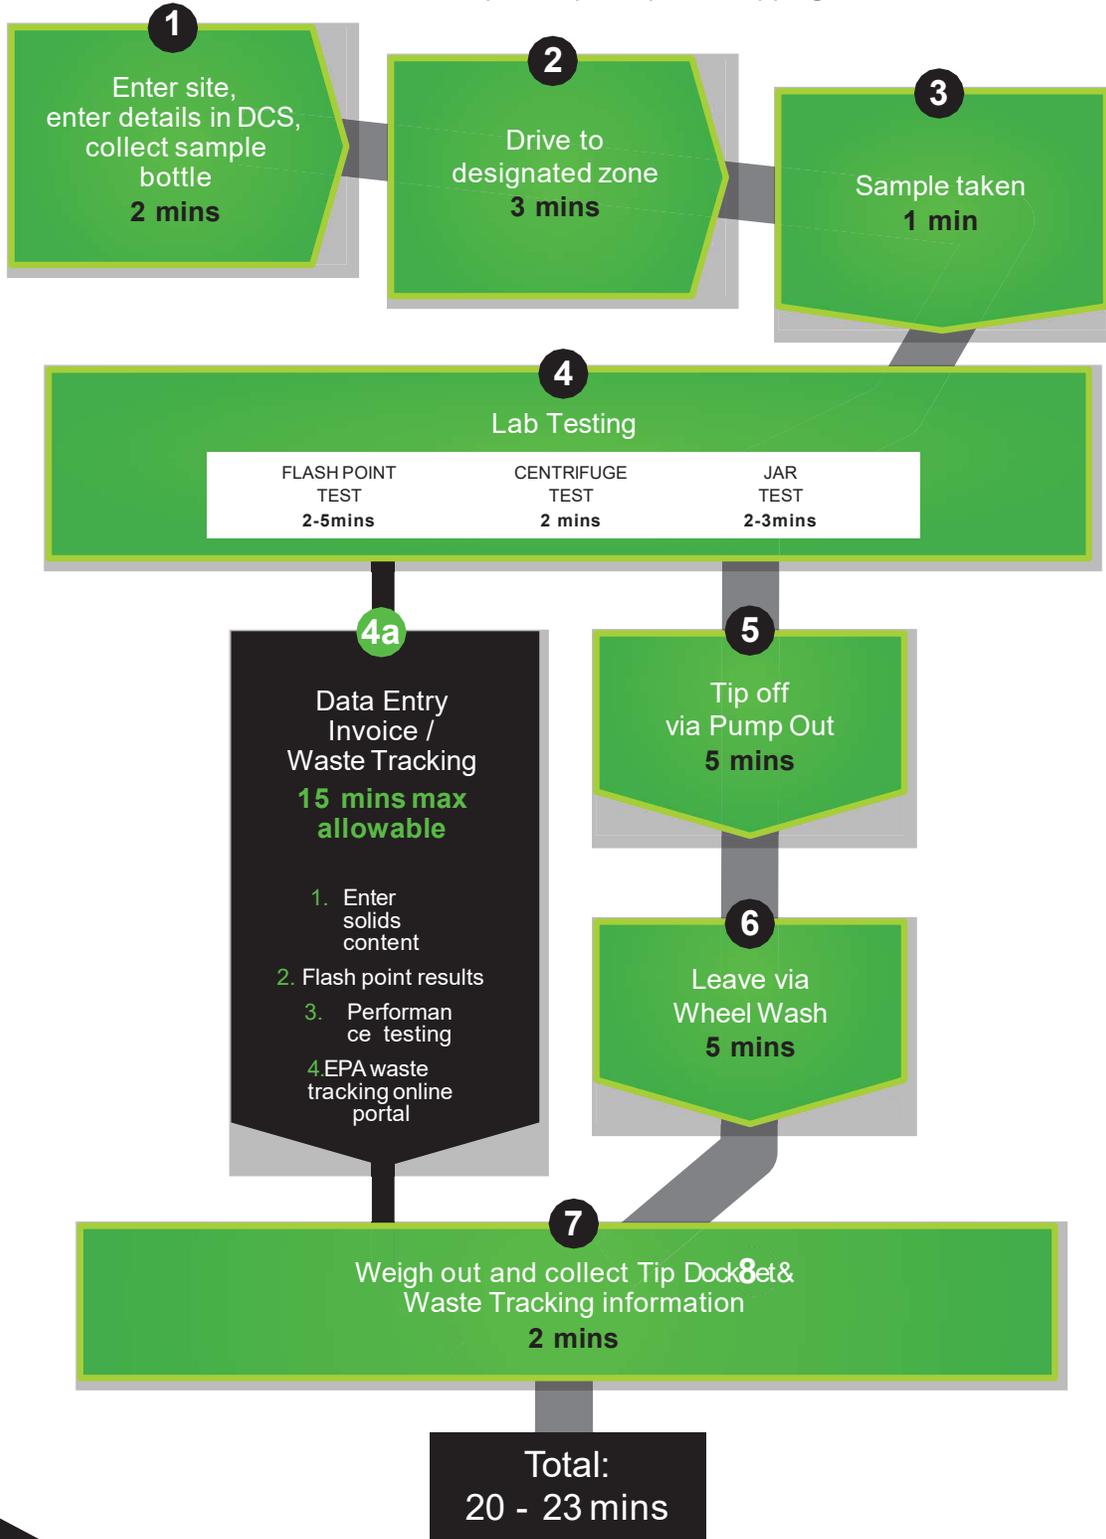




## TIPPING PROCEDURE SEWER WASTE

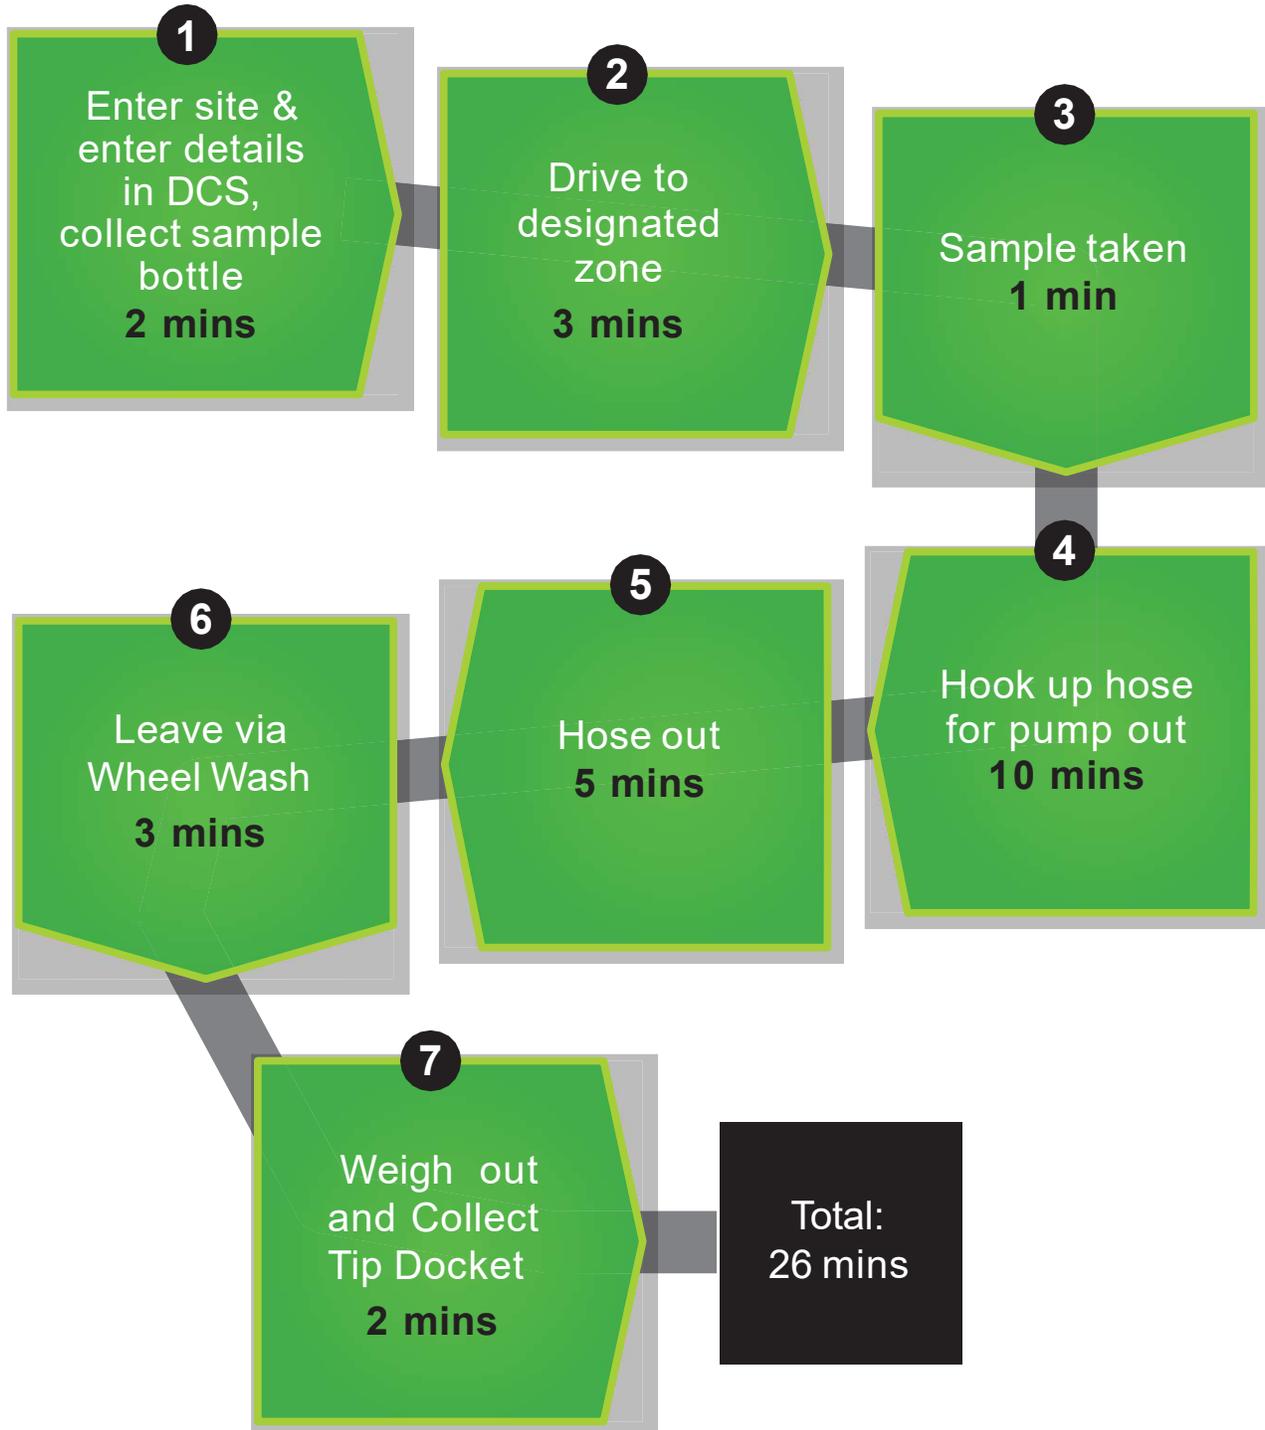



## TIPPING PROCEDURE LEACHATE

Classification report required prior to tipping.

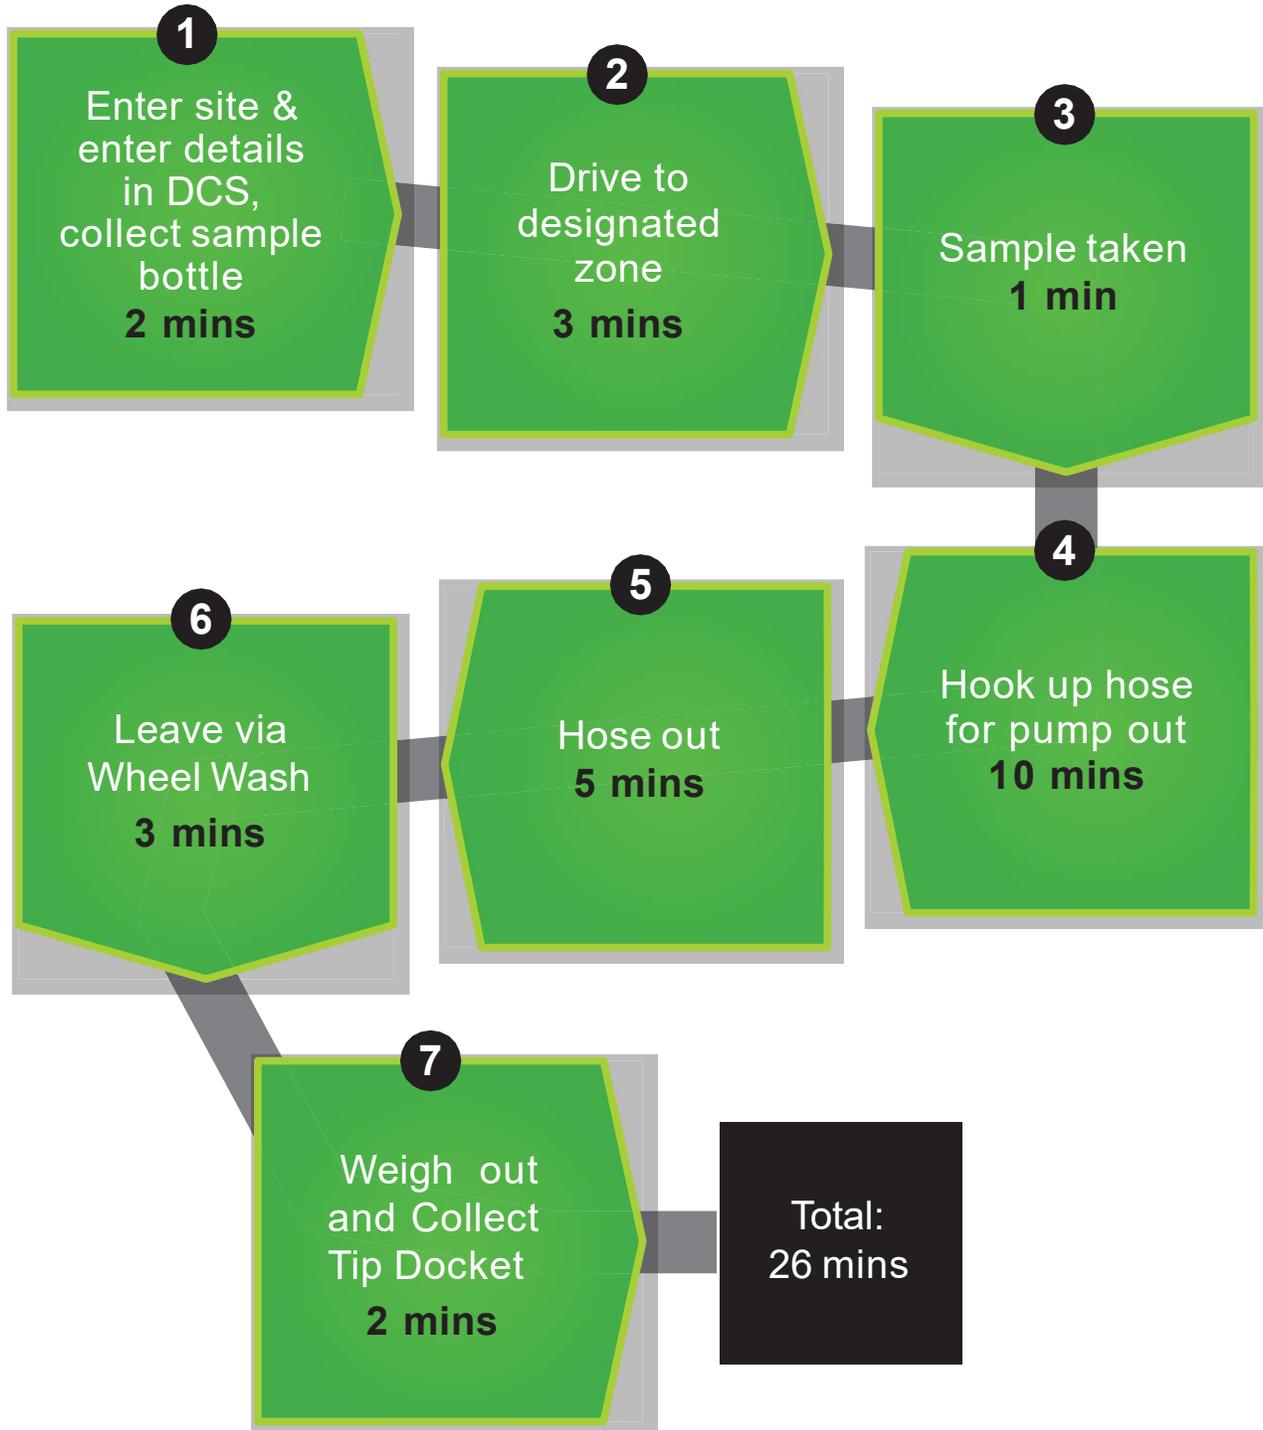



## MATERIAL PICK UP PROCEDURES

