

## Michelle Niles

---

**From:** Cornelis Duba <Cornelis.Duba@endeavourenergy.com.au>  
**Sent:** Tuesday, 1 August 2017 3:09 PM  
**To:** DPE CSE Information Planning Mailbox  
**Cc:** Jennie Saban  
**Subject:** NSW Planning & Environment Notice of Exhibition SSD 8096 Molecular and Life Sciences Building University of Wollongong, Wollongong Campus  
**Attachments:** Endeavour Energy MDI0044 Easements and Property Tenure.pdf; Endeavour Energy FAM 0048 Dispensation Request.pdf; Endeavour Energy Technical Review Request FPJ 6007 July 2017.pdf; work\_near\_underground\_assets\_1419[1].pdf; Safety+clearances\_May+11.pdf; Safety+on+the+job.pdf; FactSheet\_Building\_Construction+web.pdf; FactSheet\_Plumber\_web.pdf

The Secretary  
NSW Planning & Environment

### **ATTENTION: Karen Harragon, Director Social and Other Infrastructure Assessments**

Dear Sir or Madam

I refer to the Department's letter of 9 June 2017 regarding Development Application SSD 8096 at the Molecular and Life Sciences Building located at University of Wollongong, Wollongong Campus (Lot 1 DP 1188267) for 'Demolition, site clearing and earthworks; construction of a five storey Molecular and Life Sciences Building with a total 6,974 sqm of floorspace; construction of a pedestrian bridge link to the existing Illawarra Health and Medical Research Institute building; and landscaping, services and stormwater works'. Submissions need to be made to the Department by 31 July 2017. I apologise for the late submission but trust that Endeavour Energy's submission will still be considered.

As shown in the below site plans from Endeavour Energy's G/Net master facility model in regards to the proposed building area there are:

- Easements benefitting Endeavour Energy (indicated by red hatching) for 11,000 volt / 11 kV high voltage underground cables, an indoor substation and a padmount substation.
- Low voltage underground cables from the substations to the customer connection points.

Please note the location, extent and type of any electricity infrastructure, boundaries etc. shown on the plan is indicative only. Generally (depending on the scale and/or features selected), low voltage (normally not exceeding 1,000 volts) is indicated by blue lines and high voltage (normally exceeding 1,000 volts but for Endeavour Energy's network not exceeding 132,000 volts / 132 kV) by red lines (these lines can appear as solid or dashed). This plan is not a 'Dial Before You Dig' plan under the provisions of Part 5E 'Protection of underground electricity power lines' of the Electricity Supply Act 1995 (NSW).

Endeavour Energy has noted the following in the Statement of Environmental Impact Statement (EIS):

#### **4.1.9 Services and Infrastructure**

The following works will be undertaken as part of the proposed MLS Building works:

##### **Electricity**

Modifications to the existing local network will be required subject to approval by Endeavour Energy under a level 3 design process. The proposed network includes the demolition and subsequent relocation of substation 10 to the north of Building 32 and substation 6 to a kiosk south of Building 41 as part of the MLS Building works program. The MLS Building will be serviced from a dedicated kiosk substation (location to be determined during detailed design).

The foregoing is addressed in with the below point 'Network Capacity / Connection'. However the 'Services and Infrastructure Report' indicates as shown in the following extract of 'Figure 2' indicates 'Building footprint is raised over the easements proposed to remain'.

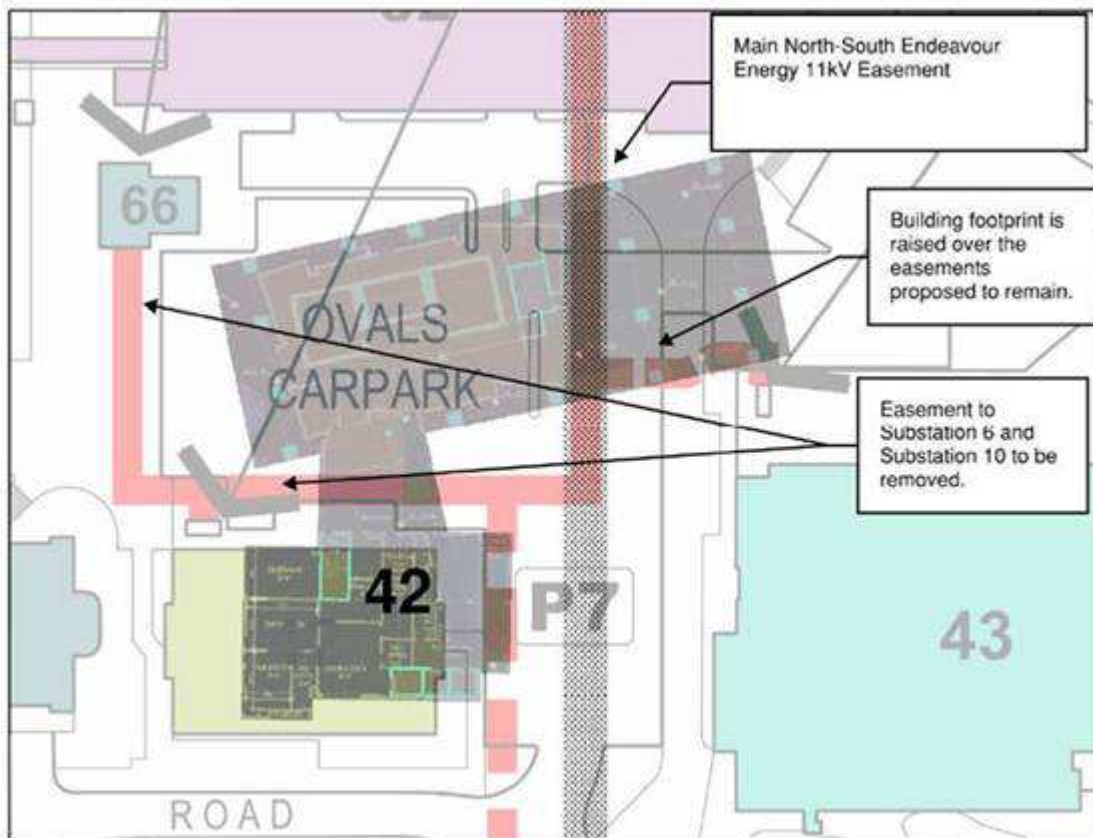


Figure 2: Snapshot from UoW Easement drawing - easement in the vicinity of proposed site

Please find attached for the applicant's reference a copy of Endeavour Energy's Mains Design Instruction MDI 0044 'Easements and Property Tenure Rights' in which Section 5.10 'Easement height' states the following:

#### 5.10 Easement height

Easements do not have a specified height to which they apply. Endeavour Energy does not allow assets to be installed above its assets, as this presents access, safety and reliability risks. Where all other options have been exhausted, a dispensation must be submitted as described in Company Procedure GAM 0114.

Endeavour Energy's Company Procedure GAM 0114 'Granting Dispensations for Engineering Documents' states the following:

#### 2.0 SCOPE

This procedure applies to all dispensation requests for proposed deviation from the company's engineering documents. This includes dispensations from, but is not limited to, Accredited Service Provider (ASP) designs, the company's designs, and failed acceptance testing results for new and existing equipment.

The dispensation request must outline the risk to the company's ability to provide a safe, reliable and sustainable electricity supply at an optimal whole of life cost when proposing to deviate from engineering documents. The validity of the risk will be assessed and the request will be approved only if the risk is deemed acceptable. The request will be rejected if the risk is deemed unacceptable or substantial evidence is not provided to justify deviating from the company's engineering documents.

If the applicant can demonstrate that there is no other option but for the 'Building footprint is raised over the easements proposed to remain', then they will need to submit the attached Company Form (Network) FAM 0048 'Dispensation Request'. Failing this, either the cables will need to be relocated or the building footprint altered so that it is not over the easements proposed to remain.

Subject to the resolution of the foregoing and the following recommendations and comments Endeavour Energy has no objection to the Development Application:

- Network Capacity / Connection

Although there is an existing customer connection, with the new building the applicant for the future proposed development of the site will need to submit an application for connection of additional load via Endeavour Energy's Network Connections Branch to carry out the final load assessment and the method of supply will be determined. Depending on the outcome of the assessment, any required padmount or indoor / chamber substation will need to be located within the property (in a suitable and accessible location) and be protected (including any associated cabling) by an easement and associated restrictions benefiting and gifted to Endeavour Energy. Please refer to Endeavour Energy's Mains Design Instruction MDI 0044 'Easements and Property Tenure Rights'. Further details are available by contacting Endeavour Energy's Network Connections Branch via Head Office enquiries on telephone: 133 718 or (02) 9853 6666 from 8am - 5:30pm or on Endeavour Energy's website under 'Home > Residential and business > Connecting to our network' via the following link:

<http://www.endeavourenergy.com.au/>

Advice on the electricity infrastructure required to facilitate the proposed development (including asset relocations) can be obtained by submitting a Technical Review Request to Endeavour Energy's Network Connections Branch, the form for which FPJ6007 is attached and further details (including the applicable charges) are available from Endeavour Energy's website under 'Our connection services'. The response to these enquiries is based upon a desktop review of corporate information systems, and as such does not involve the engagement of various internal stakeholders in order to develop a 'Connection Offer'. It does provide details of preliminary connection requirements which can be considered by the applicant prior to lodging a formal application for connection of load.

Alternatively the applicant should engage a Level 3 Accredited Service Provider (ASP) approved to design distribution network assets, including underground or overhead. The ASP scheme is administered by NSW Trade & Investment and details are available on their website via the following link or telephone 13 77 88:

<http://www.resourcesandenergy.nsw.gov.au/energy-supply-industry/pipelines-electricity-gas-networks/network-connections/contestable-works>

- Easement Management / Network Access

The following is a summary of the usual / main terms of Endeavour Energy's electrical easements requiring that the land owner:

- o Not install or permit to be installed any services or structures within the easement site.
- o Not alter the surface level of the easement site.
- o Not do or permit to be done anything that restricts access to the easement site without the prior written permission of Endeavour Energy and in accordance with such conditions as Endeavour Energy may reasonably impose.

If the proposed works (other than those approved / certified by Endeavour Energy's Network Connections Branch as part of an enquiry / application for load – please refer to the previous point 'Network Capacity / Connection') will encroach/affect Endeavour Energy's easements, contact must first be made with the Endeavour Energy's Easements Officer, Jennie Saban, on mobile 0417484402 or alternately via email [Jennie.Saban@endeavourenergy.com.au](mailto:Jennie.Saban@endeavourenergy.com.au).

It is imperative that the access to the existing electrical infrastructure adjacent and on the site is maintained at all times. To ensure that supply electricity is available to the community, access to the electrical assets may be required at any time.

- Vegetation Management

The planting of large trees in the vicinity of electricity infrastructure is not supported by Endeavour Energy. Suitable planting needs to be undertaken in proximity of electricity infrastructure. Only low growing shrubs not exceeding 3.0 metres in height, ground covers and smaller shrubs, with non-invasive root systems are the best plants to use. Larger trees should be planted well away from electricity infrastructure (at least the same distance from overhead power lines as their potential full grown height) and even with underground cables, be installed with a root barrier around the root ball of the plant. Landscaping that interferes with electricity infrastructure may become a potential safety risk, cause of bush fire, restrict access or result in the interruption of supply. Such landscaping may be subject to Endeavour Energy's Vegetation Management program and/or the provisions of the Electricity Supply Act 1995 (NSW) Section 48 'Interference with electricity works by trees' by which under certain circumstances the cost of carrying out such work may be recovered.

- Dial before You Dig

Before commencing any underground activity the applicant is required to obtain advice from the **Dial before You Dig 1100** service in accordance with the requirements of the Electricity Supply Act 1995 (NSW) and associated Regulations. This should be obtained by the applicant not only to identify the location of any underground electrical and other utility infrastructure across the site, but also to identify them as a hazard and to properly assess the risk.

- Demolition

Demolition work is to be carried out in accordance with Australian Standard AS2601: The demolition of structures (AS 2601). All electric cables or apparatus which are liable to be a source of danger, other than a cable or apparatus used for the demolition works shall be disconnected ie. the existing customer service lines will need to be isolated and/or removed during demolition. Appropriate care must be taken to not otherwise interfere with any electrical infrastructure on or in the vicinity of the site eg. street light columns, power poles, overhead and underground cables etc.

- Public Safety

Workers involved in work near electricity infrastructure run the risk of receiving an electric shock and causing substantial damage to plant and equipment. I have attached Endeavour Energy's public safety training resources, which were developed to help general public / workers to understand why you may be at risk and what you can do to work safely. The public safety training resources are also available via Endeavour Energy's website via the following link:

<http://www.endeavourenergy.com.au/wps/wcm/connect/ee/nsw/nsw+homepage/communitynav/safety/safety+brochures>

- Emergency Contact

In case of an emergency relating to Endeavour Energy's electrical network, the applicant should note the Emergencies Telephone is 131 003 which can be contacted 24 hours/7 days.

Could you please pass on the attached resources to the applicant? Should you wish to discuss this matter, or have any questions, please do not hesitate to contact me or the contacts identified above in relation to the various matters. As I am working on different projects across the company's franchise area, to ensure a response contact by email is preferred.

Yours faithfully  
Cornelis Duba  
Development Application Review

Network Environment & Assessment

T: 9853 7896


E: [cornelis.duba@endeavourenergy.com.au](mailto:cornelis.duba@endeavourenergy.com.au)

51 Huntingwood Drive, Huntingwood NSW 2148


[www.endeavourenergy.com.au](http://www.endeavourenergy.com.au)






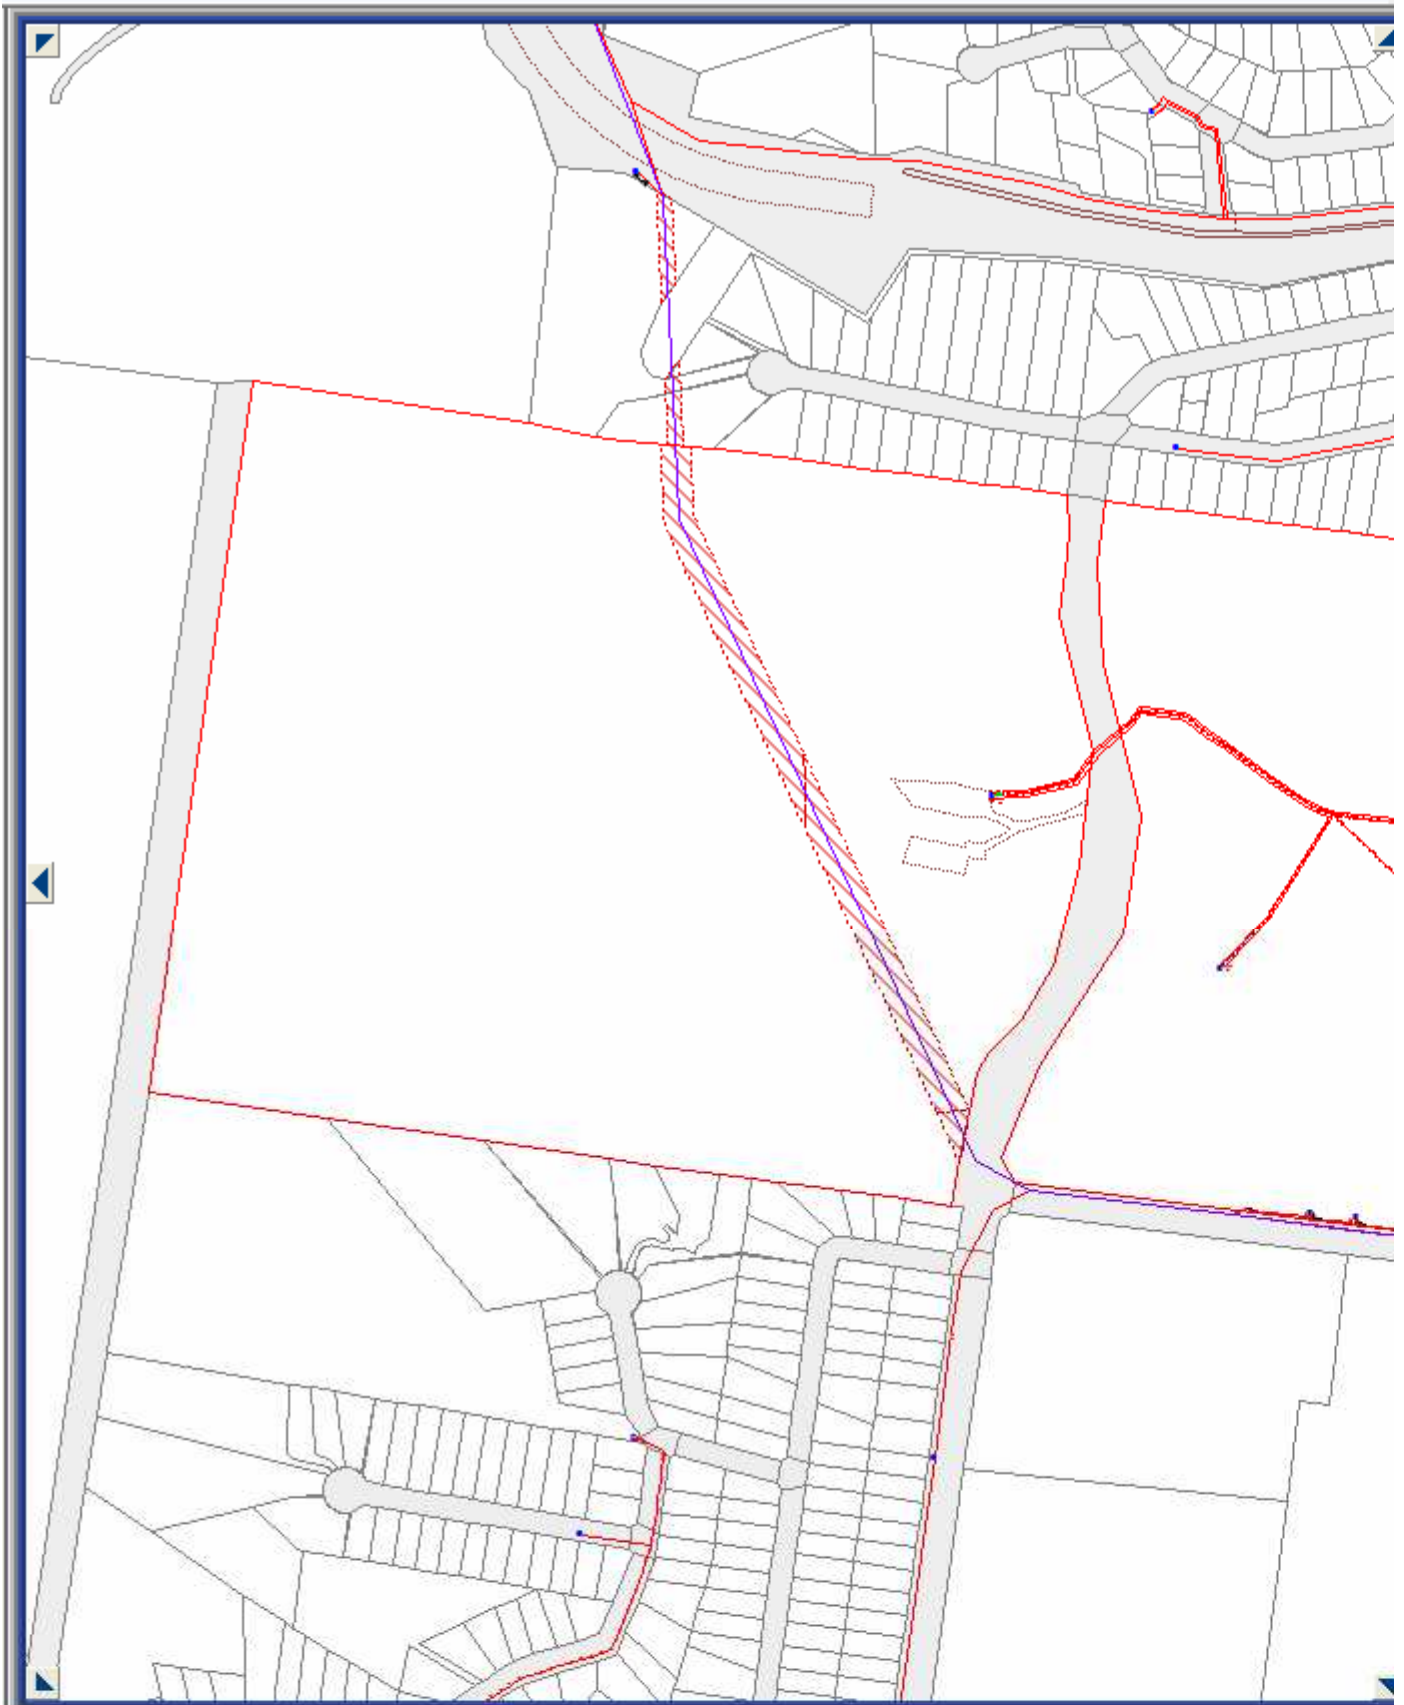

G3E_FID	Feature Name	Component Name
78559102	Crown Parcel	Crown Parcel Find

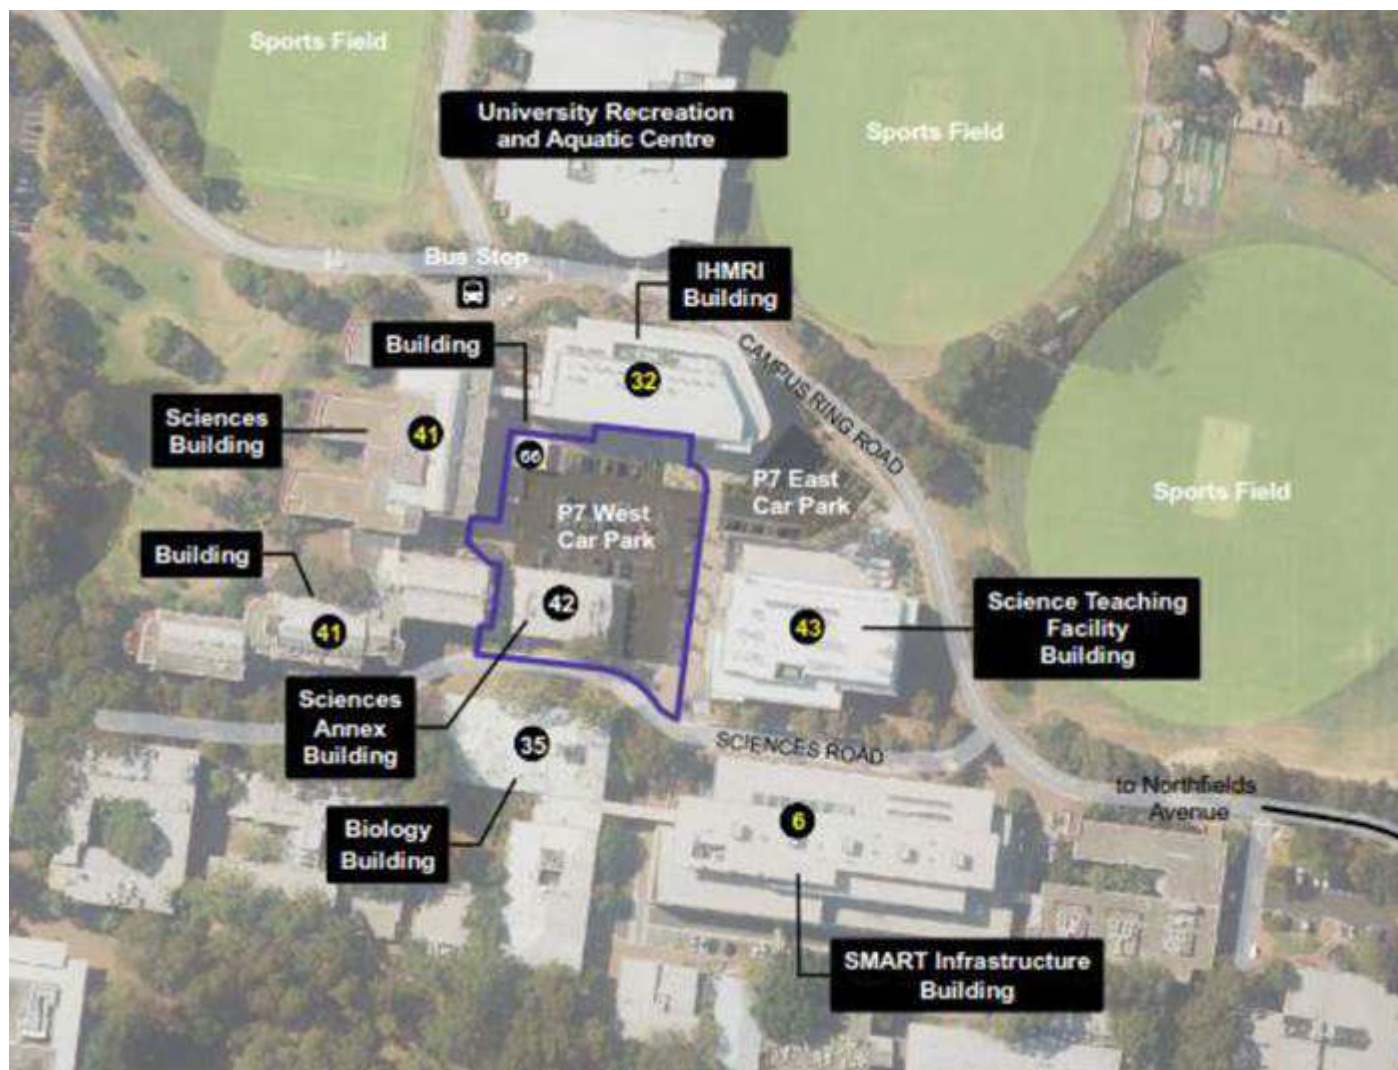

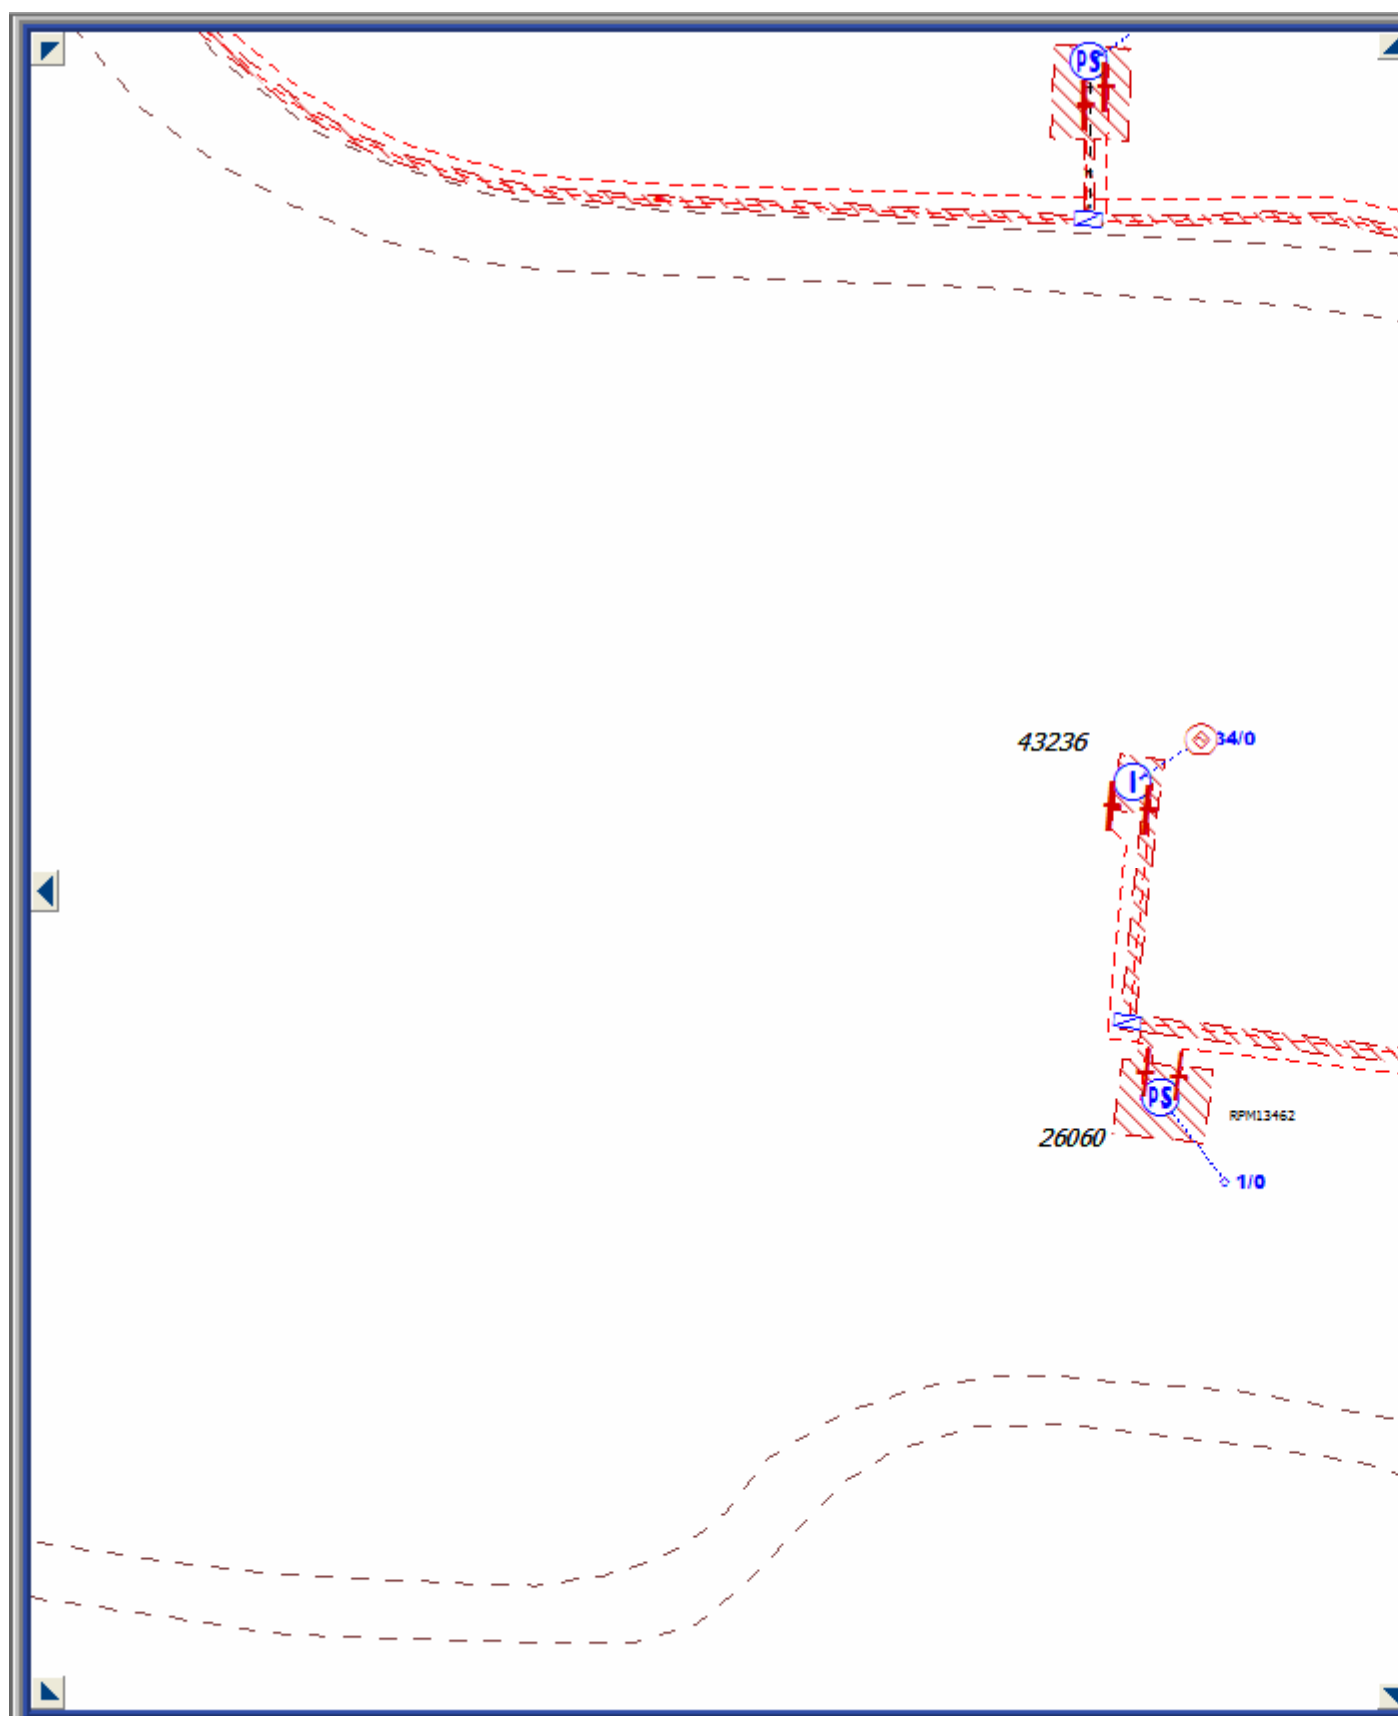



Think before you print. This message is intended for the addressee named and may contain confidential information. If you are not the intended recipient, please delete it and notify the sender. Views expressed in this message are those of the individual sender and not necessarily the views of the business.

.....

# WORK NEAR UNDERGROUND ASSETS

GUIDE 2007

*making a difference*



New South Wales Government



This is a Utilities Industry Reference Group (IRG) project in partnership with WorkCover and Industry.

The Utilities IRG working party consisted of representatives from the following organisations:

- Alinta
- Australian Workers Union – Technical Administrative Professional Staff Branch
- Civil Contractors Federation
- Department Energy, Utilities and Sustainability
- EnergyAustralia
- Integral Energy
- Local Government Engineer's Association
- Local Government and Shires Association
- Roads and Traffic Authority
- Sydney Water
- Telstra
- WorkCover.

## **ACKNOWLEDGEMENT**

The Working Party wishes to acknowledge that some references in this document are sourced from the WorkSafe Victoria *Guide for Undertaking Work Near Underground Assets*, the Utility Providers *Code of Practice for Western Australia* and the NSW Streets Opening Conference *Guide to Codes and Practices for Streets Opening*.

### **Disclaimer**

This publication may contain occupational health and safety and workers compensation information. It may include some of your obligations under the various legislations that WorkCover NSW administers. To ensure you comply with your legal obligations you must refer to the appropriate legislation.

Information on the latest laws can be checked by visiting the NSW legislation website ([www.legislation.nsw.gov.au](http://www.legislation.nsw.gov.au)) or by contacting the free hotline service on 02 9321 3333.

This publication does not represent a comprehensive statement of the law as it applies to particular problems or to individuals or as a substitute for legal advice. You should seek independent legal advice if you need assistance on the application of the law to your situation.

# CONTENTS

## PAGE

<b>PREFACE</b>	<b>4</b>
<b>1. ESTABLISHMENT</b>	<b>5</b>
1.1 TITLE	5
1.2 PURPOSE	5
1.3 SCOPE	5
1.3.1 Encouraging compliance	5
1.4 COMMENCEMENT	5
1.5 INTERPRETATION	6
1.5.1 Recommended practices	6
1.5.2 Legal requirements	6
1.6 DEFINITIONS	6
<b>2. PLANNING AND PREPARATION</b>	<b>11</b>
2.1 UNDERSTANDING RESPONSIBILITIES	11
2.1.1 Clients	11
2.1.2 Controllers of work premises, plant or substances	11
2.1.3 Principal contractors	12
2.1.4 Contractors	13
2.1.5 Employees	13
2.1.6 Self-employed persons	13
2.2 COORDINATION OF RESPONSIBILITIES	13
<b>3. CONSULTATION AND RISK MANAGEMENT</b>	<b>14</b>
3.1 CONSULTATION AT THE WORKPLACE	14
3.1.1 Consultation arrangements	14
3.1.2 Consultation procedures	14
3.1.3 When should consultation be undertaken?	15
3.1.4 How should consultation be undertaken?	15
3.2 RISK MANAGEMENT AT THE WORKPLACE	16
3.2.1 Identify hazards	16
3.2.2 Assess risks	16
3.2.3 Eliminate or control the risk	16
3.2.4 Review risk assessment and control measures	16
3.2.5 When must employers undertake risk management?	17
3.2.6 Strategies for developing effective risk management procedures	17
3.2.7 Personal protective equipment (PPE)	17
3.2.8 Incident reporting	18
3.2.9 First aid	19
3.2.10 Emergency response	19
3.2.11 Record keeping	19
<b>4. ACCURATE INSTALLATION AND INFORMATION</b>	<b>21</b>
4.1 INTRODUCTION	21
4.2 ENSURING ACCURACY OF PLANS AND RECORDS	21
4.3 UNDERGROUND ASSET OWNERS INCLUDE	22
4.4 ELECTRICITY CABLES	22
4.4.1 Cable records	22
4.4.2 Cable installation	22
4.4.3 Cable ancillary equipment	23

4.5	GAS PIPES	23
4.5.1	Gas reticulation systems	23
4.5.2	Pipe records	23
4.5.3	Pipe installation	23
4.6	WATER AND SEWER PIPES	24
4.6.1	Pipeline types	24
4.6.2	Depth and location	24
4.7	TELECOMMUNICATION CABLES	25
4.8	ABANDONED AND RETIRED UNDERGROUND ASSETS LEFT IN-SITU	25
4.9	TABLE A: THE INSTALLATION OF VARIOUS TYPES OF UNDERGROUND ASSETS	26
<b>5.</b>	<b>HAZARD IDENTIFICATION</b>	<b>31</b>
5.1	SAFETY INFORMATION	31
5.1.1	Some of the dangers when working near underground assets	31
5.1.2	Safety considerations for Low, High or Extra High Voltage electrical cables	32
5.1.3	Electrical earthing of metallic pipes	32
5.2	TABLE B: TYPES OF ASSETS AND LIMITS OF UNDERGROUND APPROACH	33
5.3	ON-SITE CHECKING	36
5.4	PLAN OR DRAWING READING	37
<b>6.</b>	<b>MANAGING THE RISKS</b>	<b>38</b>
6.1	MANAGING RISKS IN THE WORKPLACE	38
6.1.1	Monitor and review risk assessments and control measures	38
6.1.2	Safe work method statements (SWMS)	38
6.1.3	Consultation with relevant parties prior to commencing work	39
6.1.4	Planning and liaising with other authorities	40
6.2	RAILWAY ASSETS	41
6.3	SERVICE TUNNELS	41
6.4	EXCAVATION AND TRENCHING	41
6.5	ASSETS NEAR BRIDGE APPROACHES	41
6.6	ASSETS AROUND POLES	42
6.7	TRAFFIC CONTROLS	42
6.8	EMERGENCY WORK	42
6.9	VERTICAL BORING	42
6.10	DIRECTIONAL BORING	42
6.11	MECHANICAL EXCAVATING PLANT	43
6.12	EXPLOSIVES	43
6.13	PILE DRIVING	43
6.14	IDENTIFICATION OF ASSETS NOT ON PLANS	44
6.15	ASSET SEPARATION DISTANCES	44
<b>7.</b>	<b>SAFE SYSTEMS OF WORK</b>	<b>45</b>
7.1	EXCAVATION USING NON-POWERED HAND TOOLS	45
7.1.1	Work on top of or below an underground asset	45
7.1.2	Work beside an underground asset	46
7.2	ACCIDENTAL CONTACT WITH UNDERGROUND ASSETS	46
7.2.1	Electrical assets	46
7.2.2	Gas assets	47
7.2.3	Sewerage assets	47
7.2.4	Water assets	48
7.2.5	Telecommunications assets	48



7.3	COOPERATION WITH AUTHORITIES	48
7.3.1	Obligations of asset owners and contractors	48
7.4	DOCUMENTED SYSTEMS OF WORK	48
7.5	TRAINING OF MANAGERS AND EMPLOYEES	49
7.6	ASSET OWNER PLANS AND 'DIAL BEFORE YOU DIG'	49
7.7	CABLE/PIPE IDENTIFICATION DEVICES	49
7.8	GROUND PENETRATING RADAR (GPR)	49
7.9	POT-HOLING	50
7.10	AIR AND WATER LANCING	50
7.11	TRENCHLESS TECHNIQUES	50
7.12	SAFETY OBSERVERS	51
7.13	CONFINED SPACES	51
7.14	GLOBAL POSITIONING SYSTEM (GPS)	51
7.15	ABOVE GROUND IDENTIFICATION DEVICES	51
<b>8.</b>	<b>TRAINING, INSTRUCTION AND INFORMATION</b>	<b>52</b>
8.1	TRAINING REQUIREMENTS	52
8.2	INDUCTION TRAINING	52
8.3	TRAINING TOPICS	53
8.4	WHO SHOULD RECEIVE TRAINING?	53
8.5	PROVISION OF INFORMATION AND INSTRUCTION	53
<b>9.</b>	<b>CASE STUDIES AND CHECK LISTS</b>	<b>54</b>
9.1	REPAIRING SEWERAGE PIPES	54
9.2	COUNTRY TELECOMMUNICATIONS CABLE DAMAGE CASE STUDY	55
9.3	CITY TELECOMMUNICATIONS CABLE DAMAGE CASE STUDY	56
9.4	EXAMPLE OF AN INCIDENT REPORT USED BY AN ELECTRICITY ASSET OWNER	58
9.5	CASE STUDY: CONSTRUCTION OF THE M7 MOTORWAY	59
<b>10.</b>	<b>FURTHER INFORMATION</b>	<b>61</b>
10.1	AUSTRALIAN STANDARDS	61
10.2	WORKCOVER NSW CODES OF PRACTICE	61
10.3	OTHER STANDARDS AND REFERENCES	62
10.4	LEGISLATION	62
<b>11.</b>	<b>APPENDIX A – UNDERGROUND ASSET LOCATION CHECKLIST</b>	<b>63</b>
<b>12.</b>	<b>APPENDIX B – WORKERS COMPENSATION INSURANCE</b>	<b>65</b>
<b>13.</b>	<b>APPENDIX C – TYPICAL FOOTWAY ALLOCATIONS FOR UTILITY SERVICES AND DEPTH OF COVER IN ROAD RESERVES</b>	<b>66</b>
13.1	NOMINAL DEPTH OF COVER OF UTILITY SERVICES IN ROAD RESERVES	66
13.1.1	In footways	66
13.1.2	In carriageways	67
13.2	UTILITY/SERVICE PROVIDER ALLOCATION OF SPACE IN FOOTWAYS	68
13.2.1	Streets dedicated prior to 1 January 1991	68
13.2.2	Streets dedicated after 1 January 1991	69

## PREFACE

This Guideline is for employers, employees, contractors, subcontractors and other parties involved in construction work near underground assets. Note: This Guideline is not designed to impact on mining legislation.

The aim of this Guideline is to assist employers in deciding appropriate measures to eliminate or control risks to workers and other people on construction sites. It provides practical advice on implementing the requirements of the *Occupational Health and Safety Act 2000* (OHS Act) and the *Occupational Health and Safety Regulation 2001* (OHS Regulation).

At times, construction work may be carried out near underground assets on greenfield construction sites as well as on or near public roads and pedestrians. Where construction and maintenance work is carried out on or near public roads, work should be carried out in accordance with the AS 1742 set of Standards – *Manual of uniform traffic control devices*. These Standards are supported by a set of field guides (HB 81) *Field guide for traffic control at works on roads*.

Use this Guideline to assess the effectiveness of your present arrangements for dealing with safety issues associated with working near underground assets, and to check that sources of risk have been identified and dealt with. If you are setting up a new business, this Guideline can serve as your step-by-step guide to establishing a program to manage the hazards arising from work near underground assets.

Work on, near or adjacent to gas and electricity services are deemed to be high risk construction work. Also water and sewerage assets may be deemed to be high risk construction work.

### What do the symbols in the Guideline mean?

To help you work out what you require, a number of symbols are used to highlight things you need to take into account and tools to help you undertake the activity.



**Assess the risks in your workplace**



**Processes of finding things that cause harm, work out how serious the problems are and then to fix them**



**Legal obligations that must be followed**



**The process of finding things that cause harm, working out how big a problem they are and fixing them**

# 1. ESTABLISHMENT

## 1.1 TITLE

This is the Work Near Underground Assets Guideline.

## 1.2 PURPOSE

This Guideline provides practical guidance to prevent injury to people and damage to underground assets.

## 1.3 SCOPE

This Guideline informs asset owners, contractors, employers, workers and industry as to their obligations to:

- accurately install and record the location of the asset
- operate and maintain utility assets
- foster co-operation between underground utility owners and industry so as to eliminate or control the risk to individuals and the community, as well as damage to underground assets
- manage the risks involving underground assets at a workplace
- provide safe systems of work for individuals dealing with works near underground assets
- encourage the use of agreed practices for such work
- carry out JSA/Risk assessment and develop safe work method statements prior to commencing high risk construction work.

**Note:** This Guideline relates to underground utility assets on public land, within easements and on private property. While the principles may be similar, this Guideline does not specifically relate to underground assets on private property.

### 1.3.1 Encouraging compliance

All worksite controllers within NSW have a duty of care to persons within their worksite or those who may be affected by actions or omissions arising from their work activities.

The adoption of this Guideline when dealing with underground assets should help ensure that this duty of care is met.

All persons working near underground assets are encouraged to adopt this Guideline.

All asset owners must promote and encourage the adoption of this Guideline, not only within their own workplaces but to sub-contractors and all persons performing work near underground assets.

## 1.4 COMMENCEMENT

This Guideline takes effect on 05/07.

## 1.5 INTERPRETATION

### 1.5.1 Recommended practices

Words such as 'should' indicate recommended courses of action. 'Consider' indicates a possible course of action that the Guideline is indicating the duty holder should think about. However, you may choose an alternative method of achieving a safe system of work.

### 1.5.2 Legal requirements

Words such as 'must', 'requires' or 'mandatory' indicate that legal requirements exist which must be complied with.

## 1.6 DEFINITIONS

<b>access authority</b>	a written authorisation, issued by an asset owner, which allows persons to work within a specified proximity of the asset.
<b>accredited person</b>	a person who has successfully completed a recognised training course relating to the specific job, the training having been conducted by a registered or accredited training organisation.
<b>approach distance</b>	the minimum separation in air from an exposed conductor that shall be maintained by a person, or any object held by or in contact with that person.
<b>approved</b>	having appropriate endorsement in writing for a specific activity.
<b>asset owner</b>	the owner, controller or operator of an underground asset. For the purpose of this Guideline an underground asset includes electrical, water, sewage and drainage, gas, telecommunications, petrochemicals and hazardous substances.
<b>authorised person</b>	a person with technical knowledge or sufficient experience who has been approved, or has the delegated authority to act on behalf of the organisation, to perform the duty concerned.
<b>cable</b>	an insulated conductor or two or more such conductors laid together, whether with or without fillings, reinforcements or protective coverings.
<b>competent person</b>	a person who has acquired through training, qualification or experience, or a combination of them, the knowledge and skills to carry out the task.
<b>confined space</b>	confined space as defined in Australian Standard AS 2865 <i>Safe working in a confined space</i> .
<b>construction work</b>	means any of the following: <ul style="list-style-type: none"><li>• excavation, including the excavation or filling of trenches, ditches, shafts, wells, tunnels and pier holes, and the use of caissons and cofferdams</li><li>• building, construction (including the manufacturing of prefabricated elements of a building at the place of work concerned), alteration, renovation, repair, maintenance and demolition of all types of buildings</li><li>• civil engineering, including the construction, structural alteration, repair, maintenance and demolition of – for example, airports, docks, harbours, inland waterways, dams, rivers, avalanche and sea defence works, roads and highways, railways, bridges and tunnels, viaducts – and works related to the provision of services such as communications, drainage, sewerage, water and energy supplies.</li></ul>

<b>consumer services</b>	the supply to individual houses or premises, as opposed to “mains” which form part of the utility’s distribution system.
– <i>water</i>	the cold water supply pipework from the water main up to and including the outlet valves at fixtures and appliances. The water service is owned by the consumer.
– <i>electricity</i>	consumer services means the conductors from the supply authorities’ distribution mains (overhead or underground) to the customers’ premises.
– <i>gas</i>	the pipe used to supply gas to the property, which runs from the distribution main to the meter position.  the Network Operator, also known as the Asset Owner, owns the section of the pipe between the distribution main and the property. The property owner owns the section of pipe between the property line and the meter.
– <i>telecommunications</i>	the conduit and cabling controlled by the Carrier from the Network Point of Presence to the Network Boundary Point (NBP). Cabling beyond the NBP is customer owned cabling.
<b>contaminated ground</b>	a contaminated site that poses a significant risk of harm to human health or the environment and is regulated by the EPA (NSW) under <i>Contaminated Land Management Act 1997</i> . Refer to <a href="http://www.epa.nsw.gov.au/clm/searchregister.aspx">http://www.epa.nsw.gov.au/clm/searchregister.aspx</a>
<b>control measures</b>	measures taken to minimise a risk to the lowest level reasonably practicable.
<b>crane</b>	an appliance intended for raising or lowering a load and moving it horizontally. Includes the supporting structure of the crane and its foundations, but does not include industrial lift trucks, earth moving machinery, amusement devices, tractors, industrial robots, conveyors, building maintenance equipment, suspended scaffolds or lifts.
<b>earthed</b>	direct electrical connection to the general mass of earth so as to ensure and maintain the effective dissipation of electrical energy.
<b>earth moving machinery</b>	an operator controlled item of plant used to excavate, load or transport, compact or spread earth, overburden, rubble, spoil, aggregate or similar material, but does not include a tractor or industrial lift truck.
<b>electrical apparatus</b>	any electrical equipment, including overhead power lines and underground cables, the conductors of which are live or can be made live.
<b>electricity network</b>	transmission and distribution systems consisting of electrical apparatus which are used to convey or control the conveyance of electricity between generators’ points of connection and customers’ points of connection.
<b>emergency work</b>	work to rectify or prevent imminent danger to human life or physical injury.  work to rectify or prevent imminent or continuing damage to, or destruction of, property or the environment.  work to rectify or prevent an unscheduled outage which has or is likely to have a significant impact on the Distribution Network or the Carrier’s network.
<b>employee</b>	an individual who works under a contract of employment or apprenticeship.
<b>employer</b>	a person who employs persons under contracts of employment or apprenticeship.
<b>energised</b>	connected to any source of energy.



<b>excavating</b>	the movement or placement of soil or other surface materials by removing, boring or forcing objects into the ground or surface of the earth.
<b>exposed conductor</b>	an electrical conductor, approach to which is not prevented by a barrier of rigid material or by insulation that is adequate under a relevant Australian Standard specification for the voltage concerned.
<b>extra high voltage (EHV)</b>	in NSW, means a transmission system cable with a nominal voltage of 132,000V a.c. (132kV) or above.
<b>hazard</b>	anything (including work practices and procedures) that has the potential to harm the health and safety of a person.
<b>high pressure gas (HP)</b>	210kPa – 1050kPa. <b>Note:</b> Transmission Pressure gas is equal to or greater than 1050kPa.
<b>high-risk construction work</b>	means any of the following construction work: <ul style="list-style-type: none"> <li>• involving structural alterations that require temporary support</li> <li>• at a height above 3 metres</li> <li>• involving excavation to a depth greater than 1.5 metres</li> <li>• demolition work for which a licence is not required</li> <li>• in tunnels</li> <li>• involving the use of explosives</li> <li>• near traffic or mobile plant</li> <li>• in or around gas or electrical installations</li> <li>• over or adjacent to water where there is a risk of drowning.</li> </ul>
<b>high voltage (HV)</b>	a nominal voltage exceeding 1000V a.c. or exceeding 1500V d.c.
<b>insulated</b>	separated from adjoining conducting material by a non-conducting substance which provides resistance to the passage of current, or to disruptive discharges through or over the surface of the substance at the operating voltage, and to mitigate the danger of shock or injurious leakage of current.
<b>instructed person</b>	a person adequately advised or supervised by an Authorised Person to enable them to avoid the dangers which electricity may create.
<b>isolated</b>	disconnected from all possible sources of energy by means that prevent unintentional energisation of the apparatus.
<b>lancing</b>	using water or air aided by vacuum extraction to achieve non-destructive excavation.
<b>live</b>	energised.
<b>low pressure gas (LP)</b>	pressure less than or equal to 7kPa.
<b>low voltage (LV)</b>	a nominal voltage exceeding 50V a.c. or 120V d.c. but not exceeding 1000V a.c. or 1500V d.c.
<b>mains</b>	part of the utility's distribution system as opposed to "services" which are the take-offs for individual properties.
– <i>water/sewerage</i>	a conduit or pipeline controlled and maintained by a network utility operator or water authority.
– <i>electricity</i>	aerial or underground wires or cables from 400/230V to 330kV a.c
– <i>gas</i>	a pipe installed in a street to convey gas to individual services.
– <i>telecommunications</i>	any facility owned by the carrier – typical underground plant consists of conduits, cables, pits and manholes linking exchanges, or exchanges to distribution points.

<b>medium pressure gas (MP)</b>	pressures greater than 7kPa and up to 210kPa.
<b>mobile plant</b>	<p>includes plant that:</p> <ul style="list-style-type: none"> <li>• moves either under its own power or is pulled or pushed by other mobile plant</li> <li>• moves on or around the worksite, enters or leaves the site, or moves past the site</li> <li>• includes road vehicles operating at a worksite.</li> </ul> <p><b>Note:</b> This definition has been adopted for the purposes of this Guideline. This includes items such as earthmoving machinery, concrete boom pumps and tipper trucks operating at a worksite.</p>
<b>network operator</b>	also known as the asset owner.
<b>nominal voltage (U)</b>	the a.c. or d.c. voltage by which a system of supply is designated.
<b>OHS act</b>	the Occupational Health and Safety Act 2000.
<b>OHS regulation</b>	the Occupational Health and Safety Regulation 2001.
<b>overhead power line</b>	any bare or covered aerial conductors and other associated electrical parts that make up an aerial line for the distribution and transmission of electrical energy.
<b>other cable systems</b>	telecommunications cables, optic fibre cables, control cables, earth cables or electrolysis drainage cables.
<b>personal protective equipment (PPE)</b>	<p>items that workers can use to protect themselves against hazards. PPE includes insulating gloves, mats or sheeting, glasses and face protection.</p> <p><b>Note:</b> A number of items of PPE are made and tested to Australian Standards.</p> <p>PPE that is not designated as meeting a recognised Standard may be unreliable in service, as its performance is unknown.</p>
<b>place of work</b>	premises where people work.
<b>plant</b>	<p>any machinery, equipment or appliance.</p> <p><b>Note:</b> For the purposes of this Guideline the definition includes a broad range of machinery and equipment, but not limited to, cranes, mobile plant, scaffolding, load shifting equipment, industrial lift trucks, earth moving machinery, amusement devices, tractors, rural machinery, vehicles, conveyors, building maintenance equipment, suspended scaffolds or lifts, implements or tools and any component or fitting of those things.</p>
<b>polymeric</b>	made from polymers otherwise known as plastics.
<b>pot-holing</b>	excavating with hand tools to a pre-determined depth to establish if assets exist in the immediate location.
<b>premises</b>	<p>includes any place, and particularly includes:</p> <ul style="list-style-type: none"> <li>• any land, building or part of a building</li> <li>• any vehicle, vessel or aircraft</li> <li>• any installation on land, on the bed of any waters or floating on any waters</li> <li>• any tent or movable structure.</li> </ul>
<b>permit conditions</b>	permission conditions stipulated by asset owner.
<b>pressurised</b>	a constrained flow of a substance in a pipeline which may be of varying diameters and thicknesses, the flow of which may or may not be directly controlled by an asset owner.
<b>procedure</b>	the documentation of a systematic series of actions (or activities) directed to achieve a desired result.

<b>property line</b>	the boundary line between the road reserve and the adjacent property.
<b>railway assets</b>	electrical, signalling and communications infrastructure owned and maintained by the rail entity. Assets also included but are not limited to, drainage lines and compressed air line.
<b>safety observer</b>	a competent person who has been specifically assigned the duty of observing and warning against unsafe approach to the asset.
<b>supervisor</b>	a representative of the principal for a worksite, who has the delegated responsibility for a task or range of tasks being undertaken at the worksite.
<b>underground assets</b>	part of an underground network such as water/drainage/sewerage, electricity, gas or communications etc.
<b>underground services</b>	the supply to individual houses or premises as opposed to underground assets which form part of the utility's distribution system.
<b>works planned or programmed</b>	any work which has followed the normal planning process prior to work commencing ie where the worksite has been physically inspected and assessed in advance of the work crew arriving on site.

## 2. PLANNING AND PREPARATION



The OHS Act and the OHS Regulation require employers to address workplace health and safety through a process of risk management and consultation.

Under the OHS Act and the OHS Regulation, employers have an obligation to ensure the health, safety and welfare of employees at work and that other people are not exposed to risks to their health and safety. When contracting out work, employers must ensure that contractors are planning and carrying out work in a safe manner. The work should be conducted according to this Guideline.

To effectively implement this Guideline, employers need to be aware of these requirements and have procedures in place to apply them. Employees, self-employed persons, subcontractors and controllers of premises, plant and substances also have responsibilities under OHS legislation. Each individual should ensure that they work safely and that their work does not expose others to health and safety risks.

The way to systematically plan and manage health and safety in the workplace is to build risk management and consultation into all those activities that may have OHS implications. This will involve activities such as purchasing, work methods or procedures, using contractors, reporting OHS problems, investigating incidents and planning emergency procedures.

### 2.1 UNDERSTANDING RESPONSIBILITIES

#### 2.1.1 Clients

The client's responsibilities under the OHS Act and OHS Regulation will depend on their role in the design and construction. They are usually a "controller of premises" at least to some extent and may also have other roles such as designer, principal contractor or an employer in relation to the project.

The client is also in the best position to influence others to consider that constructability and maintainability are included in the design and thus to reduce construction and ongoing maintenance risks at the design stage. Setting realistic timeframes for tendering, planning and project execution can also assist planning and execution of construction work.

However, the client is not always aware of all the complexities, such as the range of construction techniques, ground conditions and their effect on safety. It is therefore often appropriate for consultation between the client and other parties at an early stage to take advantage of the opportunity to identify the best concept design.

#### 2.1.2 Controllers of work premises, plant or substances



Controllers of work premises, plant or substances also have health and safety legal responsibilities. They must make sure that the premises used as a place of work are safe and without risks to health and that the plant and substances used in the work process are safe and without risks to health when properly used. For persons who have only limited control of the premises, plant or substances, their responsibilities apply only to the matters over which they have control.

Designers should ensure that:

- to the extent that they have control over the design work, the structure (or plant) can be safely constructed, used, repaired, cleaned, maintained, and demolished, such that the health and safety of any person is not put at risk by the design
- information is provided to the client about the health and safety aspects of the design.

Designers should also ensure that, as far as practicable, hazards associated with the following are identified before commencement of the construction work:

- the design of the structure (whether permanent or temporary)
- systems of work required to construct, repair and maintain the structure
- the intended use of the structure
- materials required to be used in the construction of the structure
- the demolition (or abandonment) of the structure.

**Note:** In relation to the design of plant, the OHS Regulation contains more detailed risk control requirements on designers, manufacturers and suppliers.

Where there is more than one designer, critical aspects of the project should be documented and liaison should occur between the principal contractor and relevant designers so that the work can be coordinated to ensure the safe interaction of the different design aspects. When risks remain in the design work, information should be included with the design to alert others to the risks.

### 2.1.3 Principal contractors



The principal contractor, whether as an employer or as the person in control of the workplace, must provide and maintain in relation to those matters over which he or she has control, a workplace that is safe and without risks to health for their employees and other persons present at the workplace or affected by the work. To fulfil these obligations the principal contractor must plan for the work to be done safely.

The principal contractor must ensure that a site specific OHS management plan is prepared and documented for each place of work where construction work is to be carried out, before the work commences. This plan must be developed in consultation with the contractor/s and their employees or representatives. The plan must include safe work method statements (SWMS), provided by the contractors where they are used, for all work activities assessed as having risks. It must also include the following details:

- arrangements for OHS induction training
- arrangements for managing OHS incidents including response persons
- site safety rules and arrangements for informing persons affected
- details where persons have specific site OHS responsibilities.

The health and safety management plan must be monitored to ensure that work is carried out safely, according to that plan and that the plan is effective. The plan must be maintained and up to date during the course of the construction work and must be made available for inspection. The principal contractor must stop work immediately, or as soon as it is safe to do so, where there is a risk to the health or safety of a person.



#### 2.1.4 Contractors



The contractor(s) doing the work, whether the principal contractor themselves or sub-contractors, must provide and maintain a workplace that is safe and without risks to health for their employees in relation to those matters over which they have control.

In addition to consultation with the principal contractor in the overall job planning, the contractor must develop written SWMS including an assessment of the risks and the controls used to carry out the work safely.

#### 2.1.5 Employees



Employees must take reasonable care of the health and safety of themselves and others. Employees must cooperate with employers in their efforts to comply with OHS requirements. This means that employees must notify their employer of safety and security hazards, risks and incidents in line with the requirements of the OHS Act. These requirements should be outlined by the employer's OHS policy, procedures and safety related instructions.

Employees must not be required to pay for anything done or provided to meet specific requirements made under the OHS Act or OHS Regulation.

#### 2.1.6 Self-employed persons



Self-employed persons must ensure that their undertakings do not expose others to health or safety risks.

### 2.2 COORDINATION OF RESPONSIBILITIES

There may be a number of parties involved in a project, such as:

- the client
- the principal contractor
- controllers of premises, plant or substances
- designers
- employers (contractor or subcontractors) who employ persons at the site, including labour hire agencies providing persons to the site
- self-employed persons
- suppliers of plant, materials or prefabricated components.



Where more than one party has responsibilities at a specific workplace, each party retains their legal responsibilities and must discharge their responsibilities in a coordinated manner.

### 3. CONSULTATION AND RISK MANAGEMENT



The OHS Act and the OHS Regulation require employers to address workplace health and safety through a process of risk management and consultation.

To effectively implement this Guideline, employers need to be aware of these requirements and have procedures in place to apply them.

Employers are advised to consult the OHS Act and the OHS Regulation as well as the *Code of Practice: Occupational Health and Safety Consultation* and the *Code of Practice: Risk Assessment* for details of these requirements and how they can be met. The following information is designed to provide an overview of legislative requirements.

#### 3.1 CONSULTATION AT THE WORKPLACE



Employers must consult with employees when taking steps to assess and control workplace risks.

In order to consult with employees, employers are required to set up consultation arrangements and develop consultation procedures.

##### 3.1.1 Consultation arrangements

The OHS Act provides three options for consultation arrangements:

Arrangement	Workplace	Requirement
<b>OHS Committee</b>	20 or more employees	requested by a majority of employees or direction by WorkCover
<b>OHS Representative</b>	any size	at least one employee requests an election or directed by WorkCover
<b>Other agreed arrangements</b>	any size	agreed to by both the employer and employees (in a small workplace it may be a regular safety meeting with employees)

Before using this Guideline, an employer should ensure that consultation arrangements are in place. An employer may initiate the establishment of an OHS Committee or the election of an OHS Representative if the employees have not made such a request. When the consultation arrangements have been decided, clause 27 of the OHS Regulation requires employers to record them and advise all existing and new employees.

##### 3.1.2 Consultation procedures

After setting up the consultation arrangements employers need to consider when and how these consultation arrangements need to be applied.

### 3.1.3 When should consultation be undertaken?

Under section 13 of the OHS Act, employers have the general duty to consult employees when decisions are being considered that may affect their employees' health and safety. Therefore, employers are required to consult with their OHS Committee, OHS Representative or other agreed arrangement when such decisions are being considered. Decisions which could affect health and safety include:

- planning for new premises or modifying existing premises
- purchasing new plant, equipment or substances
- planning, designing or changing work tasks or jobs
- using contractors in the workplace
- investigating incidents or accidents
- developing emergency procedures
- determining or reviewing workplace amenities
- determining or reviewing consultation arrangements.

**Note:** Any procedures that are developed to encompass these activities should incorporate consultation.

It may not be practical or reasonable to involve the OHS Committee or the OHS Representative in every purchase decision or task change. However, the employers and committee or representative should agree on what process is needed to ensure that affected employees are consulted.

### 3.1.4 How should consultation be undertaken?

When engaged in consultation, the OHS Act requires employers to:

- **share all relevant information with employees.** For example, if an employer is going to change a work task, employees need to be told of any risk to health and safety that may arise and what will be done to eliminate or control these risks.
- **give employees reasonable time to express their views.** Employees need adequate time to assess the information given to them, obtain relevant safety information and consult with fellow employees to enable them to form their views.
- **value the views of employees and take them into account when the decision is made to resolve the matter.** In many cases, agreement will be reached on how the safety issues are to be addressed. When agreement cannot be reached, the employer should explain how the employees' concerns have been addressed.

## 3.2 RISK MANAGEMENT AT THE WORKPLACE



**Employers and self-employed persons must identify any foreseeable hazards, assess their risks and take action to eliminate or control them.**

When addressing health and safety issues, besides consulting employees, employers must adopt the process of risk management. This process requires employers to:

### 3.2.1 Identify hazards

To ensure a safe and healthy workplace, employers must identify all the foreseeable health and safety hazards, which could harm their employees or other persons in the workplace. Hazards may arise from the work process, the equipment and materials in use, the work environment, or other people involved.

### 3.2.2 Assess risks

Once hazards have been identified the risk they pose to health and safety needs to be assessed. Some hazards pose a greater risk than others do, and the frequency and duration of exposure can also affect the risk. Risk assessment involves considering the likelihood and severity of injury or illness being caused by exposure to the risk. Therefore the factors that need to be considered in a risk assessment should include the:

- harm that can be caused by exposure to the hazard
- number of people and the duration and frequency of exposure to the hazard
- capability, skill and experience of people exposed to the hazard.

The risk assessment process provides information on the factors which contribute to the risk. This information will assist in determining what needs to be done to eliminate or control the hazard.

### 3.2.3 Eliminate or control the risk

The first responsibility is to investigate how the risk can be eliminated. Before implementing the control measures described in this Guideline, an employer should investigate possible strategies for eliminating the hazard from the work system.

If it is not reasonably practicable to do so, the risks associated with the hazard must then be controlled. This Guideline has been developed to provide advice on the most effective control measures.

### 3.2.4 Review risk assessment and control measures

Control measures should be reviewed on a regular basis. The frequency of their review should be determined by considering the significance of the risks associated with the hazard. However, a review should be undertaken in the following circumstances:

- new information is made available about the risks associated with the hazard
- an accident or incident occurs
- significant changes are proposed to the workplace or work system.

### 3.2.5 When must employers undertake risk management?

The OHS Regulation requires employers to incorporate the process of risk management into procedures.

These are the same activities for which employers are required to consult with employees.

### 3.2.6 Strategies for developing effective risk management procedures

When risk management activities are undertaken the following strategies should be considered to inform the process:

- visual checks through workplace inspections
- analysing the types of work being performed and the way work is performed
- inspections of plant and equipment
- analysing workplace records on accidents, incidents or 'near misses'
- risk management information provided by suppliers or manufacturers of equipment or, in the case of hazardous substances, Material Safety Data Sheets (MSDS)
- industry codes of practice for particular hazards or work processes
- Australian Standards, which set safety standards for a range of equipment products and materials
- guidance material from WorkCover NSW or industry or professional organisations.

Further advice is provided in the *Code of Practice: Risk Assessment*.

### 3.2.7 Personal protective equipment (PPE)

The use of PPE to control risks is lowest on the hierarchy of control measures. The measures at the lower levels are less effective and they require more frequent reviews of the hazards and systems of work. They should only be used when other control measures are impracticable or when, after implementing other controls, a residual risk remains.

- *PPE selection and suitability*

Where PPE is to be used it should be appropriate for the risk and comply with the relevant Australian Standard or WorkCover approval. Employees should be competent in the proper selection, use and maintenance of the PPE. There should be sufficient supervision and monitoring conducted to ensure PPE is used and employees are competent in its use. PPE should be regularly inspected, maintained and replaced as necessary.

- *Eye protection*

Dust, flying objects and sunlight are the most common sources of eye damage in excavation work.

Where persons are carrying out cutting, grinding or chipping of concrete or metal, or welding they must be provided with eye protection complying with AS/NZS 1337:1992 – *Eye protectors for industrial applications*. Eye protection complying with AS/NZS 1337 should also be provided where persons carry out other work, such as carpentry or handling of chemicals, where there is a risk of eye injury. Selection, use and management systems should comply with AS/NZS 1336:1997 – *Recommended practices for occupational eye protection*.



- *Hearing protection*

Where personal hearing protection is provided it should conform with AS 1270:1988 – *Acoustics – Hearing protectors*. Control measures including training should comply with AS/NZS 1269.3:1998 – *Occupational noise management – Hearing protector program*.

- *High visibility garments/safety reflective vests*

Persons working underground or near traffic, mobile plant or equipment under operator control, should be provided with and use high visibility garments. Such garments should be selected, used and maintained in accordance with AS/NZS 4602:1999 – *High Visibility Safety Garments*. Other clothing not covered by the high visibility garment should be light coloured and all garments should be selected for best contrast with the surrounding background.

- *Safety helmets*

The use of safety helmets may prevent or lessen a head injury from falling objects or a person hitting their head against something. Where there is a likelihood of persons being injured by falling objects and overhead protection is not provided, persons must be provided with and must use an appropriate safety helmet. Appropriate safety helmets should also be provided and used where a person may strike their head against a fixed or protruding object or where there is a risk of accidental head contact with electrical hazards.

All persons on excavation sites should wear head protection that conforms to AS/NZS 1801:1997 – *Occupational protective helmets* and be used in accordance with AS/NZS 1800:1998 – *Occupational protective helmets – Selection, care and use*.

- *Safety gloves*

Where there is a risk of hand injury, such as exposure to a harmful substance, excessive heat or cold, or to a mechanical device, hand protection appropriate to the risk and that complies with AS/NZS 2161:1998 – *Occupational protective gloves* should be provided and used.

- *Waterproof clothing*

Waterproof clothing provided as a system of work relating to weather or site conditions should be effective and suitable for the task. Waterproof clothing should also incorporate light reflective features in accordance with the requirements of the section above.

### **3.2.8 Incident reporting**

Hazards and OHS problems should be reported as soon as they are noticed so that the risks can be assessed and addressed as quickly as possible. Records of reported hazards should be kept and should include details of the action taken to remove the hazard or control the risk arising from the hazard.

The OHS Regulation also prescribes a number of workers compensation and OHS legal requirements concerning incident and injury reporting.

### 3.2.9 First aid



The OHS Regulation requires that employers must provide first aid facilities that are adequate for the immediate treatment of injuries and illnesses that may arise at the place of work and, if more than 25 people are employed, trained first aid personnel.

To ensure adequate first aid provisions, employers must identify their potential problems, assess their requirements and consult with employees in the process.



When determining the nature, number and location of first aid facilities and the number of trained first aid personnel, employers must take into account the location and type of work being undertaken. The type of work performed will influence the hazards and the possible harmful consequences for employees. For example, office workers will have different first aid requirements from construction workers. Workplaces using hazardous substances may require specialised first aid facilities, such as eyewash stations and emergency showers. The risk assessment process will assist in identifying the particular needs of the workplace.

Further information regarding such matters as contents of first aid kits, who qualifies as 'trained first aid personnel', and other requirements relating to first aid rooms, consult the OHS Regulation or the *First Aid in the Workplace Guide*.

#### 3.2.10 Emergency response



The OHS Regulation specifies that an employer must ensure that, in the event of an emergency at the workplace, arrangements have been made for:

- the safe and rapid evacuation of persons from the place of work
- emergency communications
- appropriate medical treatment of injured persons
- appointment of appropriately trained persons to oversee any such evacuation and, if appropriate, the use of on-site fire fighting equipment.

#### 3.2.11 Record keeping



The OHS Regulation requires records to be kept in the following areas:

- induction training
- hazardous substances
- confined spaces
- plant
- electricity
- asbestos
- atmospheric monitoring
- notification of accidents.

Refer to the relevant chapters of the OHS Regulation for further information.

# ***DON'T RISK IT***



- Dial Before You Dig is a free referral service for receiving information on underground pipes and cables before you start work.
- All major utilities are members including Energy Australia, Integral Energy, Telstra, Optus, Alinta and Sydney Water.
- Digging without maps means exposing yourself and your contractors to danger.
- Unexpected cable strikes can slow your job down.
- Damage to underground utilities can affect your insurance.

**Visit [www.dialbeforeyoudig.com.au](http://www.dialbeforeyoudig.com.au) any time**

**Dial [1100](tel:1100) between [8am](tel:1100) and [5pm](tel:1100) on working days**

**Fax [1300 652 077](tel:1300652077) anytime**

## ***THIS IS A FREE SERVICE***

## 4. ACCURATE INSTALLATION AND INFORMATION

### 4.1 INTRODUCTION

Asset owners are required to capture and maintain accurate and up-to-date (as built) records of their underground assets.

When planning a job requiring excavation, a complete record search must be undertaken by lodging an enquiry with the central call service 'Dial Before You Dig'. Asset owners who are not members of this service must also be contacted. When an asset location is requested, asset owners may provide information on the recommended practices for work near that location or asset.

Lodging an enquiry with 'Dial Before You Dig' is as simple as visiting [www.dialbeforeyoudig.com.au](http://www.dialbeforeyoudig.com.au), phoning 1100 or faxing an enquiry to 1300 652 077. Once the records are obtained, they should remain in the work area and be accessible to all. When carrying out emergency work, every effort should be made to obtain records as soon as possible. If work must commence prior to the records being obtained, it should be carried out on the basis that underground assets are present even if an Electronic Service Detector gives the 'all clear'.

It should be also remembered that as technologies and work practices change over time, features such as the presence of warning tape may not be where you expect (see Table A). For example, the majority of telecommunication assets at joint locations are now housed in pits or manholes. However, the line between these may not be straight if obstructions were encountered during installation. Direct buried cable in rural areas may be identified by pits/manholes and marker posts. However, it cannot be assumed that a cable follows a direct path between these items.

**WARNING:** Asset owners' plans may not show the presence of all cables, pipes and plant. They may only show their position relative to road boundaries, property fences etc at the time of installation and the asset owners do not guarantee that such plans are accurate thereafter due to changes that may occur over time.

**Do not assume depth or alignment** of cables as these vary significantly. For example, road and building alignments and levels may change.

### 4.2 ENSURING ACCURACY OF PLANS AND RECORDS

Asset owners shall have a system of work which ensures the accuracy of plans. The system of work should be included in the asset owners' audit processes.

Improving the accuracy of existing asset plans relies on cooperation between asset owners and contractors. If during work activities, underground assets are found to be not on the plans or are in a different location, contact should be made with the source of the plans to notify of the missing information.

### 4.3 UNDERGROUND ASSET OWNERS INCLUDE:

- electricity generation, transmission and distribution
- rail
- Roads and Traffic Authority
- local authorities
- telecommunications
- private (eg privately owned water pipelines)
- gas transmission and distribution
- petrochemical (oil, petrol, LPG etc)
- oil
- water
- drainage
- sewerage.

(See Table A).

### 4.4 ELECTRICITY CABLES

#### 4.4.1 Cable records

Cable records are in the form of plans drawn to scale or on computer based Geographic Information Systems (GIS).

The detail of the records will vary with the type of installation. For cable installed in a standard allocation, the records may provide only general cross sectional arrangements of cable and conduits together with road crossing and street lighting information.

It is common practice to negotiate a special alignment on the roadway for high voltage transmission cables. For this type of installation, the records are more detailed with reduced level and offset information provided. The details of local area distribution and of transmission cables are typically shown on separate plans.

Older installations may not be accurately recorded or reference details may have changed.

#### 4.4.2 Cable installation

The cover for underground electricity cables and underground control cables may vary in depth. Always assume a cable may be present. See Table B.

**Note:** Underground electrical cables are not necessarily covered with slabs, marker tapes or other indicators of their presence and are frequently not enclosed in conduits. Some underground electrical cables may have been encased in bitumen. Hence a full risk assessment must be undertaken prior to carrying out any excavation work so as to accurately establish the exact locations of underground electrical cables.

#### **4.4.3 Cable ancillary equipment**

Associated with many cable installations are ancillary assets and pits. These may include cable joint pits, cable link pits, oil or gas pits, inspection pits and other ancillary pits. These pits will have cables or pipes that connect them to the main cables and care should be exercised when excavating between the cables and the ancillary pits. The presence of ancillary pits shall be confirmed with the electricity asset owner prior to any work.

### **4.5 GAS PIPES**

#### **4.5.1 Gas reticulation systems**

Several methods of gas reticulation are used, from low-pressure services through to transmission systems. These systems have been constructed from materials including coated welded steel, cast iron, and a variety of plastics. In most areas, the systems are buried directly in a suitable stone-free backfill. The systems are not designed to resist the impact of tools or mechanical plant or to be left unsupported over any great distance. The operating pressures range from as low as 2kPa up to as high as 15MPa for a transmission pipeline system.

#### **4.5.2 Pipe records**

The records for all high and low pressure gas distribution mains are maintained in the form of plans drawn using Computer Aided Design system (CAD). The detail of the records will show the size of pipe and the type of material, changes in direction. Please note gas consumer services are generally not shown on plans. High-pressure transmission pipelines are generally located within a pipeline easement, therefore records of these pipelines are in the form of alignment sheets specific to the individual pipeline.

The location of high and low-pressure distribution mains on the plans are shown at a nominal distance from the building line. The actual pipe alignment will be shown in text as an offset distance in metres from the Building Line (MBL) – also could be known as the ‘property boundary’. When locating gas distribution pipes always reference the offset distance from the building line as minor changes in alignment will not be shown graphically.

#### **4.5.3 Pipe installation**

Most pipes laid in recent years may have a marking tape or polymeric plastic slab laid above the pipes for identification when excavating. However, these tapes or slabs may have been damaged by other excavations in the area since the initial construction and not replaced. For location purposes, plastic pipe may have been laid with a trace wire to enable the main to be located using a cable locator. Again, it is important these tracer wires are not interfered with or broken, as it makes future location of these pipes very difficult. If you do break the trace wire, please ensure that the wire is rejoined and coated with electrical tape. Steel mains and pipelines will not have a trace wire as they are metallic and can be detected. Other structures, such as siphon points, valve pits, regulator pits and other varied components may be installed in the pipeline. Care needs to be taken to locate these before excavation.

While the plans may show the expected location of underground distribution mains, consumer services are not shown. Properties should be checked to ascertain whether gas meters are present. If so, the services normally run at right angles to the distribution main to the service connection at the meter. However, it cannot be assumed that a pipe follows a direct path between these items. Be aware the consumer service may receive its supply from a distribution main on the opposite side of the road. The installed depth of consumer services varies – refer to Table B. In circumstances where the correct depth of cover has not been achievable, mains and services may be encased in concrete or laid in copper pipe.

All high-pressure steel distribution mains and transmission pipelines have corrosion protection systems. These systems form part of the pipeline and incorporate the protective coating, test points and galvanic anodes at various points along its length. If these are broken or damaged, it should be reported to the gas utility immediately. They are easily rectified but can be extremely difficult to locate if the damage is not reported.

## **4.6 WATER AND SEWER PIPES**

### **4.6.1 Pipeline types**

Cast iron and steel pipes are often joined with lead. These and asbestos pipes are easily disturbed and brittle. Mild steel and ductile cast iron pipes have external protective coatings which, when damaged, significantly reduce the life of the pipes. Copper pipes are very soft and easily compressed or bent without necessarily breaking, but their flow capacity can be significantly reduced. Recycled water areas have dual pipe and service systems.

The water supply system in residential areas has traditionally formed part of the multiple earth neutral (MEN) system of the electricity distribution network. More recent use of PVC and polypropylene materials may adversely impact the MEN system. Refer to Section 5 for more information.

### **4.6.2 Depth and location**

Water authorities, developers and local councils maintain records of pipeline locations.

As with other assets, there can be great variations in pipeline depths, depending on their age and the amount of surface reconstruction over the years. More recently, some water assets have been co-located with other assets in shared trenches. This raises the potential problem of simultaneous damage to several assets.

Some pipes may be encased in concrete to provide added support and protection.



#### **4.7 TELECOMMUNICATION CABLES**

Telecommunications cables developed for underground installations have changed in line with technology requirements.

Plans provided by Telstra are circuit diagrams only and indicate the presence of telecommunications plant in the general vicinity of the area shown. Due to the nature of the Telstra plant and the age of some cables and records, it is impossible to ascertain the location of all Telstra plant from plans. Telecommunications plant seldom follow straight lines and careful on site investigation is essential to uncover and reveal its exact position.

#### **4.8 ABANDONED AND RETIRED UNDERGROUND ASSETS LEFT IN-SITU**

In cases where assets are no longer to be utilised and are to be left in-situ, they are to be disconnected and/or filled, capped, plugged or otherwise rendered safe to avoid any future problems.

All such assets shall be consistent with the following points:

- treated as in-service unless otherwise positively proven out of service
- marked accordingly on the appropriate asset record
- if out of service retired or abandoned assets etc are to be interfered with, the owner of the asset should be contacted and arrangements made to locate the asset
- an asset shall not be used by others without prior agreement with the asset owner. This is so that both organisations' records can be updated
- where an asset is inserted inside an out of service, retired or abandoned conduit, pipe or duct, the records shall show this information
- if assets are sold or disposed of to another owner, then both organisations records should show such information.

4.9      **TABLE A: THE INSTALLATION OF VARIOUS TYPES OF UNDERGROUND ASSETS**

Assets have been installed underground over the last 150 years. Therefore you may come across a large range of pipe and cable materials, their installation technologies and protection barrier methods. The table below gives an overview of these different techniques. It is not a complete list and it should be remembered that you may come across underground assets that have no barrier protection or other indication of their presence, for example underbores.

Utility/Industry	Asset	Traditional Techniques	Current Techniques	New Technologies
<b>Electrical cables</b> (power, rail and tram)	Transmission: Extra High Voltage (EHV)	Buried direct, conduits (orange PVC), ductlines, concrete encased, fibro asbestos cement, steel, earthenware or encased in bitumen	Direct burial in trench, ducts	Trench-less technology including directional drilling
	Distribution: High Voltage (HV) and Low Voltage (LV)	Protective covers	Some thrust boring across roads	Conduits installed by directional drilling. Variations in alignment and depth may occur. Multiple conduits can be installed using this method
	Supervisory and signalling cables	bricks/tiles, terracotta, concrete, polymeric	Marker tape – polymeric	
		Marker tapes – polymeric	Protective covers – polymeric and concrete	
		May be direct buried	Surface markers	
	Cathodic protection		Nil	
	Earthing rods and conductors	Direct buried	Direct buried	
	Conduits and ducts	Orange PVC	Orange PVC	
	Power poles and lattice towers	Risk assess to ensure that 1) structure will not be undermined and 2) cable is not coiled around base of pole		
<b>Gas pipelines</b>	Transmission	Coal tar enamel (warning contains asbestos) coated steel pipe Blue polyethylene coated steel pipe	Yellow polyethylene coated steel pipe Red fusion bonded epoxy coated steel pipe Construction techniques included trenching, cased boring, horizontal directional drilling	

Utility/Industry	Asset	Traditional Techniques	Current Techniques	New Technologies
	Distribution High Pressure	Blue polyethylene coated steel pipe Yellow polyethylene coated steel pipe	Yellow polyethylene coated steel pipe Construction techniques included trenching, cased boring, horizontal directional drilling	High density polyethylene yellow stripe/black pipe
	Distribution Low Pressure	Tar coated wooden pipe Cast iron pipe Blue PVC pipe	Yellow nylon pipe Medium density yellow polyethylene pipe High density polyethylene black and yellow stripe pipe Insertion of disused cast iron pipe with nylon or polyethylene pipe Construction techniques included trenching, cased boring, horizontal directional drilling	
	Consumer services	Cast iron pipe Galvanised steel pipe	Yellow nylon pipe Medium density yellow polyethylene pipe High density polyethylene yellow stripe/black pipe Insertion of disused cast iron or galvanised pipe with nylon or polyethylene pipe Construction techniques included trenching, grundamat boring, horizontal directional drilling	

Utility/Industry	Asset	Traditional Techniques	Current Techniques	New Technologies
Water mains and services	Pipes 15 mm to 3000 mm, valves, hydrants, chambers	Cast iron, steel, cement coated steel, asbestos cement, copper, glass reinforced plastic ductile iron, polyethylene, PVC or concrete encased steel or ductile iron	Pipes usually installed by trenching Pipe cracking and slip lining renewal technique also used Some directional drilling Some thrust boring across roads Surface fittings for access and operation Chambers for valve access	Dual supply mains and services in recycled water areas
	Property connections	Service connections to properties are usually copper in smaller sizes and iron or steel in larger sizes (fire services and industrial)		Dual supply mains and services in recycled water areas
Sewerage mains and services	Pits pipes 15 mm to 1800 mm, tunnels, valves, connections	Cast iron, mild steel, cement lined steel, asbestos cement, copper, glass reinforced plastic, ductile cast iron or PVC, vitreous clay	Pipes installed by trenching Sewer re-lining or replacement using trenchless technologies (eg pipe cracking and slip lining)	On site treatment and reuse systems Jointless systems
Stormwater, grey water and drainage pipelines and services	Pits pipes 15 mm to 1800 mm, tunnels, shafts	Cast iron, mild steel, cement lined steel, asbestos cement, copper, ductile cast iron or PVC reinforced concrete	Installation generally by trenching	

Utility/Industry	Asset	Traditional Techniques	Current Techniques	New Technologies
Communications cables	Phone lines	<p>Fibro asbestos cement (FAC) pipes and ducting. Galvanised iron (GI) pipe – various diameters</p> <p>Rocla concrete pipes</p> <p>Earthenware pipe</p> <p>Tunnels – Sydney CBD and servicing some other major telephone exchanges</p> <p>White PVC pipe 10 mm to 100 mm internal diameter</p> <p>Black PVC</p> <p>Directly buried cables PVC or armored steel sheath</p> <p>Polyethylene</p>	<p>Because of the long operational life of conduits, cables providing new technology services are often hauled into existing conduits</p> <p>All new standard conduit installations are white PVC of internal diameter 20 mm – 100 mm.</p> <p>Galvanised iron (GI) conduits are used for special purpose applications</p> <p>Conduits installed by directional drilling.</p> <p>Variations in alignment and depth may occur. Multiple conduits can be installed using this method</p> <p>Direct drilling technologies</p>	Conduits installed by directional drilling. Variations in alignment and depth may occur. Multiple ducts can be installed using this method
	Co-axial, data and signalling cables	As above	As above	
	Broadband, copper and fibre optic cables	As above	<p>As above</p> <p>Directly buried fibre optic cables will generally have been installed with marker tape above the cable containing a metallic wire</p> <p>Fibre Optic cables in conduits are installed by directional drilling technologies. They do not have marking tapes installed above the cable. In this case there may be no metal marking tapes installed</p>	

Utility/Industry	Asset	Traditional Techniques	Current Techniques	New Technologies
	Conduits and ducts	As above	As above	
Oil transmission pipelines and valves	High Pressure (above 1050 kPa) Regularly signposted	Coal tar enamel (warning contains asbestos) coated steel pipe  AS 2885-1997 . <i>Pipelines for Gas &amp; Liquefied Petroleum</i>	Yellow polyethylene coated steel pipe	
Privately owned pipelines	Chemical	Mostly similar to oil and gas transmission pipelines above (WorkCover Dangerous goods pipelines) Regularly signposted.		

**Note:** It is essential to treat a cable or pipe as high voltage or high pressure until it has been positively identified as being otherwise.

## 5. HAZARD IDENTIFICATION

### 5.1 SAFETY INFORMATION

Consideration must be given to the safety of individuals and the community, especially to provide adequate safety barriers and safe pedestrian access around the worksite. Additionally, PPE applicable to the particular operation must be used.

Excavation within the zone of influence may destabilise the underground asset or supporting structures resulting in damage to the asset.

#### 5.1.1 Some of the dangers when working near underground assets

- *Gas*

Damage to gas assets can cause gas escapes which may lead to fires or explosions if an ignition source is present. There are two types of leaks following damage to the asset:

  - damage which causes an immediate escape. In this case, there is a risk to those working at the site
  - damage which causes an escape some time after the incident. This may be through damage which weakens the asset casing or the result of poor reinstatement practice. In this instance, the public is mainly at risk.
- *Electricity*
  - an injury resulting from damage to live electricity cables is usually caused by electric shock or the explosive effects of arcing current and by the fire or flames which may follow when the sheath of a cable is penetrated by an object. Damage and injury may also occur if the cable is crushed or contact is made between the individual phases of a cable. The presence of gas or a mixture of gases in a trench could be ignited by an electrical charge or an electrical arc resulting in a fire or explosion, the severity of which depends on the gaseous mixture
  - gas can be present in the ground due to gas pipe damage or leakage, sewage pits, chemical reactions or leaching and the accumulation of airborne gases in low lying areas. Gas can also be introduced by the nature of the work being undertaken such as oxy-acetylene cutting or chemical grouting
  - consideration should be given to conducting a risk assessment to determine if a trench or the work constitutes a confined space.
- *Petroleum or oil pipelines*
  - the result of damaging these assets is similar to that of gas assets. However, there is the additional risk of significant environmental issues such as contamination of waterways.
- *Water pipes and sewers*
  - some pipelines transport water under high pressure. Some older water pipes are also made from asbestos cement. Damaged water pipes have great potential to affect other assets and structures, either directly or by washing away their supports ie thrust blocks



- the main danger from sewer damage is the contamination of a broken water main or asset, damage to the environment or disease from exposure to sewage. Some sewer lines are high pressure. Toxic and explosive gases may also be present in both sewer lines and stormwater drains
- persons working on metallic water pipes are at risk of electric shock due to an electrical fault near a customer's premises or a mains neutral fault in the street. Metallic water pipes are usually bonded to the electrical earthing system and are a path of low resistance. Stray electrical current will often flow through the bonded metallic water pipe. When the pipe is cut or disconnected, either side of the pipe could become live causing a person to receive a serious or fatal electric shock. The consumer is also at risk of an electric shock under the same circumstances.
- *Telecommunications*
  - consequences could be the isolation of whole communities, disruption of interstate and international telecommunications, inability to contact emergency services, loss of telephone, mobile phone, data and television services
  - cables containing optical fibres carry light signals generated by Class 3B lasers that can cause injury to the eye. This infra-red beam is invisible to the naked eye and exposure to it should be avoided. Small optic fibre particles are capable of entering the bloodstream causing injury or death.
- *Pipelines containing hazardous substances and dangerous goods.*


#### **5.1.2 Safety considerations for Low, High or Extra High Voltage electrical cables**

- High voltage (HV): same as for low voltage except the approach distances are variable. For more information refer to Table B.
- Extra high voltage cables (EHV): all work in the vicinity of extra high voltage cables must be undertaken with the consent and under the supervision of the asset owner. Contact with extra high voltage electric current will result in serious burns and/or death. For more information refer to Table B.
- Notwithstanding any guidance on the use of blasting as a means of excavation, where blasting is to take place within 200 m of an underground asset, the asset owner should be contacted for any special requirements.

#### **5.1.3 Electrical earthing of metallic pipes**

Prior to the removal or the repair/replacement of metallic piping, workers must ensure that an effective electrical bond across the break is maintained at all times.

5.2 TABLE B: TYPES OF ASSETS AND LIMITS OF UNDERGROUND APPROACH

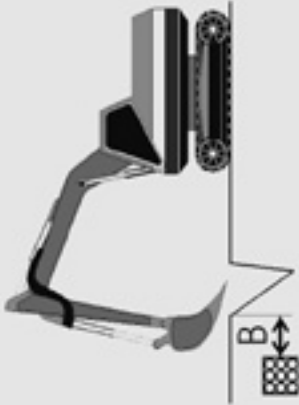Assets	Clearances	No Go Zone For Powered Excavation	Controls	Typical Depths
Types of underground assets <b>(Note:</b> The owners of assets registered with the Dial Before You Dig service and covered by this Guideline require an enquiry through this free service and the compliance with any directive issued with information regarding the asset)	The minimum approach distance for individuals carrying out work near underground assets	<p>Distance 'B' is the minimum approach distance for powered excavating machines</p>  <p>For directional boring across the line of an asset a minimum clearance of <b>300 mm</b> from the asset shall be maintained</p> <p>For directional boring parallel to the asset and at the level of the asset, a clearance of <b>500 mm</b> shall be maintained from the edge of the nearest asset. It may be necessary to dig trial holes to prove the location of the nearest asset at points along the route. See Section 6.10</p>	<p>If the risk assessment identifies a potential risk of making contact with both underground and overhead assets, two safety observers would be required. One observer to ensure that the machinery maintains a safe distance from underground assets, the other observer to ensure a safe distance from the overhead powerlines</p> <p>In the case of gas or electricity assets, an appropriate fire extinguishing system must be at the worksite</p> <p>If the width and/or depth of the excavation will expose the asset, the asset owner must be contacted prior to commencing work</p>	

Assets	Clearances	No Go Zone For Powered Excavation	Controls	Typical Depths
Low and Medium Pressure services and Low pressure mains	N/A	300 mm	<p>Pot-hole to confirm location of service</p> <p>The position of the asset will not appear on the maps</p>	300 – 450 mm
Medium Pressure mains	N/A	300 mm	<p>Pot-hole to confirm location of asset</p> <p>The code of practice for shafts, tunnels and trenches, and the guide to dangers of poorly ventilated workplaces</p> <p>Only one individual at a time should be excavating if hand excavation is being undertaken in a confined space. Another should act as an observer and be able to operate any breathing, escape or fire equipment required</p> <p>The elimination of an ignition source in the event of an escape</p> <p>Excavation below underground assets should not be undertaken within a distance of <b>300 mm</b> below the asset located at the lowest level</p> <p><b>Note:</b> All transmission pipelines involving gas, oil and petrochemical have separate requirements and the asset owners should be contacted.</p>	450 – 750 mm

Assets	Clearances	No Go Zone For Powered Excavation	Controls	Typical Depths
High Pressure services, mains and pipelines	<b>300 mm</b> with hand tools and supervision from Network Authority	<b>1000 mm</b>	Powered excavation within 300 – 1000 mm is only permitted under supervision and with a Permit to Work from Asset Owner  Also see <b>Controls</b> for medium pressure mains immediately above	<b>750 – 1200 mm</b>
Low Voltage Electricity cables – voltages less than or equal to 1000V (1kV)	Close proximity with use of hand tools	<b>300 mm</b>	Must contact asset owner for specific conditions	<b>450 – 750 mm</b>
Electricity conductors from 11,000V (11kV) up to 33,000V (33kV)	Close proximity with use of hand tools	<b>600 mm</b>	Must contact asset owner for specific conditions	<b>900 mm</b>
Underground sub-transmission cables 33,000V up to 132,000V (132kV)	Must contact asset owner	Must contact asset owner	Must be carried out under the supervision of the asset owner	<b>900 mm</b>
High Voltage Electricity cables – voltages from 1000V (1kV) up to 33kV	Close proximity with use of hand tools	Must contact asset owner	Must contact asset owner for specific conditions	<b>600 – 1000 mm</b>
Extra High Voltage Electricity Transmission cables – voltages above (132kV) and 330,000V (330kV)	Must contact asset owner	Must contact asset owner	Work must be carried out under the supervision of the asset owner	<b>800 – 1200 mm</b>
Telecommunications cables	Contact asset owner for specific conditions	Contact asset owner for specific conditions	Must contact the asset owner for specific conditions	Typically <b>450 – 600 mm</b> , other assets to <b>1200 mm</b>
Water pipelines	N/A	<b>300 mm</b> (if pipeline is <b>200 mm</b> or greater in diameter)	Pot-hole to confirm location of asset	Min <b>450 mm</b>
Sewerage pipelines	N/A	<b>300 mm</b> (if pipeline is <b>200 mm</b> or greater in diameter)	Pot-hole to confirm location of asset	Between <b>600 mm</b> to <b>10 (ten) metres</b>

### 5.3 ON-SITE CHECKING

Prior to any excavation work, check at least 100 m along the footpath in each direction and around nearby corners for indications of existing assets. These include:

- indicators or markers for underground assets, drainage pits and manhole covers
- damaged footpaths, driveways or depressions which may indicate the presence of a trench
- cables running up a pole
- overhead cables near the worksite
- control cabinets
- no overhead wires to a building or premise
- above ground connection cabinets
- transformers for cathodic protection on power poles
- light poles without an overhead service
- service pits for gas, water, electricity, communications, sewerage and drainage connections
- down pipes or vent poles
- underground storage tank fill points and venting systems
- kerb markings
- water valves
- fire hydrants and plugs
- sprinkler systems
- road repairs
- trap doors or access-covers for:
  - access to underground electricity substations
  - access to cable jointing pits or tunnels
  - access to sewerage or stormwater trunks
  - access underground gas regulators, siphons and valve assemblies
  - access to shafts
  - link box pits, oil tank pits and other ancillary underground pits.
- domestic service pits
- gas or water meters
- electricity pillars and meter boxes
- any other signs out of character with the surrounding area such as a clearing for an easement.

If such indications exist, the asset must be located by hand or another approved method.

## 5.4 PLAN OR DRAWING READING

Although each asset owner may have their own type of plan, with special notations and legends, the basic principle of map reading can be applied.

Telecommunications plans, and in some cases electrical plans, may provide a detailed representation of the asset or network. When reviewing the information:

- identify the streets or buildings nearby and position yourself so the streets correspond with the plan/s
- use the scale and measurements indicated on the plan/s to pinpoint your exact location
- remember, drawings may NOT be to scale
- many plans reference the asset location from an adjacent property alignment
- determine if measurements are metric or imperial, or a combination of both
- identify nearby pipes or cables and mark their recorded location
- cross-reference any supplementary plans or details
- identify any of the items listed below and assess their relationship to each other to determine if a measurement has altered:
  - building lines
  - pits and poles
  - offsets
  - turning points.

**Note: Inaccuracies can and do occur, both on plans and in the ground. If in doubt, check with the asset owner. Never guess or assume!**

Asset owners' plans show only the presence of some cables, pipes and plant. They only show their position relative to road boundaries, property fences etc at the time of installation and the utilities do not warrant or hold out that such plans are accurate thereafter due to changes that may occur over time. DO NOT ASSUME DEPTH OR ALIGNMENT of cables or pipes as these vary significantly. For example, road and building alignments and levels may change.

## 6. MANAGING THE RISKS

### 6.1 MANAGING RISKS IN THE WORKPLACE



Employers and self-employed persons must identify any foreseeable hazards, assess their risks and take action to eliminate or control them.

A hazard identification and risk assessment process must be carried out at the planning and preparation stage by the employer/contractor doing the work to determine what risks may arise when the work is being carried out. Safe systems of work must then be put in place to eliminate or control these risks. For tunnel construction work the safe system of work must also be documented in a Safe Work Method Statement (SWMS).

#### 6.1.1 Monitor and review risk assessments and control measures



The OHS Regulation states that employers must review risk assessments and measures adopted to control risks whenever:

- there is evidence that the risk assessment is no longer valid
- an injury or illness results from exposure to a hazard to which the risk assessment relates
- a significant change is planned to the place of work, work practices or work procedures.

#### 6.1.2 Safe work method statements (SWMS)



The OHS Regulation requires SWMS where the cost of the work undertaken exceeds \$250,000 or for defined high risk construction work. Construction work in tunnels is defined as high risk construction work, so tunnelling work requires a SWMS.

The SWMS:

- describes how the work is to be carried out
- identifies the work activities assessed as having safety risks
- identifies the safety risks
- describes the control measures that will be applied to the work activities. It also includes a description of the equipment used in the work, the standards or codes to be complied with, the qualifications of the personnel doing the work and the training required to do the work.

A SWMS requires the work method to be presented in a logical sequence. The hazards associated with each process are to be identified and the measures for controlling these hazards specified.

Break down each job into a series of basic job steps to identify the hazards and potential accidents in each part of the job. The description of the process should not be so broad that it leaves out activities with the potential to cause accidents and prevents proper identification of the hazards.



Employees of the workforce should be involved/consulted in the development and implementation of any SWMS.

All persons involved in carrying out the work should understand the SWMS before commencing the work.

### **6.1.3 Consultation with relevant parties prior to commencing work**

The planning before the start of work, which may affect a utility asset, must include but not limited to:

- consultation with local councils
- consultation with asset owners to obtain agreement on the use of out of service, retired or unused assets
- advising affected residents/occupants
- obtaining permit requirements and conditions for undertaking the works
- identifying and determining exact location of assets
- establishing methods to be adopted to protect existing assets
- further consultation as required by the scope of works
- consultation with 'Dial Before You Dig' and the asset registers of other infrastructure owners not registered with 'Dial Before You Dig'
- consultation with roads authority (eg RTA, local council or private body)
- consultation with local councils in terms of storm water assets and work in council owned roads.

Where underground assets exist, the precise location of the assets shall be established in conjunction with the asset owner by pot-holing (or equivalent non-destructive asset location techniques) prior to the principal excavation commencing.

Consideration must be given to the presence of private property assets eg telecommunications, gas, stormwater, sewerage and water assets. These private property assets are unlikely to be found on any plans and are best identified by a visual on-site inspection.

The use of an Electronic Service Detection Device to survey the ground for buried pipes and cables, before commencing excavation, should be considered.

The close out process of the project or scope of work may typically involve recording the 'as constructed' diagram of the asset and providing this record to the appropriate agency with details of:

- finished surface level
- depth of asset
- alignments from property boundary and/or kerb etc
- type of cover or warning device installed eg warning tape, concrete slab, mechanical polymeric protection strip etc
- new ownership details of the asset
- assets retired, removed, declared out of service etc
- type, size, location and installation method of assets

- surface and underground markings installed
- advice to any authorities, agencies etc on the completion of the project or scope of works
- cancellation of any permits, authorities etc
- the provision of a copy of the asset plans to the new owner.

For more information on how to safely dig near an asset, specific information is provided on the Telstra website via the following link [www.telstra.com.au/dialb4udig/digging.htm](http://www.telstra.com.au/dialb4udig/digging.htm)  
Excavation with hand tools shall be carried out carefully up to but not closer than the minimum distances specified in Table B.

#### **6.1.4 Planning and liaising with other authorities**

When planning, it is important to discuss and consider the following areas:

- existing utility assets
- duration of the project and scope of works
- future planned assets
- opportunities for coordination of works
- shared trenching opportunities
- thermal impacts on EHV electricity assets
- changing ground surface levels
- installing heat sources (eg other electricity assets)
- creating underground voids (eg stormwater assets)
- changing backfill materials
- possible limitations in information available
- opportunities to improve information availability
- effect on traffic
- opportunities to isolate or relocate existing assets
- provision of visual identification devices
- asset owner and other authorities' concerns, conditions and expected working procedures
- any requirement/s for the worksite involving:
  - access to assets
  - permit conditions
  - recording of infrastructure, assets locations or relocations
  - financial costs
  - individual, asset or community safety
  - worksite and traffic management requirements and railway safety management requirements
  - reinstatement requirements (this liaison is in addition to the statutory notification required by legislation).

**Consideration must be given to the operation of heavy plant over potentially fragile underground assets.**

## 6.2 RAILWAY ASSETS

Rail easements have numerous electrical power, signalling, communication cables, compressed air and drainage lines that are owned and maintained by the Rail Authority. These assets vary in type of construction and are documented to various degrees of accuracy.

Numerous utility service providers and other private parties also jointly use the rail easement. Access to the rail easement is strictly regulated by the requirements of AS 4292.1: 2006 and AS 4799: 2000.

Access to information relating to the location of the various rail assets is issued on application.

## 6.3 SERVICE TUNNELS

Many utilities own or share service tunnels. These will have shafts plus manholes at the surface or other surface infrastructure supporting the tunnel environment.

## 6.4 EXCAVATION AND TRENCHING

To maintain essential structural support and the protection of other existing assets, excavations in the vicinity must not disturb the embedment around each asset (see Table B for minimum approach distances and to identify if the asset owner must be contacted for specific approach conditions). This information should be supplied by the asset owner through a 'Dial Before You Dig' request. Where this is not possible, the relevant asset owners must be consulted and their permission first obtained.

- If a cable or pipe is exposed, the contractor must ensure that any angular material such as rock or gravel does not mix into the embedment material
- Excavations in any easement must be backfilled, compacted and re-sealed to the appropriate Authority's standard at the completion of excavation
- Temporary restorations in roads and footways must be of sufficient quality to ensure the safety of pedestrians and vehicles until the final restoration is undertaken. Temporary restorations must be regularly checked by the responsible party to confirm their integrity
- Refer to NSW Code of Practice, *Excavation*
- Refer to:

AUS-SPEC 306U *Road Openings and Restoration* (2004 and earlier additions)

AUS-SPEC 7200 C0219 *Construction – Roadways – Road openings and restorations for utilities* (2007).

## 6.5 ASSETS NEAR BRIDGE APPROACHES

Often underground assets will be congested at the approach to bridges. Assets' typical depths may vary substantially, rising and falling sharply and at much shallower depths than elsewhere as they are channelled into shared allocated spaces on the bridge. Road safety barriers are often very close to heavily congested services at the approaches to bridges. Construction staging and footing design for such barriers should consider impacts on assets and, where possible, construct barriers prior to constructing the assets.

## 6.6 ASSETS AROUND POLES

Unless otherwise agreed, underground assets and other obstructions around poles are to be kept a minimum distance of 300 mm from the periphery of the pole, to allow inspections by asset owner staff.

No excavation within 10 metres of a Single Wire Earth Return (SWER) transformer pole is to occur without the approval of the local electricity asset owner.

It should be noted that the NSW Service and Installation Rules require a sketch of the underground service/consumers mains to be marked inside the switchboard.

## 6.7 TRAFFIC CONTROLS

All work carried out on RTA NSW controlled roads must be done in accordance with the RTA's *Traffic Control at Work Sites Manual*. As this manual is considered to be the benchmark for traffic control in NSW, **all** works carried out within the road corridor or on adjacent pathways should be conducted in accordance with this manual.

## 6.8 EMERGENCY WORK

While there will be times when, due to pressing requirements, the timeframe for starting work will prevent some of the normal controls from being completed, this will not diminish the responsibility of worksite controllers to do everything that is reasonable and practical that is within their power to ensure the health, safety and welfare of persons affected by their actions.

## 6.9 VERTICAL BORING

For any boring within 500 mm of an underground asset, the location of the asset/s shall first be proved by careful hand digging (pot-holing) or equivalent asset location techniques and:

- a minimum clearance of 300 mm from the edge of the underground asset shall be maintained for pole hole boring
- lead in excavations shall be used.

**Note:** All transmission assets including EHV electricity cables, pipelines involving gas, oil and petrochemicals have separate requirements and the asset owners should be contacted.

## 6.10 DIRECTIONAL BORING

- When boring across the line of an underground asset, the location of the asset/s shall be positively proven by hand digging (pot-holing) or proven by another approved method.
- All transmission pipelines involving gas, oil and petrochemicals have separate requirements and the asset owners should be contacted.
- For boring under electricity cables, it is necessary to excavate a slit trench beside the cables to confirm the depth of the cables and ensure the drill is not within the minimum approach distance of the cable specified in Table B.

- Additional precautions and clearances are required for directional boring near or beneath sub-transmission cables, normally located in roadways. If the bore is to pass within 2 metres of any electrical cable or conduit the asset owner must be notified as the clearances for HV and EHV may be significantly greater.

See Table B for further information on clearances.

### 6.11 MECHANICAL EXCAVATING PLANT

Reference should be made to WorkCover's *Moving Plant on Construction Sites* code of practice.

Mechanical excavating plant may be used with care up to, but not closer than, the minimum distances as specified in Table B.

- Where the excavation is being carried out parallel to or across underground asset/s, location of the asset/s must be proven by careful hand tool excavation (pot-holing) or another endorsed method used to positively locate the asset prior to mechanical excavation.
- If an excavation must exceed the depth of the asset and will disturb the protective cover, slab, other asset/s or the bedding material around the asset/s, the asset owner/s must be contacted to determine if the asset/s is to be relocated.
- Excavations must be reinstated to comply with the asset owner's requirements.
- **Where plant is required to operate over underground assets, such as in major road reconstruction, the clearances as specified in Table B must be maintained. Alternatively, if Table B cannot be complied with, the asset can be mechanically protected by an engineered structure agreed to by the asset owner.**

**Note:** All transmission cables, pipelines and petrochemical networks may have separate requirements and the asset owners should be contacted before commencing work.

### 6.12 EXPLOSIVES

The use of explosives by licensed operators must only be used after a comprehensive risk assessment has been undertaken in consultation with all owners of assets in the vicinity and must be consistent with the requirements of the *Explosives Regulation 2005*.

### 6.13 PILE DRIVING

Pile driving adjacent to underground assets must not take place without authority from the owner of the assets. The exact location and depth of all adjacent assets shall be physically proved by hand digging (pot-holing) or equivalent asset location techniques prior to commencement of work.

The effects of vibration on the asset must be considered when planning the work.

#### **6.14 IDENTIFICATION OF ASSETS NOT ON PLANS**

Where an asset that is not identified on any plans etc is located in the field, work should be suspended until the asset is positively identified and any remedial controls put in place. Depending on the nature of the risk, it may be necessary to notify the asset owner and obtain a revised plan.

#### **6.15 ASSET SEPARATION DISTANCES**

To avoid safety and operational conflicts resulting from space infringement issues, refer to the Street Allocation Diagrams in Section 13.

## 7. SAFE SYSTEMS OF WORK

A critical part of planning safe systems of work is making sure that the plans are accurate. With some assets installed over 60 years ago, it is likely that changes would have been made to the surface of the land at some stage. Road widening and regrading of surfaces are common causes for inaccuracies in records. For this reason, when working from old records, pot-holing and/or pipe and cable locating devices should be used. The relevant authority or asset owner should be told of any inaccuracies in records.

Asset owners typically require notification of a major project or where the project may require supply of a service or product outside normal residential demand.

A safe system of work should be sufficiently robust to include site controls that will ensure assets on construction sites are not damaged. All those who dig the ground should be aware of the assets in the area before they dig and have appropriate controls in place. Particular attention needs to be given to relocated assets and persons new to the site to ensure they are aware of the assets and their locations.

At the project planning stage it is important to consider minimising damage to surface infrastructure and disruption of services to residents, pedestrians and traffic. Any construction or maintenance technique should ensure adequate clearances are maintained between assets and that other assets crossings are identified.

Access to assets must be maintained at all times to ensure emergency and scheduled maintenance activities can be carried out by the asset owner. Contractors should also give consideration at the planning stage for site storage of material and traffic areas associated with construction activities so these do not impede access to or damage assets.

Consideration should also be given to the appropriate level of supervision and training, including specific industry awareness training, for an individual undertaking work near any gas or electrical assets.

### 7.1 EXCAVATION USING NON-POWERED HAND TOOLS

For more information on how to safely dig near an asset, specific information is provided on the Telstra website via the following link [www.telstra.com.au/dialb4udig/digging.htm](http://www.telstra.com.au/dialb4udig/digging.htm). Excavation with hand tools shall be carried out carefully up to, but not closer than, the minimum distances specified in Table B.

There is a duty of care when excavating near cables, pipes and plant. Before using machines to excavate, **underground assets must first be exposed by pot-holing with non-conductive** tools to identify its location. Damage can also result in serious injury or death to workers and widespread disruption to services and traffic.

#### 7.1.1 Work on top of or below an underground asset

No disturbance of the underground assets, including any mechanical cover (eg concrete or polymeric cover slab), should occur without prior notification to the asset owner.

Excavation must not be carried out below an underground asset unless steps are taken to ensure that:

- the asset/s or the integrity of the asset and support material is not damaged



- under-crossing shall be at right angles whenever possible
- such excavation below the asset/s should not come within the distance specified in Table B.

**Note:** all transmission cables, pipelines and petrochemical networks may have separate requirements and the asset owners should be contacted before commencing work

- steps must be taken in consultation with the asset owners to ensure the asset is adequately supported.

**Note:** Also see Section 6.10 Directional Boring.

### 7.1.2 Work beside an underground asset

If any excavation beside underground assets comes within the clearances specified in Table B, then the asset owner must be notified prior to work commencing. Measures should be agreed upon to ensure the stability of the surrounding soil or material.

## 7.2 ACCIDENTAL CONTACT WITH UNDERGROUND ASSETS

In the event of an inadvertent contact with an underground asset, it is essential to notify the asset owner and comply with the reporting requirements under the OHS Regulation (Chapter 12).

### 7.2.1 Electrical assets

Should contact be made with a live overhead power line or a flash-over occur between a live overhead power line and a crane or an item of mobile plant, the following actions shall be taken:

- an attempt should be made to break the machinery's contact with the live overhead power line by moving the jib or driving the machine clear
- if it is not possible to break the contact with the live overhead power line, the operator of the crane or mobile plant should remain inside the cabin of the crane or on the plant item. The network operator should be called immediately to isolate power to the live overhead power line. The operator must remain in place until the power has been isolated and the 'all clear' given by the network operator



When a crane or item of plant inadvertently contacts overhead power lines, circuit protective devices may operate to automatically turn the power off. However, some protection devices are designed to automatically reclose thereby re-energising the power lines after a short period of time, typically 1–4 seconds.

- if it is essential to leave the cabin or the operator's position due to fire or other life threatening reason, then jump clear of the equipment. Do not touch the equipment and the ground at the same time. When moving away from the equipment, the operator should hop or shuffle away from the plant item (with both feet together) until at least 8 metres from the nearest part of the crane or plant. **Under no circumstances run or walk from the crane or item of plant as voltage gradients passing through the ground may cause electricity to pass through the body resulting in an electric shock**

- warn all other personnel and members of the public to keep 8 metres clear from the crane or item of plant. Do not touch or allow persons to touch any part of the crane or plant item and do not allow persons to approach or re-enter the vehicle until the network operator has determined the site safe. Remember electricity flows through the ground, so an electric shock could be received from walking close to the scene. If the crane or plant operator is immobilised, ensure the power supply has been isolated and the site made safe before giving assistance
- untrained, unequipped persons should not attempt to rescue a person receiving an electric shock. All too often secondary deaths occur because others get electrocuted trying to help earlier victims. If the crane or plant operator is immobilised, ensure the power supply has been isolated and the site has been made safe before giving assistance.

### **7.2.2 Gas assets**

Should an incident involving gas assets occur, the following actions should be taken:

- all work should cease immediately
- operator is to shut down the plant or equipment UNLESS this process may provide an ignition source for any escaping gas
- it is essential to leave the cab or operator station, trench or enclosure and maintain an exclusion perimeter due to the risk of explosion or fire. Do not attempt to use any instrument which may provide an ignition source near the gas escape. This may include mobile phones, two way radios, etc
- warn all other personnel and/or public to keep clear from the worksite and equipment. DO NOT attempt to approach, re-enter or start the vehicle until the relevant authorities have determined the site is safe
- contact the fire brigade on 000 if life and/or property are threatened
- facilitate First Aid treatment and seek medical aid as required
- advise your organisation's emergency contact and request they immediately notify the relevant authorities, including the relevant asset owner
- initiate the emergency management plan and incident investigation process.

### **7.2.3 Sewerage assets**

Should an incident involving sewerage assets occur, the following actions should be taken:

- cease work, make the site safe and contact the sewerage asset owner as soon as possible. Local circumstances and/or ownership should be considered
- if contaminated, shower or wash down with copious amounts of water. Remove any contaminated clothing as soon as practical
- there is a risk of infection from ingestion or eye contact. If eyes are contaminated, flush with copious amounts fresh potable water. If ingested, seek medical advice
- for skin contact, wash with soap and water. For broken skin and abrasions, also seek medical advice
- protect the public and watercourses from exposure to raw or untreated sewage
- if damage to a sewer pipe occurs during construction works, take appropriate steps to prevent surrounding material entering the pipe.

#### 7.2.4 Water assets

- Cease work, make the site safe and contact the asset owner.

#### 7.2.5 Telecommunications assets

- Report any damage to Telstra assets by phoning **13 22 03**.
- Contact specific asset owner if not owned by Telstra.

### 7.3 COOPERATION WITH AUTHORITIES

Constructing authorities and others operating in a public road reserve, rail reserve or private property have a duty of care to protect the existing assets of utility providers. It is essential to determine the location of existing assets by obtaining plans and proving the exact location before excavating.

Asset owners may have formal agreements in place describing how work shall be undertaken near each other's assets and these shall be complied with.

#### 7.3.1 Obligations of asset owners and contractors

There is an obligation for all asset owners, contractors and service providers to observe the specifications and separation distances indicated in the Streets Opening Conference diagrams (see Section 13) or those agreed through consultation between asset owners.

All contractors should notify the relevant asset owners if they locate any asset that is not shown accurately on the plans. At no time may an asset be relocated or moved without the prior authority of the asset owner.

### 7.4 DOCUMENTED SYSTEMS OF WORK

A documented **risk assessment** developed in consultation with those supervising and undertaking the activity is necessary for all activities where excavation and inadvertent contact with underground assets may occur.

A **SWMS** is to be developed in accordance with the OHS Regulation which captures details of the risk assessment and the required training/qualification. All those workers undertaking the activities identified in the SWMS should be made aware prior to commencement of work (eg toolbox talk).

An **excavation permit** is an excellent method of managing the investigation and approval process leading up to the commencement of the excavation. A properly constructed permit will produce a rigorous process that must be followed and completed prior to excavation activities and includes the positive identification of underground assets.

Verification activities such as **audit and inspection** are an excellent means of ensuring that the process has been correctly implemented at a systems level and on the ground before and during the excavation activity.

## **7.5 TRAINING OF MANAGERS AND EMPLOYEES**

Training is an integral component of reducing the risk of inadvertent contact with underground assets.

Managers and supervisors need to be made aware of the hazards and overarching requirements regarding inadvertent contact with underground assets such that they are able to implement safe systems of work and properly plan for and oversee the activities.

Both managers/supervisors and employees will benefit from information and training regarding the use of electronic detection devices, how to use the 'Dial Before You Dig' service and how to read plans supplied by the asset owners and/or 'Dial Before You Dig'.

Employees need to be made aware of the systems in place to minimise the risk of inadvertent contact with underground assets and also the hazards facing them if these systems are not employed.

Site-specific induction systems should include details such as the known location of assets, the site safety rules in relation to excavations (eg no excavations without a permit) and provide inductees access to, or a copy of, the utilities location plan for the work zone.

## **7.6 ASSET OWNER PLANS AND 'DIAL BEFORE YOU DIG'**

A site meeting with the asset owners may be required to determine location/s and procedures for dealing with assets within the scope of work. This issue should be addressed during initial project development to provide time to establish a regime to manage any risks.

Before commencing any excavation work, reference shall be made to the details or plans of the utility or private assets in the proposed excavation area as well as a site inspection to identify any unmarked assets. Plans illustrating the location of known underground assets can be obtained from individual asset owners or the 'Dial Before You Dig' service.

As mentioned, the location of underground assets provided by a service or utility provider may not be accurate for many reasons. As complete accuracy cannot be guaranteed, the position of underground assets must be proven by hand excavation, pot-holing or other approved techniques.

For work in the vicinity of EHV electricity transmission cables it is mandatory to have a meeting with the asset owner prior to any work commencing.

## **7.7 CABLE/PIPE IDENTIFICATION DEVICES**

An electronic pipe or cable locator should be used to more accurately identify the location of the underground asset – as asset owners' plans will not provide exact locations.

Once identified using such electronic device, care should be taken to mark the location of the underground asset on the ground's surface.

## **7.8 GROUND PENETRATING RADAR (GPR)**

Ground penetrating radar (GPR) is emerging within the civil construction industry as an excellent tool for identifying underground assets and mapping assets on a wider scale.

GPR is a non destructive and non invasive technique for rapidly imaging the shallow surface (up to 10 m) and produces high resolution colour section in real time. Parallel images can be used to create a 3D image.

## **7.9 POT-HOLING**

Pot-holing is the use of hand tools to excavate to a pre-determined depth to establish if assets exist in the immediate location. Pot-holing is a proven method of identifying assets.

Never assume that underground assets are positioned in the location as depicted on the plans or in the depth suggested. All underground assets should be positively identified prior to commencing excavation.

Pot-holing should be undertaken along the length of the proposed excavation to identify the path of underground assets and their depth. The information contained on the asset owner's plans and gathered during electronic identification methods helps in this process.

- careful digging (ie pot-holing) is the only sure way to identify the depth and alignment of underground pipes and cables
- pot-holing must be undertaken with reference to plans and other information provided by pipe and cable owners.

The amount of pot-holing should be determined with reference to the risk assessment for the site. Excavators should also pay attention to pot-holing requirements included in work practices provided with the network plans and onsite by a representative of the pipe and cable owner.

## **7.10 AIR AND WATER LANCING**

Air/water lancing techniques may be used in some circumstances, but the advantage of these needs to be assessed against any inherent safety and environmental risks, eg dust generation, contaminated water runoff and possible damage to underground assets.

## **7.11 TRENCHLESS TECHNIQUES**

Pot-holing must be used to locate existing underground assets to ensure adequate clearances are maintained between assets and to locate other asset crossings. Pot-holing at each asset crossing and at regular spacing along assets is recommended.

Where high risk assets are identified, consultation with the asset owner is required. Consultation is also required when using directional boring across existing utility lines. Where clearances required by other assets cannot be achieved at the proposed depth of asset installation, alternative solutions should be sought in consultation with the relevant parties.

It is crucial to provide the “as constructed” details on this type of installation for future reference because:

- the ground above the bore is typically undisturbed, not offering any indication of previous works
- of the inability of directionally-bored installations to provide warning tape or mechanical protection above the asset
- the bore may not follow a direct route.

## **7.12 SAFETY OBSERVERS**

Excavation work around underground assets should only be undertaken with the assistance of a competent safety observer.

The safety observer/s should be given sufficient control of the activity to call for a cessation of work in the event of system failure or observation of unsafe practice which may give rise to an inadvertent contact with an underground or overhead asset.

When excavating near or adjacent to underground assets it is important to be aware of overhead hazards such as overhead powerlines. Risk assessment may dictate a requirement for more than one safety observer for such activity, eg one observer to mitigate inadvertent contact with underground hazards and the other to mitigate inadvertent contact with overhead hazards.

## **7.13 CONFINED SPACES**

Excavations are generally not confined spaces. However, confined space provisions may apply to certain excavations where the excavation enters foul or contaminated ground or opens a live sewer. Also, where the atmosphere can be altered by exhaust gases or other contaminants, the excavation is to be treated as a confined space. Further information is given in WorkCover's *Code of Practice: Excavation*, Section 4.

## **7.14 GLOBAL POSITIONING SYSTEM (GPS)**

GPS technology provides an excellent opportunity to plot the location of underground assets and maintain that information for the duration of the project. This is especially important in maintenance and long term projects.

GPS locations, when captured, should be noted on relevant plans. This information should also be provided to asset owners for any as built/modified infrastructure or previously unidentified underground assets.

## **7.15 ABOVE GROUND IDENTIFICATION DEVICES**

Previously in this document, many above ground identification devices have been discussed that may assist identifying underground assets.

The Western Sydney Orbital Project (M7) successfully implemented a process where different coloured conduits (according to the nature of the asset) were temporarily inserted into the pot-hole directly onto the underground asset. These conduits, when back filled, extended approximately 1-1.5 metres above the ground and were plugged on top to prevent dirt and debris entering the conduit. These above ground locators enabled easy visual identification of the path of known underground assets and, when a measuring tape was inserted into the conduit, provided the exact depth of the asset.

## 8. TRAINING, INSTRUCTION AND INFORMATION



The OHS Act requires employers to provide such information, instruction, training and supervision as may be necessary to ensure the health, safety and welfare of their employees while at work.

In addition, some activities are restricted to persons holding the relevant certificate of competency, for example scaffolding and operation of cranes and some load shifting equipment. See the OHS Regulation or the *Industrial Certification Manual* for a full list of such activities.

### 8.1 TRAINING REQUIREMENTS

In addition to the requirements of construction training, all persons undertaking work involving underground assets must be instructed, trained and assessed as competent for the tasks they are undertaking.

Training includes but is not limited to:

- induction
- general health and safety induction training
- work activity health and safety induction training
- site specific health and safety induction training (Clause 216 OHS Regulation)
- risk assessment methodology
- training in the use of SWMS
- plan/map reading
- utility specific statutory training.

### 8.2 INDUCTION TRAINING



The OHS Regulation requires that employees receive OHS induction training, including general health and safety induction training, work activity based induction training and site specific induction training, and that this training covers the topics set out in the *Code of Practice: Occupational Health and Safety Induction Training for Construction Work 1998*. The training must cover the following points:

- arrangements for the management of OHS, including arrangements for reporting hazards to management
- health and safety procedures relevant to the work of the employee, including the use and maintenance of risk control measures
- how to access any health and safety information that the employer is required to make available to each employee
- any other induction training relevant to the place of work (eg confined spaces entry training), having regard to the competence, experience and age of the new employee.

### **8.3 TRAINING TOPICS**

Training should draw on knowledge of the known hazards and risks in your operations, including matters described in this Guideline. The source of risks should be pointed out and the adverse outcomes that have been experienced by others should be used to stress the importance of safety.

The training provided and the instruction given should at least include all safe work methods to be used on the job and matters described in this Guideline, that is, all hazards, risks and control measures for control of hazards.

### **8.4 WHO SHOULD RECEIVE TRAINING?**

The target groups for training at a workplace include but are not limited to:

- managers and supervisors of employees and/or other persons undertaking work considered at risk of injury and/or who have responsibility for implementing safe operating procedures
- OHS committees and OHS representative/s
- staff responsible for the purchasing and maintenance of plant, PPE and for designing, scheduling and organisation of work activities
- persons undertaking risk assessments or preparing SWMS
- employees and subcontractors undertaking the work, including employees of labour hire organisations.

As the needs of each target group are different, the content and methods of presenting training material should be tailored to meet the specific needs of each group.

### **8.5 PROVISION OF INFORMATION AND INSTRUCTION**

Information may include:

- the results of any applicable risk assessment
- SWMS
- a review of such a risk assessment and/or SWMS or operating procedure
- any other relevant OHS information.

Employers should brief each employee as to the contents of risk assessments and SWMS when each employee and/or other person first begins to perform tunnelling work, at regular intervals thereafter, and whenever there are changes to risk assessments or new information about health and safety risks becomes available.

Employees and other workers should have, on request, ready access to risk assessments and SWMS.



## 9. CASE STUDIES AND CHECK LISTS

### 9.1 REPAIRING SEWERAGE PIPES

A reactive dig and repair job was commenced by a work crew of a sewage and drainage authority following the internal surcharge of a sewer line at a preschool adjacent to the worksite. CCTV was used to identify the repair location of the sewer. Damage to the sewer pipes apparently occurred during the laying of electrical conduits approximately 20 years ago and a contractor had carried out a repair of that damage. The repairs appear not to have been referred back to the responsible sewerage authority and eventually resulted in the internal surcharge at the preschool.

The work crew did not find indicator plates or markers identifying underground power in the immediate area, and, because locating equipment was not readily available, made a decision not to delay the work and to commence excavating with a mechanical excavator. The excavator uncovered bricks marking an electricity asset directly over a conduit. Marker tape was found but was not immediately obvious.

An incident was declared by the work crew and work stopped when the conduits were uncovered. The asset owner was called to the site and supervised the remainder of the repairs. An insulated spud bar was used to break up concrete that was placed around the pipe in the original repair. The pipe was replaced, work completed and the excavation backfilled. The incident was reported as a near miss.



The hazards shown here include a broken sewer pipe and high voltage cables.

The risks were electric shock, contaminated and hazardous atmosphere (from sewer gases) and possible infection.

Failure to identify the presence of these cables before work commenced exposed the workers to the risk to health and safety.

Once the risk was identified, the controls included the use of insulated tools to excavate under the supervision of an authorised person from the asset owner.

## 9.2 COUNTRY TELECOMMUNICATIONS CABLE DAMAGE CASE STUDY



At this location, a contractor working for a telecommunication carrier performing combined pre-ripping and plough operation to install new optic fibre cable, damaged the Telstra major interstate fibre cables.

The new route was being installed through rural paddocks and properties by D7 dozer and trenching machinery. The route was being installed parallel to the existing Telstra major fibre route.

At the manhole, approx 20 metres from the damage location, a 30 fibre cable, 16 fibre cable and a 30 pair copper cable left the manhole at right angles following the fence line. The contractor failed to identify the break off from the manhole shown on the plans. These cables were subsequently damaged during the pre-ripping procedure near the fence line.

The contractor believed the main cables were in another location, the one they had been following, and they had not noticed the manhole (located approximately 20-30 metres from the pre-ripping process) until after the damage had occurred. Two markers on either side of the manhole were clearly visible from a distance.

### Site observations

- The Telstra fibre cable route was clearly marked with Telstra yellow concrete markers, which was easily visible.
- The manhole was marked with a yellow concrete marker post at either end of the manhole.
- The cable route was clearly shown on Telstra plans that the contractor obtained from the 'Dial Before You Dig' service.
- There was no visible sign of asset location (pot-holing) on the ground such as markers, paint, peg lines, markings on the ground etc.
- There were deficiencies with the safe system of work used on the project.

### 9.3 CITY TELECOMMUNICATIONS CABLE DAMAGE CASE STUDY

A contractor in the west of Sydney drilling pier holes for the construction of townhouses caused significant damage to telecommunication cables resulting in severe disruption to telecommunication services in country NSW.

An auger operated by an excavation contractor made a direct hit on a telecommunications cable route. Thousands of telephone lines, mobile phone towers, EFTPOS terminals and data lines went dead all over NSW instantly.

The auger, a giant drill, severed six fibre optic cables running between 12 and 60 fibres each and a 2400 copper pair cable, about seven kilometres from the Parramatta exchange.

Physical cable damage was not confined to the one hole in the ground – it wrenched and ripped cables clean out of manholes for hundreds of metres on either side.

One of the cables was the main feed to the Bathurst and Orange area, others carried mobile phone traffic. Almost all the copper lines were in use by local households and businesses and, not least of all, the main ATM (asynchronous transfer mode) internet backbone running to the south and west out of Sydney. At one ISP alone, more than 100,000 customers across four states were unable to log on to the internet for hours. Also 250,000 Foxtel service subscribers were disconnected, some for nearly 12 hours.

It was not just the phone services that went down. EFTPOS services died, and staff from a Bathurst supermarket were reduced to hunting around other businesses for manual transfer forms for more than a day so customers could buy groceries and debit their bank accounts. E-mail access in Bathurst was out too.

Had the 'Dial Before You Dig' service been contacted on 1100 and the appropriate plans used, the damage could have been avoided.

If there is any doubt at all about cable location, Telstra will send staff to show contractors and property owners how to check for stray lines. However, there was no call placed to the 1100 service for this damage.


When people in west Sydney picked up their phones and found no signal, they might have expected their mobiles or other carrier services to fill the gap. But Telstra, Optus, AAPT, Vodafone and Primus were all affected to some extent.

This incident was the cable cut of all cable cuts, but cut and flooded cables take down parts of the telephone and data network every day.

It took 50 technicians until 11.00 that night just to restore all the services, and two-and-a-half days to finish all the work.



Sub-ducts and cables laying on the construction site, pulled out by an auger.

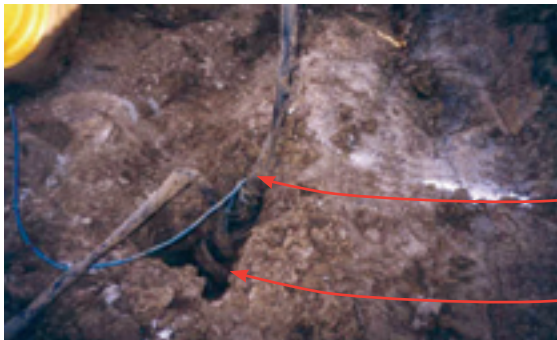

Twisted sub-ducts and optical fibre.

One of the bored holes where the cables and conduits had been pulled out.



Twisted sub-ducts and optical fibre.

Through these bored holes large amounts of cables and sub-ducts had been pulled out. Thus, causing major damage to cables and joints in the Telstra Network.



## 9.4 EXAMPLE OF AN INCIDENT REPORT USED BY AN ELECTRICITY ASSET OWNER

### 'Excavator operator injured when hitting 11,000 volt underground cable'

<b>Date:</b>	07/10/05
<b>Incident occurred at a place of work (refer OHS Act 2000)</b>	<input checked="" type="checkbox"/> (Construction site)
<b>System voltage involved:</b>	11,000 kV
<b>Address:</b>	Northumberland Road
<b>Work being done for:</b>	<input checked="" type="checkbox"/> Contestable work done for customer
<b>Category:</b>	<input checked="" type="checkbox"/> General public (workers – non networks worker)
<b>Category type:</b>	<input checked="" type="checkbox"/> Electric shock
<b>Treatment:</b>	<input checked="" type="checkbox"/> Medical treatment given (Hospital)
<b>Description of injuries:</b>	Excavating for ASP to relocate 11,000 volt UG cables, excavator hit cable causing explosion and feeder trip. Victim received shock from excavator and was taken to hospital for check up. No permanent injuries
<b>Network element involved in incident:</b>	<input checked="" type="checkbox"/> Underground mains
<b>Object involved in incident:</b>	<input checked="" type="checkbox"/> Excavator
<b>Location of incident:</b>	<input checked="" type="checkbox"/> Urban
<b>Location type:</b>	<input checked="" type="checkbox"/> Public Roadway (including footpaths to property boundary)
	<input checked="" type="checkbox"/> Accident area exposed to weather (ie outdoors)
<b>Possible causes of incident:</b>	<input checked="" type="checkbox"/> Failure to follow written procedures
<b>Briefly describe possible causes of incident in more detail:</b>	Workers had located cable via searches but proceeded to dig with excavator beyond marker tape and hit cable
<b>Initial corrective action:</b>	ASP and excavator operator advised of the dangers associated with excavation near cables. Advised that any work beyond covers or marker tapes can only be done using hand tools
<b>Corrective action taken:</b>	<ul style="list-style-type: none"> <li>excavator operator advised of his responsibilities when working near underground assets</li> <li>ASP reminded of his responsibilities in regard to site supervision and the need to consult plans before commencing any excavation work</li> </ul>
<b>Follow up:</b>	Cable isolated and repaired by IE. 50 customers interrupted for 5.2 hours

## 9.5 CASE STUDY: CONSTRUCTION OF THE M7 MOTORWAY

The Abi Leighton Joint Venture (ALJV) conducted an extensive risk assessment before commencing on the project and services both above and below the ground were identified as a major risk.

The ALJV consulted with the asset owners who identified an extensive number of assets in the M7 corridor and local road upgrades.

Plans were obtained from 'Dial Before You Dig' and from the asset owner. Electronic services detection was also conducted. These assets were then surveyed and non-destructive digging conducted to positively identify each asset. Colour coded conduits were then placed on top of the assets.


The ALJV still recorded hits to the assets as not all assets were identified on the plans or by 'Dial Before You Dig'.

Meetings were arranged by the ALJV with management and field staff, asset owners, subcontractors and 'Dial Before You Dig'. From these meetings the ALJV developed the following procedures through consultation to reduce the possibility of impacting on these assets:

- a request to de-energize high risk electrical assets where possible was made to the asset owner. A training course was developed and delivered by the ALJV and Integral Energy to approximately 500 ALJV and subcontractor employees on the project
- permits to excavate and work around assets were reviewed and developed with input from all stakeholders. The mandatory exclusion zones for underground assets were doubled
- colour coded conduits were used to identify the type of asset, location and depth
- when working in the asset zones, only toothless buckets were permitted to be used on plant
- banners, posters, stickers and signage were extensively used to remind all personnel of the procedures.

The ALJV, in consultation with a manufacturer, developed a GPS backpack to identify a known asset by comparing it to the ALJV survey database. This allows the ALJV to mark out existing assets and make this information more accessible and easier to understand.

By consulting and training all stakeholders, the ALJV was able to implement safe work methods and dramatically reduce the number of incidents impacting on assets.

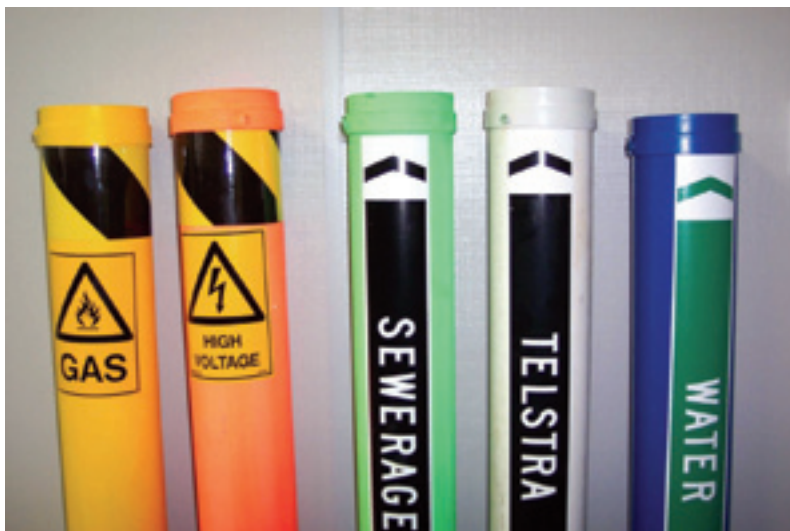

Colour Coded Conduits used to identify assets



Manufacturer's backpack being used by ALJV survey staff



The manufacturer's pocket PC allows quick recognition of underground assets by touch screen technology. This identifies the type of asset and its approximate location.

## 10. FURTHER INFORMATION

### 10.1 AUSTRALIAN STANDARDS

- AS 2648.1 *Underground marking tape*
- AS 4026 *Electrical cables for underground residential systems*
- AS 1345 *Identification of the contents of pipes, conduits and ducts*
- AS 2566.2 *Buried flexible pipelines*
- AS 4271 *Interim – Geographic information data dictionary*
- AS 1742.3 *Traffic control devices for works on roads*
- AS/NZS 4360 *Risk management*
- AS 4799 *Installation of underground utility services and pipelines within railway boundaries*
- AS 4292.1 *Railway safety management*
- AS 2865:2001 *Safe working in a confined space*
- AS 1165 *Traffic hazard warning lamps*
- AS 1345:1995 *Identification of the contents of pipes, conduits and ducts*
- AS 1742.3 *Traffic control devices for works on roads*
- AS 1743 *Road signs – specifications*
- AS 1744 *Forms of letters and numerals for road signs*
- AS 1906 *Retroreflective materials and devices for road traffic control purposes*
- AS HB81 *Field guide for traffic control at works on roads:*
  - (HB81.1 Short term urban works – daytime only
  - HB81.2 Short term rural works – daytime only
  - HB81.3 Mobile works
  - HB81.4 Short term night works
  - HB81.5 Works on unsealed roads
  - HB81.6 Bituminous surfacing)

Australian Standards are available from SAI Global [www.saiglobal.com/shop](http://www.saiglobal.com/shop)  
email [sales@sai-global.com](mailto:sales@sai-global.com) or phone 13 12 42.

### 10.2 WORKCOVER NSW CODES OF PRACTICE

- *Code of Practice: Work Near Overhead Power Lines*
- *Code of Practice: Excavation*
- *Code of Practice: Moving Plant on Construction Sites.*



### 10.3 OTHER STANDARDS AND REFERENCES

- Streets Opening Conference (2007) *Guide To Codes and Practices for Streets Opening*
- Streets Opening Conference (1999) *Model Agreement for Local Councils and Utility Service Providers*
- *Service and Installation Rules of New South Wales* (2006)
- AUS-SPEC 306U AUS-SPEC *Road Openings and Restoration* (2004 and earlier additions)
- AUS – SPEC 7200 C0219 *Construction – Roadways – Road openings and restorations for utilities* (2007).

For Streets Opening Conference enquiries, contact The Secretariat, Institute of Public Works, Engineering Australia (NSW Division)

Phone 02 9267 6677 Fax 02 9283 5255 email [ipwea@ipwea.org.au](mailto:ipwea@ipwea.org.au)

For AUS-SPEC enquiries contact: Manager Specifications, Standards Australia, 286 Sussex Street Sydney NSW 2000. GPO Box 476 Sydney NSW 2001

Phone 02 8206 6713 Fax 02 8206 6021 email [aus-spec@standards.org.au](mailto:aus-spec@standards.org.au)

### 10.4 LEGISLATION

- *Electricity Supply Act 1995*
- *Electricity (Consumer Safety) Act 2004*
- *Gas Supply Act 1996*
- *Occupational Health and Safety Act 2000*
- *Pipelines Act 1967*
- *Sydney Water Act 1994*
- *Hunter Water Act 1991*
- *Roads Act 1993 and Road Regulations 1994 (as amended)*
- *Local Government Act 1993*
- *Contaminated Land Management Act 1997*
- *Telecommunications Act 1997.*

# 11. APPENDIX A – UNDERGROUND ASSET LOCATION CHECKLIST

Worksite location: \_\_\_\_\_

(street name, cross street, landmarks)

Plans provided by: Dial Before You Dig ☐ Yes ☐ No Contractor ☐ Yes ☐ No  
Asset owner ☐ Yes ☐ No

Underground assets located:

Utility (Note Utility from which plans were obtained)	Plans received as per dial before you dig information	Plans current Check dates	Plans indicate assets in vicinity	Assets checked	Pot-holing req'd	Pot-holing done	Stand-by req'd	Site marking completed	(sketch on rear of sheet)
	✓	✓	✓	Y/N	Y/N	Y/N	✓	Y/N	Y/N
Communications .....									
Electrical .....									
Water .....									
Sewerage .....									
Gas .....									
Other .....									
Other .....									

Sketch worksite and Utility locations on reverse side of page

Additional Comments:

---



---




---

Plans verified and confirm all assets as located? ☐ Yes ☐ No


Person locating asset	Person carrying out work
Signed	Signed
Name (Print) ..... Business Name .....	Name (Print) .....
Date completed checks ...../...../.....	Date received checked results ...../...../..... Completed Checklist and Utility Plans included in job-pack. <input type="checkbox"/> Yes <input type="checkbox"/> No

## Underground Asset Location Checklist – SAMPLE ONLY

Diagram of UG Assets as located on site

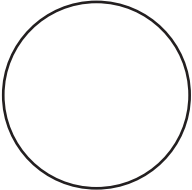

Indicate the north point with an arrow



SAMPLE ONLY

**Drawn by**

**Name** \_\_\_\_\_

**Sign** \_\_\_\_\_

**Date** \_\_\_\_ / \_\_\_\_ / \_\_\_\_

**The above sketch should contain the following details:**

- street alignments (where applicable)
- lot boundaries (where applicable)
- name of street and suburb
- north point
- nearest cross street
- distances from relevant assets/boundaries
- depth of cover (only if available)
- signature and name (drawn by).

## 12. APPENDIX B – WORKERS COMPENSATION INSURANCE



Anyone who employs workers, and in some cases engages contractors, must maintain a current workers compensation insurance policy. Penalties apply for failing to have a current policy in place.

All employers have a legal liability to pay workers compensation to workers who are injured in the course of their work, and employers are required by law to hold a workers compensation insurance policy from a licensed WorkCover insurer to cover that liability.

For workers compensation insurance purposes the *Workplace Injury Management and Workers Compensation Act 1998* (the Act) defines a worker, subject to certain specified exceptions, to mean:

*A person who has entered into or works under a contract of service or a training contract with an employer (whether by way of manual labour, clerical work or otherwise, and whether the contract is expressed or implied, and whether the contract is oral or in writing).*

In addition, the Act deems certain other persons to be workers for workers compensation purposes, eg some types of contractors.

For assistance in clarifying your obligation, contact your insurer or the WorkCover Assistance Service on **13 10 50**.

# 13. APPENDIX C – TYPICAL FOOTWAY ALLOCATIONS FOR UTILITY SERVICES AND DEPTH OF COVER IN ROAD RESERVES


The diagrams in this section have been sourced from the publication entitled *Guide to Codes and Practices for Streets Opening 2007* published by the NSW Streets Opening Conference (SOC). These diagrams are typical examples only, and may not be up-to-date. The current edition of the SOC document should always be consulted prior to undertaking work that impacts on underground services to ensure that the information used is up-to-date.

Source: NSW Streets Opening Conference: Guide to Codes and Practices for Streets Opening 2007

For the purpose of this section, note that sewer lines have not been specifically identified.

## 13.1 NOMINAL DEPTH OF COVER OF UTILITY SERVICES IN ROAD RESERVES

### 13.1.1 In footways

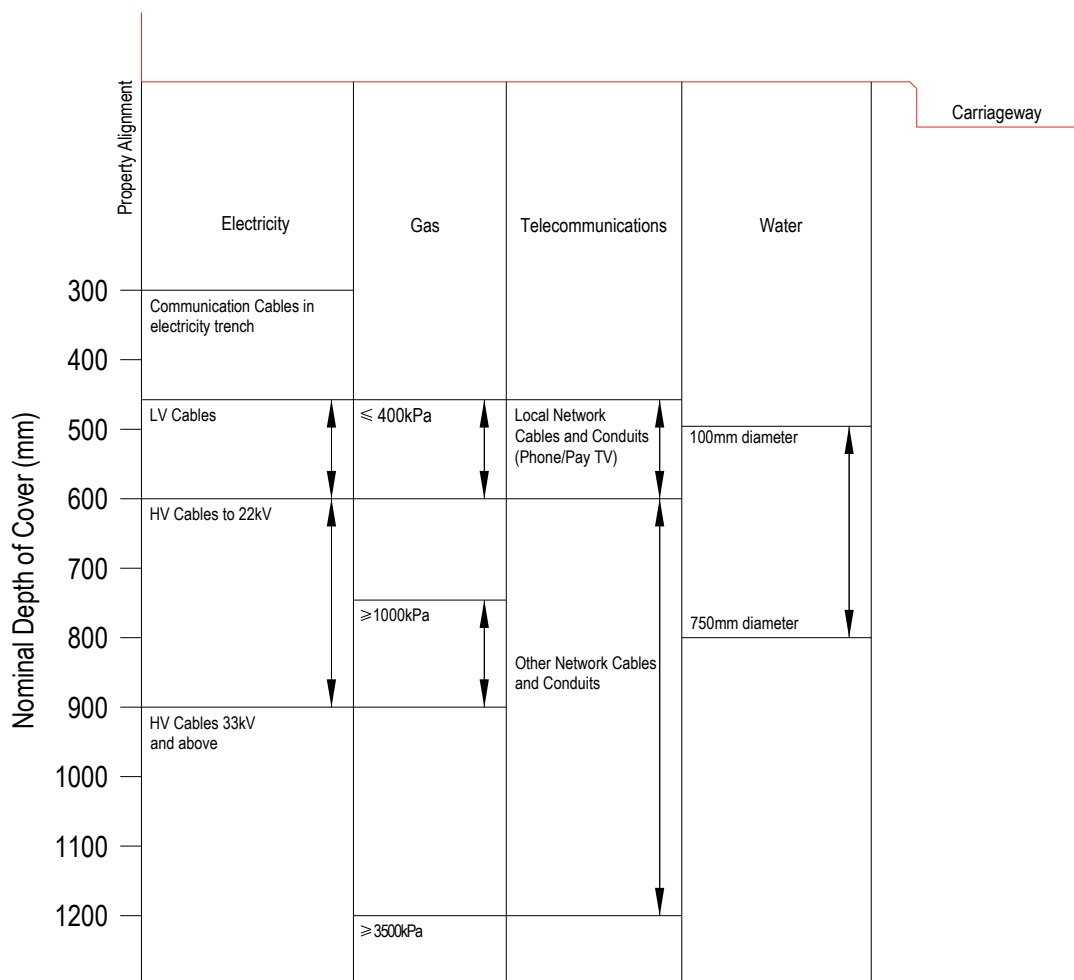

Source: NSW Streets Opening Conference: Guide to Codes and Practices for Streets Opening 2007


### 13.1.2 In carriageways

	Electricity	Gas	Telecommunications	Water
300				
400				
500	Communication Cables in electricity trench		Local Network Cables and Conduits (Phone/Pay TV)	
600	LV Cables	$\leq 400\text{kPa}$		100mm diameter
700				
800	HV Cables to 22kV			750mm diameter
900	HV Cables 33kV and above	$\geq 1000\text{kPa}$	Other Network Cables and Conduits	
1000				
1100				
1200		$\geq 3500\text{kPa}$		

Source: NSW Streets Opening Conference: Guide to Codes and Practices for Streets Opening 2007



## 13.2 UTILITY/SERVICE PROVIDER ALLOCATION OF SPACE IN FOOTWAYS

### 13.2.1 Streets dedicated prior to 1 January 1991

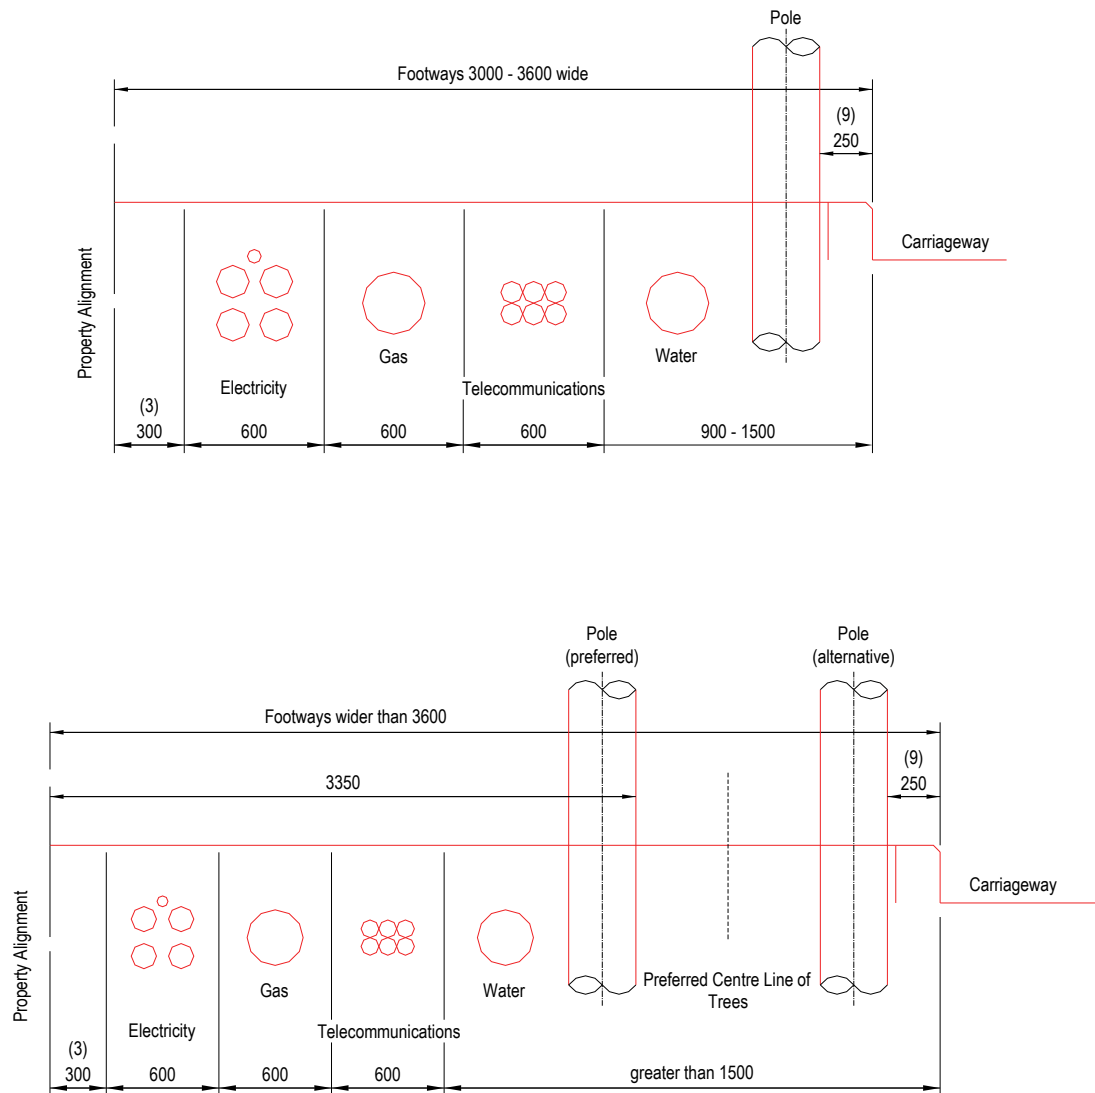

Source: NSW Streets Opening Conference: Guide to Codes and Practices for Streets Opening 2007

### 13.2.2 Streets dedicated after 1 January 1991

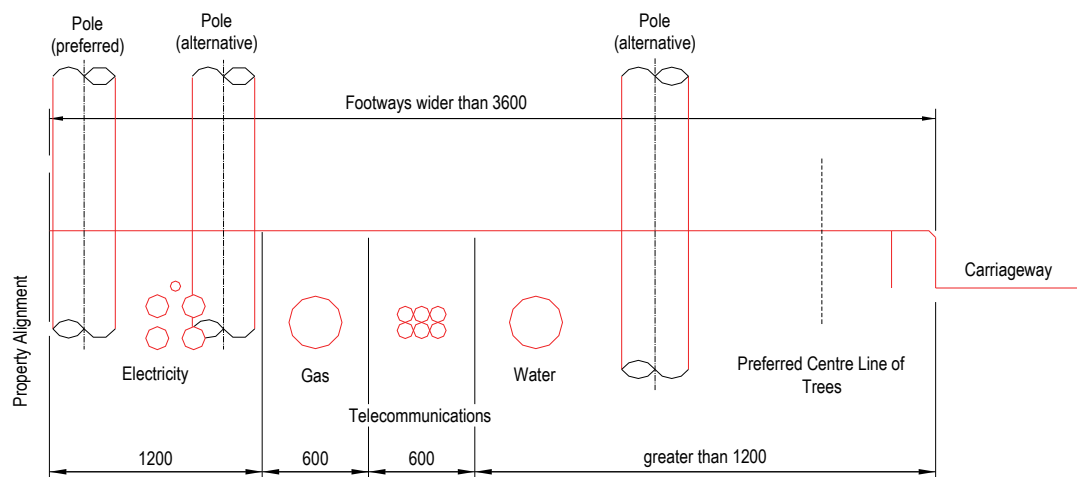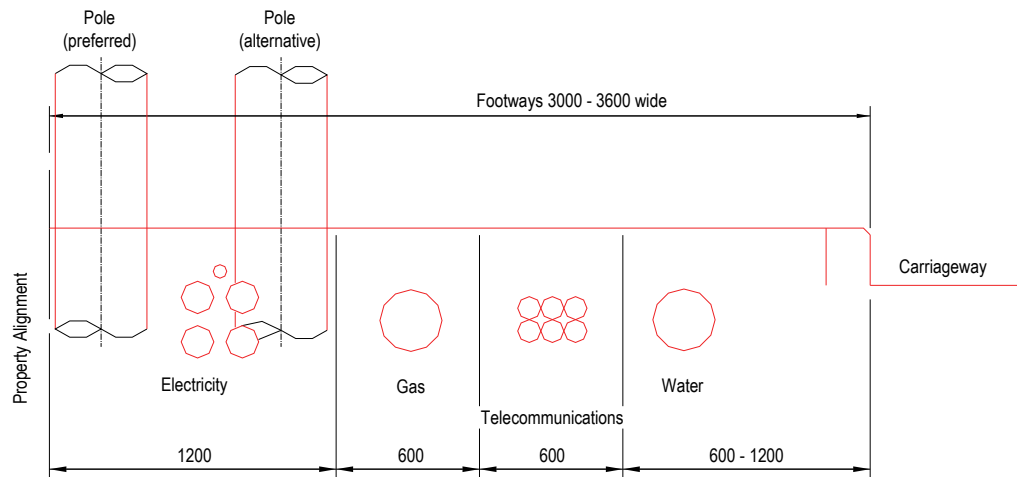

Source: NSW Streets Opening Conference: Guide to Codes and Practices for Streets Opening 2007











Catalogue No. **WC01419** WorkCover Publications Hotline **1300 799 003**



**WorkCover NSW** 92-100 Donnison Street Gosford NSW 2250  
Locked Bag 2906 Lisarow NSW 2252 WorkCover Assistance Service **13 10 50**  
Website **[www.workcover.nsw.gov.au](http://www.workcover.nsw.gov.au)**

© Copyright WorkCover NSW 0809

## LIVING SAFELY WITH ELECTRICITY

When working outside, whether it's a small job or large job or even something you do every day, you need to be aware of the electrical dangers of working near overhead power lines or underground cables.

Endeavour Energy wants to help protect you from potential electrical dangers on your work site. In turn, this will ensure families, households and businesses can continue to enjoy a safe and reliable electricity supply.

This brochure highlights some of the things you can do to avoid electrical dangers on the job.

### Did you know?

Australian households receive communication, gas, water and electrical services via a labyrinth of cables stretching millions of kilometres underground. If just one of these cables is damaged, you could potentially be seriously injured and/or isolate thousands of households from essential services. Such incidents can result in hefty fines.

- 01 Call Emergency Services on **000**.
- 02 Request an ambulance if anyone is injured.
- 03 Report the incident to Endeavour Energy on **131 003** as soon as possible.

## SAFETY EXCELLENCE

### IN EMERGENCIES CALL 131 003

24 hours a day, 7 days a week

If you have any questions about what you should do to stay safe around damaged power lines and other electrical infrastructure please call 131 081 or visit us at [www.endeavourenergy.com.au](http://www.endeavourenergy.com.au)

## SAFETY ON THE JOB



0611-ENE2351-CONT

51 Huntingwood Drive  
Huntingwood NSW 2148  
PO Box 6366 Blacktown NSW 2148  
T: 131 081 • F: 61 2 9853 6000



Call 131 003 and put safety first.  
[www.endeavourenergy.com.au](http://www.endeavourenergy.com.au)



## BE ALERT AT WORK

### Do you know where the underground cables are?

Unfortunately, serious incidents occur when excavators hit underground cables because cables aren't identified before work has commenced. Obtaining information about underground cable locations once involved making numerous calls to many utility providers.

Now there's really no excuse. Information and site maps showing the general location of underground services can be obtained by calling **1100** or visit **www.1100.com.au**. Remember it's the law.

### Check, double check, triple check and reassess

Always check, double check, triple check and reassess for electrical dangers on the job. Remember, earthmoving operations often require material to be relocated to mounds or piles. When this happens under and around power lines it reduces the clearance distances between plant and the electrical infrastructure.

### Completed your job?

Stay alert when packing up or removing scaffolding or equipment or when returning plant to its transit position.

### Transporting trees?

Remember tall trees and shrubs such as palms can come into contact with power lines. Water is a good conductor of electricity and can therefore conduct through vegetation due to its water content.

### Excavating?

Always check the voltage of cables listed on plans so that you can then apply this to *Work Near Underground Assets Guide 2007*, WorkCover NSW, to determine what the clearance and other requirements are to commence excavation. Select the safest plant for the job, e.g. toothless buckets and blunt hand tools. Before using mechanical plant to dig, use a cable location service to check the accuracy of plans. Always pothole by hand with non-conductive, blunt hand tools.



### Look up and live

If a tip-truck, scaffolding, pump, ladder, crane or metal platform approaches or comes in contact with overhead power lines, the operator and even people nearby, could be electrocuted. Before starting work always look up and identify the location of any overhead power lines. Plan the job to minimise work near and around power lines.

Compare the height of power lines to the maximum height of your equipment, and ensure the full reach of your equipment will not breach the approach distances outlined in the *Work Near Overhead Power Lines Code of Practice 2006*, WorkCover NSW. For "ordinary persons" WorkCover requires an approach distance of at least three metres from overhead power lines (up to 132,000 volts).

Additional clearances are required when working near power lines carrying higher voltages. It's also a good idea to nominate a co-worker to observe and check that you and your equipment do not go into the approach distance zone.

## HOW CAN YOU HELP?

### Electricity can jump

You don't have to be touching power lines to get an electric shock because electricity can 'jump' – also known as arcing. A safe 'clearance' distance needs to be maintained to prevent electricity from arcing across to you and your equipment.

### Five things to remember


- 01** Check, double check, triple check and reassess – always assess your work site for electrical dangers before you start and stay alert until you've left the site.
- 02** Look up and live – identify the location of overhead power lines and plan your job away from them.
- 03** Dial **1100** or visit **www.1100.com.au** before you dig – confirm the location of all underground cables before you begin any excavation work.
- 04** Before using mechanical plant to dig, check the accuracy of your plans using a cable location service. Pothole by hand using blunt plant items.
- 05** Always maintain a minimum approach distance from power lines and assign a co-worker as an observer while you operate and move machinery around power lines.





# WHERE TO DRAW THE LINE ON SAFETY CLEARANCES FROM ELECTRICITY ASSETS

May 2011

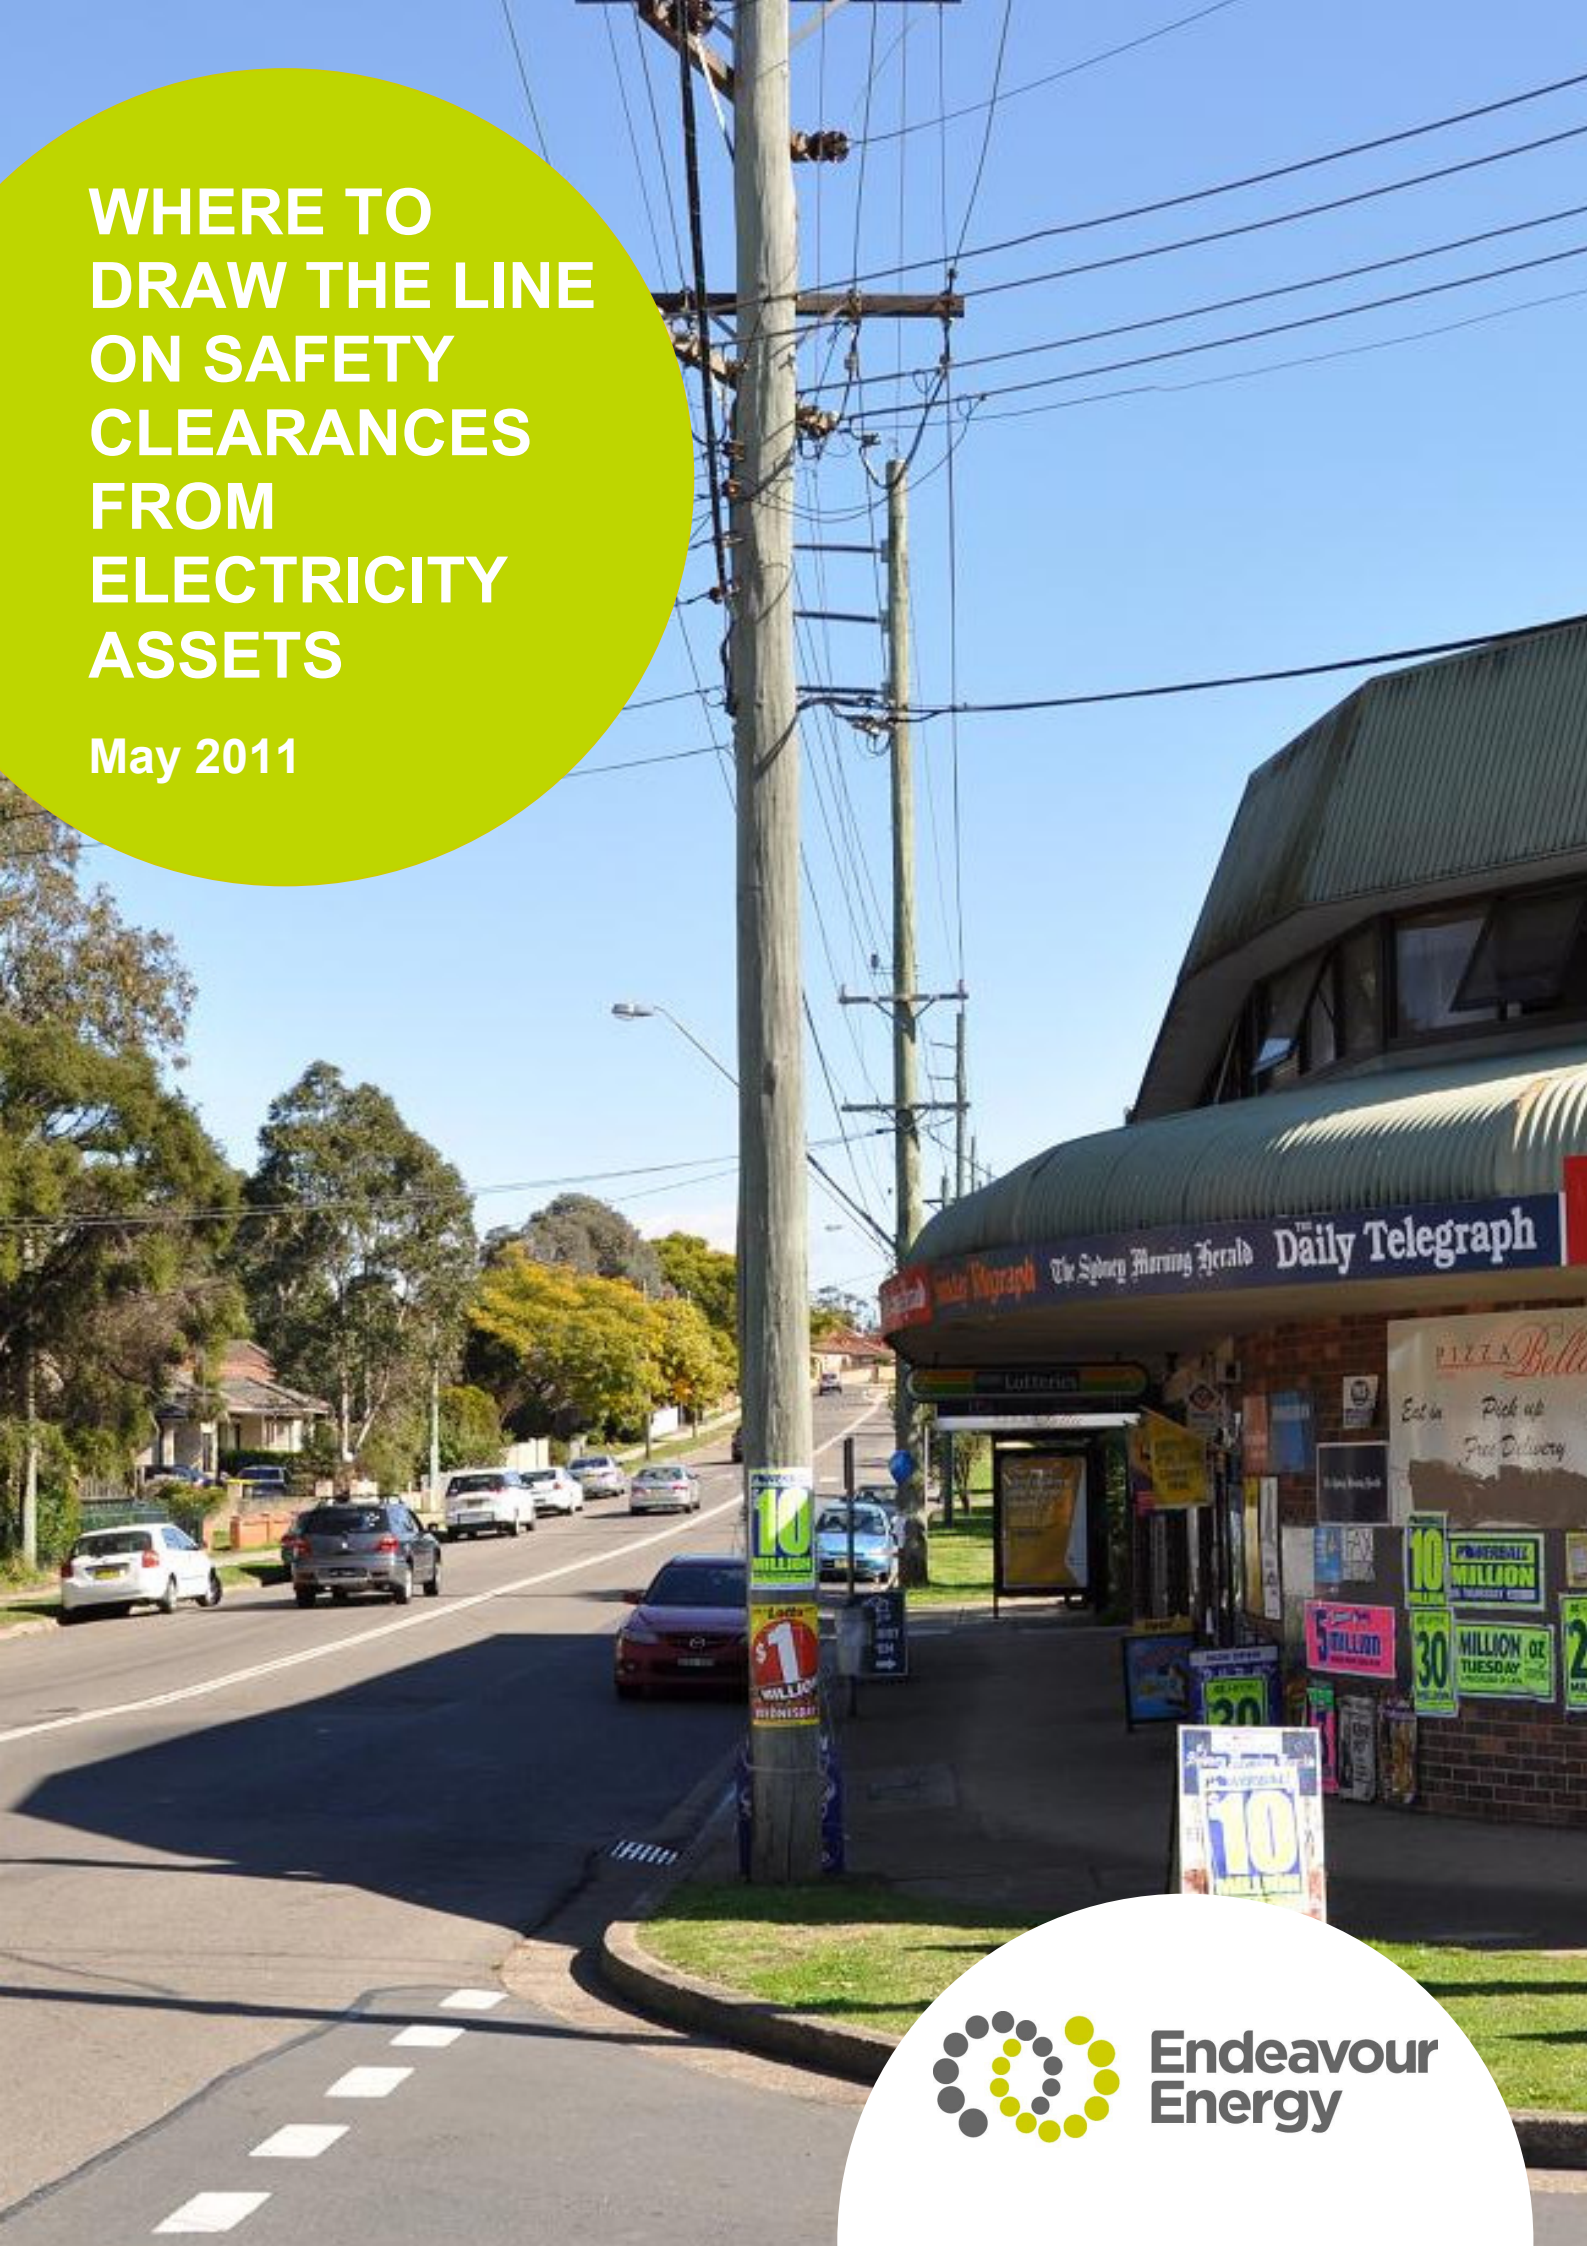

**Endeavour  
Energy**



## Where to draw the line on safety clearances from electricity assets

### Are you in the clear?

#### Important information on safe distances

This brochure is designed to inform anyone working on or around buildings or sites that are connected to or in the vicinity of electricity assets of safe distances that must be maintained from electricity assets, overhead or underground.

Awareness of safety clearances could mean the difference between a safe, successful project and a fatal accident.

It may also save time and money by ensuring the design of a home or building complies with safety requirements without additional measures being taken.

**Drawings in this brochure specify the minimum safety clearances for working or living near electrical assets.**

**Note:** Full details about safe work practices, including penalties for non-compliance, are set out in the WorkCover NSW document *Work near overhead power lines: Code of practice 2006*. The Code can be viewed at the following link:

[www.workcover.nsw.gov.au/formspublications/publications/Documents/work\\_near\\_overhead\\_power\\_lines\\_code\\_of\\_practice\\_1394.pdf](http://www.workcover.nsw.gov.au/formspublications/publications/Documents/work_near_overhead_power_lines_code_of_practice_1394.pdf)

The requirements for maintaining safe distances from electricity assets are also set out in the **State Environmental Planning Policy (Infrastructure) Regulation, 2007** (Division 5 - Electricity transmission or distribution, Subdivision 2 - *Development likely to affect an electricity transmission or distribution network*).


This requires local councils to seek comments from Endeavour Energy before approving any development application where electricity infrastructure is present.

#### Types of assets

The following pictures show typical electricity assets that may be installed in residential areas.



High and low voltage overhead mains

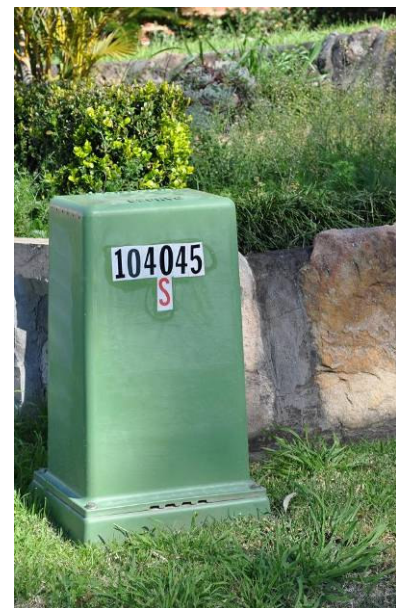

Underground service pillar

## Ensuring you're in the clear

All buildings and other structures must comply with minimum safety clearances from overhead electricity conductors.

The minimum distances from the closest conductor to the building or other structures must be maintained during strong winds or high operating temperatures. Under these conditions, the conductor can swing or sag considerably towards the building or structure.

The minimum safety clearances are shown in the illustrations in this brochure. They have been prepared to suit Endeavour Energy's asset construction practices.

If it appears that conductors are closer than the minimum safety clearances shown in the table, call Endeavour Energy for advice.

Some important considerations regarding minimum safety clearances include:

- Knock-down/rebuilds, where a small, single storey home is replaced by a larger or double storey home, or where land is rezoned to allow multi-storey construction, such as apartments or town houses.
- Moving the location of a driveway or building driveways close to pillars or poles.
- Installing a tall antenna in areas where broadcast reception is poor.
- Erecting a flagpole.
- Any building work near underground or overhead power lines.
- Erecting a cubby house.
- Raising the ground level below power lines.
- Erecting metal fences or scaffolding close to poles or lines.
- Excavating near poles or where electricity assets run underground.
- Using a crane near overhead lines

Swimming pools are generally unsuitable for installation near electricity assets, and are rarely allowed. Above-ground pools, in particular, are regarded as inherently unsafe.

## Working with safety near the point of attachment

The point of attachment is where the electrical wires attach to a home or building. When work is being carried out near the point of attachment, special care must be taken to avoid contact with these electrical wires, and the mounting bracket, or to avoid damaging them.

The safe distance from a point of attachment is 1000mm.

Care must be taken with activities such as:

- Cleaning leaves from guttering.
- Painting gutters, fascias and eaves.
- Pruning trees and shrubs (particularly around the electrical wires).
- Attaching aluminium cladding to the fascias and the eaves.
- Replacing the guttering.


## Keeping your distance

The minimum safety clearances over structures, roads and driveways are shown in the following drawings.

**Remember** – these are the **minimum** safe distances. In some cases, the distance may increase to ensure public safety.

### Drawing 1: Minimum safety clearances over structures


*Aerial consumers' and service mains*

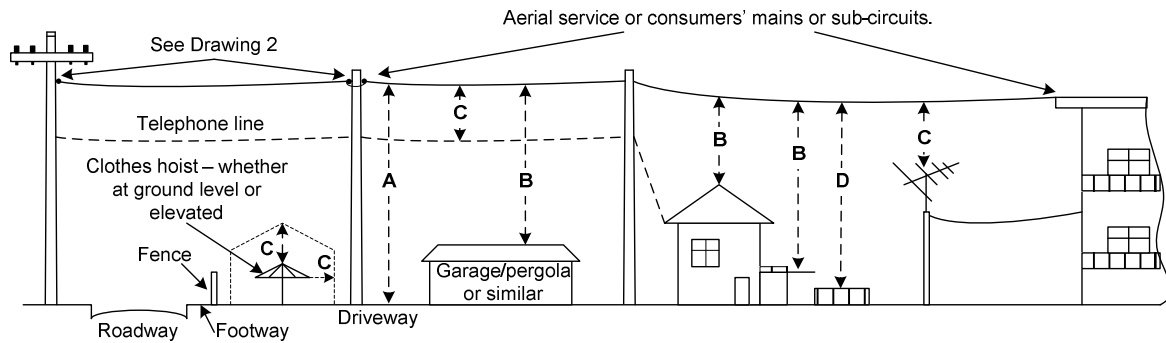

Application Type of aerial conductor	Minimum height above buildings, structures, ground or elevated areas (mm)		From, <b>buildings, TV/ radio antenna or stay wire and telephone lines</b> (mm).	Above water level in swimming pool, above walkway around pool	Above areas where irrigation pipes are used, or above areas where sail craft are used
	Over ground	Over roofs			
	A	B			
Bare or insulated live conductors	Bare 5500 Insulated 4500	3700	2000 3000 for clothes lines	Not permitted	Refer to Integral Energy

### Drawing 2: Minimum safety clearances over roads and driveways

*For insulated aerial service mains*

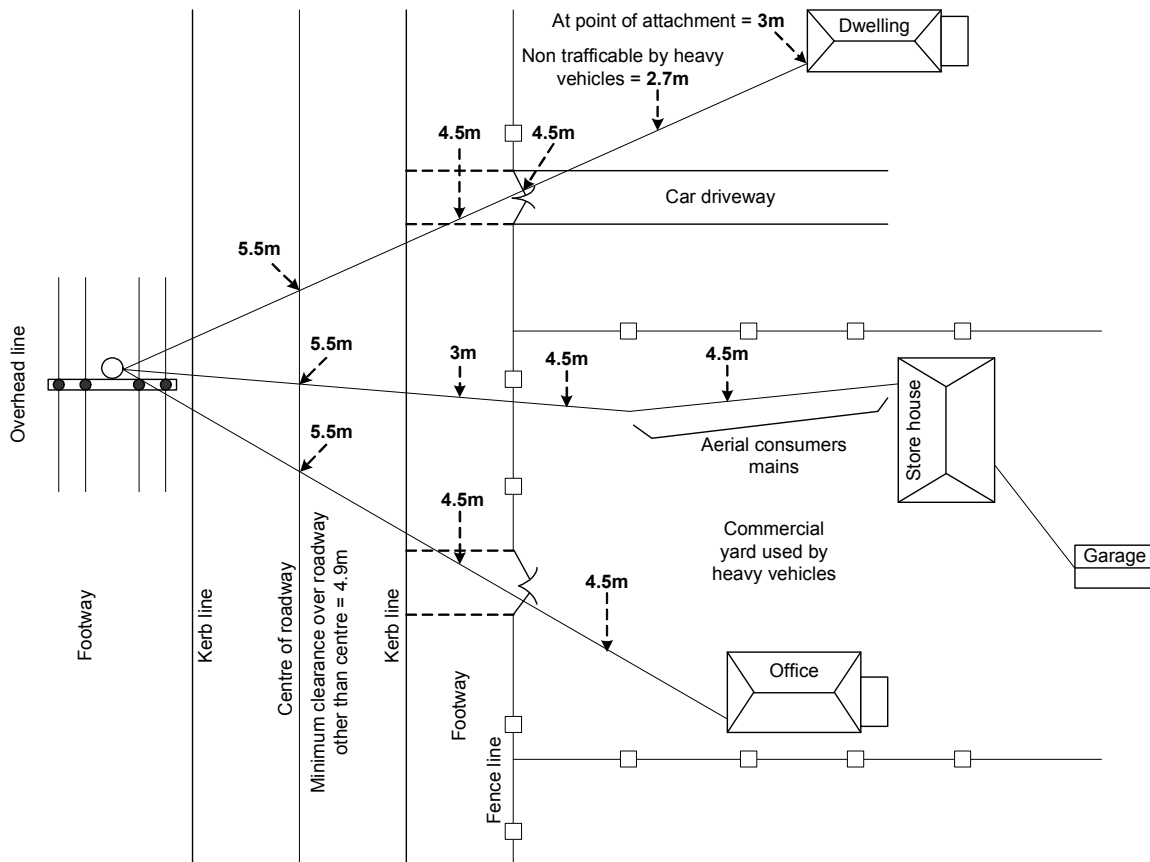


### Drawing 3: Minimum safety clearances near structures

	0-1000V LV	1-22kV HV	33kV <sup>a</sup> Trans.
<b>A</b> Above standing areas	3700mm	3700mm	5000mm
<b>B</b> Accessible areas	2700mm	2700mm	4500mm
<b>C</b> Non-accessible areas	1000mm	2100mm	2500mm
<b>D</b> Ground	5500mm <sup>b</sup> (bare)	7300mm	7300mm
<b>E</b> Above outdoor TV antennas, aerial cables or clothes lines	1800mm	3000mm	3000mm

*a For 132kV, call Integral Energy*

*b See Drawing 2 for insulated aerial  
service mains*

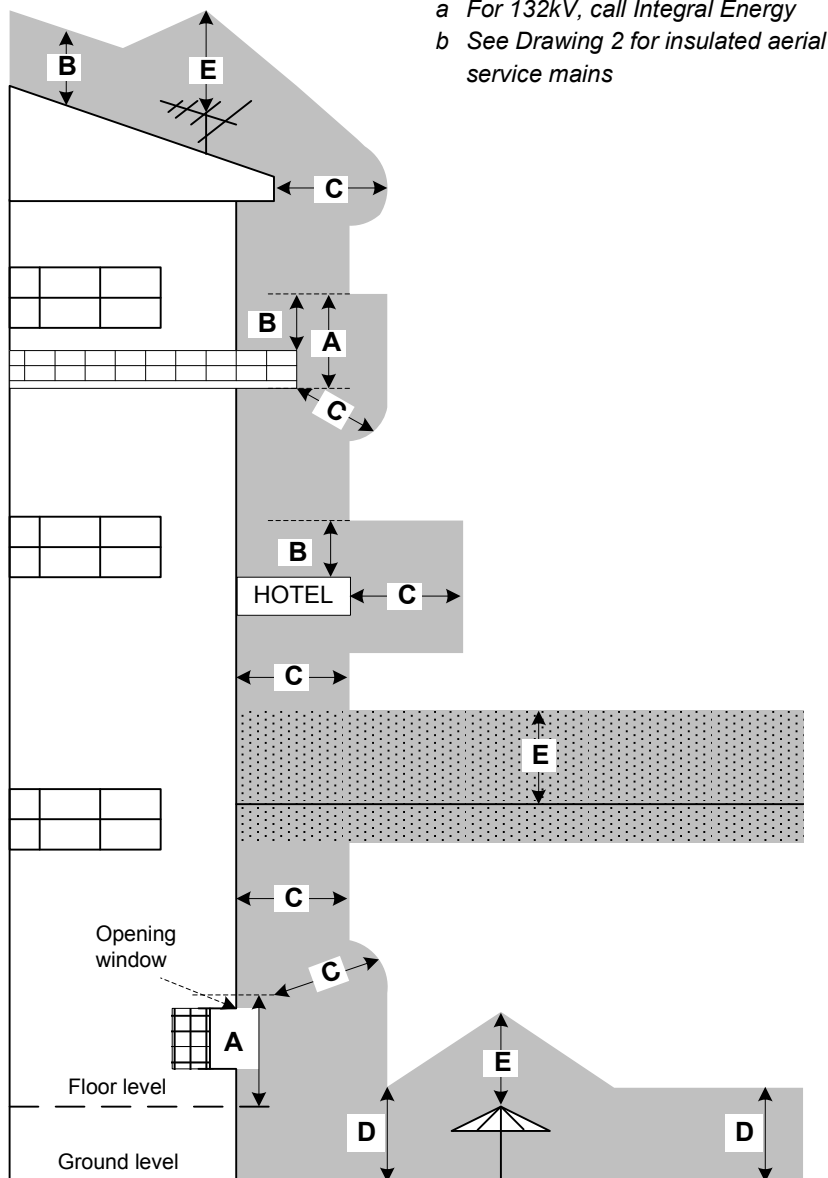

**The above drawing specifies the minimum safety clearances for working or living near electrical power lines.**